

[manuals.plus](#) /

- › [Amplicomms](#) /
- › [Amplicomms BigTel 40 Plus Wired Telephone User Manual](#)

Amplicomms BigTel 40 Plus

Amplicomms BigTel 40 Plus Wired Telephone User Manual

Model: BigTel 40 Plus (ATL1424089)

INTRODUCTION

The Amplicomms BigTel 40 Plus is a user-friendly wired telephone designed for enhanced accessibility. It features large buttons, six programmable direct dial keys with photo slots, an audio boost function, and extra loud ringtones, making it suitable for users with hearing or visual impairments. This manual provides essential information for setting up, operating, and maintaining your telephone.



Image: Front view of the Amplicomms BigTel 40 Plus wired telephone, showcasing its large numeric keypad and six prominent photo memory buttons.

PACKAGE CONTENTS

Please check the box for the following items:

- Amplicomms BigTel 40 Plus Telephone Unit

- Handset with coiled cord
- Telephone Line Cord (RJ11)
- User Manual



Image: The complete contents of the Amplicomms BigTel 40 Plus package, showing the main telephone unit, coiled handset cord, telephone line cord, and the instruction manual.

SETUP

1. **Unpacking:** Carefully remove all components from the packaging.

- Connect Handset:** Plug one end of the coiled cord into the handset and the other end into the designated port on the side of the telephone base unit.
- Connect to Telephone Line:** Connect one end of the telephone line cord (RJ11) to the port labeled 'LINE' on the back or side of the telephone base unit. Connect the other end to your telephone wall socket or your router/modem's telephone port.
- Power Supply:** The Amplicomms BigTel 40 Plus does not require external batteries or a separate power adapter. It draws power directly from the telephone line.

Your telephone is now ready for basic operation.

OPERATING INSTRUCTIONS

Making a Call

- Using Photo Direct Dial Buttons:**
 - Lift the handset.
 - Press one of the six photo buttons (M1-M6) corresponding to the desired contact. The phone will automatically dial the pre-programmed number.
- Using the Keypad:**
 - Lift the handset.
 - Dial the desired telephone number using the large numeric keypad.
 - Wait for the call to connect.

Receiving a Call

When the phone rings, simply lift the handset to answer the call.

Adjusting Volume Levels



Image: Side view of the telephone, highlighting the various slider controls for adjusting handset volume, ringtone volume, and tone.

- Handset Volume:** The handset volume can be adjusted across seven levels using the slider control located on the side of the phone.
- Ringtone Volume:** The ringtone volume can be set to three levels (low, medium, high) using a dedicated slider on the side of the phone. It can reach up to 90dB.
- Audio Boost (+40dB):** For significantly amplified sound during a call, activate the Audio Boost feature. This

provides up to +40dB amplification. Refer to the specific button or switch for this function, usually marked with a hearing aid symbol or "Boost".

- **Microphone Volume:** A slider control allows adjustment of the microphone volume, ensuring your voice is transmitted clearly to the other party.

Programming Photo Direct Dial Buttons

The six photo buttons (M1-M6) can be programmed with frequently called numbers. You can insert small photos of your contacts into these slots for easy visual identification.

1. Lift the handset.
2. Press the 'SET' or 'PROG' button (refer to your phone's specific button layout, often a small recessed button).
3. Dial the telephone number you wish to store.
4. Press the desired photo button (M1-M6) where you want to save the number.
5. Replace the handset to save the setting.
6. To insert photos, carefully remove the clear plastic cover from the photo button, place the trimmed photo, and replace the cover.



Image: A detailed view highlighting the key features of the BigTel 40 Plus, including the indicators for +40dB audio boost, 90dB ringtone volume, and the six photo memory buttons.

Maintenance

To ensure the longevity and proper functioning of your Amplicomms BigTel 40 Plus telephone, follow these maintenance guidelines:

- **Cleaning:** Use a soft, damp cloth to clean the telephone's surface. Avoid abrasive cleaners, solvents, or strong chemicals, as these can damage the plastic.

- **Placement:** Place the telephone on a stable, flat surface away from direct sunlight, heat sources, and excessive moisture.
- **Cables:** Ensure all cables are securely connected and not kinked or damaged.
- **Storage:** If storing the telephone for an extended period, disconnect it from the telephone line and store it in a dry, dust-free environment.

TROUBLESHOOTING

If you encounter issues with your telephone, try the following steps:

- **No Dial Tone:**
 - Check that the telephone line cord is securely connected to both the phone and the wall socket/router.
 - Test with another working telephone if available, or test your telephone in another known working telephone socket.
- **Cannot Hear Caller / Caller Cannot Hear You:**
 - Adjust the handset volume slider on the side of the phone.
 - Ensure the Audio Boost function is activated if needed.
 - Check the microphone volume slider.
- **Ringtone Not Loud Enough:**
 - Adjust the ringtone volume slider on the side of the phone to a higher setting.
- **Photo Buttons Not Dialing:**
 - Ensure the numbers have been correctly programmed into the photo buttons. Repeat the programming steps if necessary.

If the problem persists after attempting these solutions, please contact customer support.

SPECIFICATIONS

Brand	Amplicomms
Model Number	ATL1424089
Type	Wired Telephone
Color	Black
Special Features	Audio amplification up to +40dB, Hearing aid compatible, Extra loud ringtone (up to 90dB), Photo direct dial buttons
Compatible Devices	PSTN Telephone Networks
Power Source	Corded Electric (Line Powered)
Material	Plastic

Item Dimensions (L x W x H)	13.3 x 0.8 x 4.2 centimeters
Item Weight	683 Grams

WARRANTY AND SUPPORT

The Amplicomms BigTel 40 Plus typically comes with a manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions, including the warranty period and coverage details. Spare parts availability is generally for 1 year from the date of purchase.

For technical support, troubleshooting assistance beyond this manual, or warranty claims, please contact Amplicomms customer service. Contact information can usually be found on the product packaging or the official Amplicomms website.

© 2023 Amplicomms. All rights reserved.

Related Documents - BigTel 40 Plus

 Amplicomms BigTel 48 Plus User Guide	<p>Comprehensive user guide for the Amplicomms BigTel 48 Plus amplified telephone, covering setup, features, and troubleshooting.</p>
 Manuel d'utilisation Amplicomms BigTel 1580/1582/1583	<p>Guide complet pour installer, configurer et utiliser les téléphones sans fil Amplicomms BigTel 1580, 1582 et 1583, incluant les fonctions de répondeur, blocage d'appels et spécifications techniques.</p>
 Amplicomms BigTel 1500/1502/1503 User Guide: Setup, Features, and Operation	<p>Comprehensive user guide for the Amplicomms BigTel 1500, BigTel 1502, and BigTel 1503 amplified cordless telephones. This guide covers package contents, handset and base station setup, operation, phonebook management, call blocking features, technical specifications, and troubleshooting.</p>

	<p>Amplicomms DB 110plus: Bedienungsanleitung und technische Daten Umfassende Bedienungsanleitung für die Amplicomms DB 110plus Hörgeräte-Trockenbox. Enthält Informationen zu Bedienung, Wartung, Sicherheit und technischen Spezifikationen.</p>
	<p>Amplicomms TV3500 Wireless Headphone System User Manual Comprehensive user manual for the Amplicomms TV3500 wireless headphone system, covering setup, operation, troubleshooting, technical specifications, safety information, and warranty details.</p>
	<p>Amplicomms M50 Manual de Instrucciones y Guía de Inicio Rápido Manual de instrucciones y guía de inicio rápido para el smartphone Amplicomms M50, incluyendo configuración, uso de funciones básicas y avanzadas, y solución de problemas.</p>