

Nokia E3110

Nokia Essential E3103 Wireless Earbuds User Manual

Model: E3103

INTRODUCTION

Thank you for purchasing the Nokia Essential E3103 Wireless Earbuds. This manual provides detailed instructions on how to set up, operate, and maintain your earbuds to ensure optimal performance and longevity. Please read this manual carefully before using the product.

PACKAGE CONTENTS

- Nokia Essential E3103 Wireless Earbuds (Left and Right)
- Wireless Charging Case
- USB Type-C Charging Cable
- User Manual (this document)

PRODUCT OVERVIEW

The Nokia Essential E3103 earbuds feature a compact design with touch controls and come with a portable charging case.



Figure 1: Nokia Essential E3103 Wireless Earbuds (White) in Charging Case. The image displays the two white earbuds resting in their open charging case, with the Nokia logo visible on the case.



Figure 2: Nokia Essential E3103 Wireless Earbuds (Black) in Charging Case. This image shows the black version of the earbuds, also resting in their open charging case, with the Nokia logo on the case.

Components:

- **Earbuds:** Left and Right, each with a built-in microphone and touch sensor.
- **Charging Case:** Houses and charges the earbuds, with a Type-C charging port.
- **LED Indicator:** On the charging case (and possibly earbuds) to show charging status and connection.

SETUP

1. Initial Charging

1. Before first use, fully charge the charging case and earbuds.
2. Connect the USB Type-C charging cable to the charging port on the case and to a power source.
3. The charging case has a battery capacity of 320 mAh and takes approximately 1.5 hours to fully charge.
4. Place the earbuds into the charging case. The earbuds have a 37 mAh battery each and take approximately 1.5 hours to fully charge.
5. An indicator light on the case will show the charging status.

2. Bluetooth Pairing

1. **First-time Pairing:**
 - Open the charging case. The earbuds will automatically power on and enter pairing mode.
 - On your device (smartphone, tablet, PC), enable Bluetooth.
 - Search for "Nokia E3103" in the list of available Bluetooth devices and select it to connect.
 - Once connected, you will hear a confirmation tone, and the earbuds will be ready for use.
2. **Automatic Reconnection:** After the initial pairing, the earbuds will automatically connect to the last paired device when taken out of the charging case, provided Bluetooth is enabled on the device.
3. **Single Earbud Use:** Either earbud can be used independently. Simply take one earbud out of the case, and it will connect.

OPERATING INSTRUCTIONS

Touch Controls

The Nokia E3103 earbuds feature intuitive touch controls on each earbud. Specific functions may vary slightly based on the number of taps or duration of touch.

- **Play/Pause Music:** Single tap on either earbud.
- **Next Track:** Double tap on the right earbud.
- **Previous Track:** Double tap on the left earbud.
- **Volume Up:** Triple tap on the right earbud.
- **Volume Down:** Triple tap on the left earbud.
- **Answer/End Call:** Single tap on either earbud.
- **Reject Call:** Press and hold either earbud for 2 seconds.
- **Activate Voice Assistant (Siri/Google Assistant):** Press and hold either earbud for 2 seconds (when not on a call).
- **Reset Earbuds:** Press and hold both earbuds for 5 seconds while they are outside the case and disconnected from any device.

Hands-free Calling with ENC Noise Reduction

Each earbud is equipped with a built-in microphone and Environmental Noise Cancellation (ENC) technology. This feature

reduces ambient noise during calls, ensuring your voice is transmitted clearly to the other party, even in noisy environments.

MAINTENANCE

Cleaning

- Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth.
- Do not use abrasive cleaners, alcohol, or chemical solvents.
- Ensure charging contacts on both earbuds and case are clean and free of debris for proper charging.

Storage

- When not in use, store the earbuds in their charging case to protect them and keep them charged.
- Store the product in a cool, dry place, away from extreme temperatures and direct sunlight.

Water Resistance (IPX4)

The Nokia E3103 earbuds are rated IPX4 water-resistant, meaning they are protected against splashing water from any direction. This makes them suitable for workouts and light rain. However, they are not designed for submersion in water or exposure to heavy rain. Do not use them while swimming or showering.

TROUBLESHOOTING

If you encounter issues with your Nokia E3103 earbuds, please refer to the following common solutions:

- **Earbuds not pairing:**
 - Ensure both earbuds are charged.
 - Turn off Bluetooth on your device and turn it back on.
 - Delete "Nokia E3103" from your device's Bluetooth list and attempt to re-pair.
 - Perform a factory reset (press and hold both earbuds for 5 seconds).
- **Only one earbud working:**
 - Place both earbuds back into the charging case, close the lid, wait a few seconds, then open the lid and take them out again.
 - Ensure both earbuds are charged.
 - Try re-pairing the earbuds to your device.
- **No sound or low volume:**
 - Check the volume level on both your device and the earbuds.
 - Ensure the earbuds are properly connected to your device.
 - Clean any debris from the earbud speaker mesh.
- **Charging issues:**
 - Ensure the charging cable is securely connected to both the case and the power source.
 - Verify that the charging contacts on the earbuds and inside the case are clean.
 - Try a different USB Type-C cable and power adapter.

SPECIFICATIONS

Model	E3103
Bluetooth Standard	Bluetooth 5.1

Bluetooth Profiles	HSP1.2, HFP1.7, AVRCP1.6, A2DP1.3
Wireless Connection Distance	Up to 10 meters (32.8 feet) (Actual distance may vary)
Frequency Response	20Hz - 20KHz
Driver Unit	13 mm
Earbud Battery Capacity	37 mAh (per earbud)
Charging Case Battery Capacity	320 mAh
Earbud Play Time	Approximately 7 hours
Total Play Time (with Charging Case)	Up to 25 hours
Earbud Charging Time	Approximately 1.5 hours
Case Charging Time	Approximately 1.5 hours
Charging Port	Type-C
Earbud Weight	Approximately 3.3 g (per ear)
Charging Case Weight	Approximately 31.4 g
Total Weight (with case)	Approximately 38 g
Water Resistance	IPX4
Control Method	Touch
Microphone	Built-in, with ENC Noise Reduction
Compatible Platforms	iOS & Android smartphones, tablets, PC

WARRANTY AND SUPPORT

Nokia products are designed for reliability and performance. For warranty information, technical support, or service inquiries, please refer to the warranty card included with your product or visit the official Nokia support website. Keep your proof of purchase for warranty claims.

For further assistance, you may contact Nokia customer support through their official channels.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09N6L2TBR>

More documents and user manuals: <https://manuals.plus/>