



[Manuals.plus](#) /

› [YAMAHA](#) /

› YAMAHA PSR-F52 Portable Keyboard User Manual

## YAMAHA PSR-F52

# YAMAHA PSR-F52 Portable Keyboard User Manual

Model: PSR-F52 (VDN0990)

Brand: YAMAHA

## INTRODUCTION

The Yamaha PSR-F52 is a portable keyboard designed for beginners and enthusiasts alike. It offers a wide array of voices and styles, making it suitable for various musical genres and learning experiences. This manual provides essential information for setting up, operating, and maintaining your instrument.



Image: Yamaha PSR-F52 Portable Keyboard, front view.

## SETUP GUIDE

### Unpacking and Initial Inspection

Carefully remove all components from the packaging. Ensure the following items are present:

- Digital Keyboard (1U)
- Owner's Manual (1U)
- Power Adaptor (1U)
- Music Rest (1U)
- User Registration Card (1U)

### Power Connection

Connect the supplied power adaptor to the DC IN jack on the keyboard and then to a standard electrical outlet. The

keyboard can also be powered by 6 AA batteries for portability (not included).

## Attaching the Music Rest

Insert the music rest into the designated slots on the top panel of the keyboard. This provides a stable support for sheet music or a tablet.

# Panel Layout



Image: Close-up view of the Yamaha PSR-F52 control panel and keys.

## OPERATING INSTRUCTIONS

### Basic Operation

To power on the keyboard, press the Power button. Adjust the Master Volume using the dedicated controls. The PSR-F52 features 61 keys, providing a standard range for musical expression.

### Voices and Styles

The keyboard includes 136 Voices (including 41 World Voices) and 8 Drum Kits (including 5 World Drum Kits), allowing for a diverse range of instrument sounds. It also features 158 auto accompaniment Styles (including 75 World Styles) to provide rhythmic and harmonic backing.



**144**  
High-quality  
essential Voices

**158**  
Styles for the music  
of your country

Image: Visual representation of the 144 high-quality essential Voices and 158 Styles available on the keyboard.

### Smart Chord and Sound Boost

Utilize the Smart Chord function to easily play chords with a single finger, simplifying accompaniment. The Sound Boost feature enhances the overall volume and presence of the sound.

### Internal Songs and Learning Aids

The PSR-F52 comes with 69 onboard Songs. A free digital Song Book is available from the Yamaha website to assist with learning and practice.

### Additional Functions

- **Duo Mode:** Splits the keyboard into two identical halves, allowing two people to play simultaneously in the same octave range.
- **Transpose:** Changes the pitch of the entire keyboard.

- **Metronome:** Provides a steady beat for practice.
- **Panel Sustain:** Adds sustain to notes played.

Your browser does not support the video tag.

Video: Official product video demonstrating the features and sounds of the Yamaha PSR-F52 Portable Keyboard.

---

## SPECIFICATIONS

<b>Brand</b>	YAMAHA
<b>Model Name</b>	PSR-F52 //IN
<b>Item Model Number</b>	VDN0990
<b>Number of Keys</b>	61
<b>Dimensions (Product)</b>	92W x 26.6D x 7.3H Centimeters
<b>Weight (Item)</b>	2.8 kg (2800 Grams)
<b>Power Source</b>	Corded Electric
<b>Connectivity Technology</b>	USB
<b>Headphones Jack</b>	3.5mm Jack
<b>Special Feature</b>	Sound boost
<b>Country of Origin</b>	Japan

# Weight and Dimensions



Image: Detailed diagram showing the dimensions and weight of the Yamaha PSR-F52 keyboard.

## MAINTENANCE

To ensure the longevity and optimal performance of your Yamaha PSR-F52, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the keyboard. For stubborn dirt, slightly dampen the cloth with water and a mild, neutral detergent, then wipe dry immediately. Avoid using abrasive cleaners, solvents, or alcohol, as these can damage the finish.
- **Storage:** Store the keyboard in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. If storing for an extended period, remove the batteries to prevent leakage.
- **Handling:** Avoid dropping the keyboard or subjecting it to strong impacts. Do not place heavy objects on top of the keyboard.
- **Dust Protection:** When not in use, cover the keyboard with a dust cover to prevent dust accumulation on the keys and internal components.

---

## TROUBLESHOOTING

If you encounter issues with your Yamaha PSR-F52, refer to the following common troubleshooting steps:

- **No Power:**

- Ensure the power adaptor is securely connected to both the keyboard and the electrical outlet.
- If using batteries, check if they are correctly inserted and not depleted. Replace with fresh batteries if necessary.
- Verify the power outlet is functioning by plugging in another device.

- **No Sound:**

- Check the Master Volume level and ensure it is not set to minimum.
- If headphones are connected, disconnect them to check sound from the speakers.
- Ensure a Voice is selected and not set to a silent patch.

- **Keys Not Responding:**

- Restart the keyboard by turning it off and on again.
- Ensure no foreign objects are lodged between the keys.

- **Distorted Sound:**

- Reduce the Master Volume.
- Ensure the power adaptor is providing stable power.

For issues not covered here, please consult the full Owner's Manual or contact Yamaha customer support.

---

## WARRANTY AND SUPPORT

Your Yamaha PSR-F52 Portable Keyboard is covered by a manufacturer's warranty. Please refer to the User Registration Card included in the box for details on warranty registration and terms.

### Manufacturer Contact Information:

Yamaha Corporation  
Yamaha Music India Private Limited (Factory)  
Plot Nos. 27 - 32, One Hub Chennai, Kunnappattu Village & Panchayat,  
Manampathy Post, Chengalpattu District- 603105, Tamil Nadu, India.  
Phone: +91 44 27410300

For further assistance, visit the official Yamaha website or contact their customer support directly.