

[Manuals.plus](#) /

› [The Laundry Alternative](#) /

› The Laundry Alternative PuriFI Portable Washing Machine User Manual

The Laundry Alternative PuriFI

The Laundry Alternative PuriFI Portable Washing Machine User Manual

INTRODUCTION

Welcome to the user manual for your new The Laundry Alternative PuriFI Portable Washing Machine. This appliance is designed for efficient and convenient laundry care in compact living spaces such as apartments, RVs, and dormitories. The PuriFI offers advanced features including an internal heater for intensive cleaning and specialized cycles for various fabric types, including cloth diapers.



Image: The PuriFI Portable Washing Machine, a compact white unit with a top-loading design, ideal for small living spaces.

SETUP

1. Unpacking and Placement

Carefully remove the washing machine from its packaging. Ensure all packing materials are removed before use. Place the unit on a stable, level surface. The compact design allows for placement in bathrooms, kitchens, or utility areas where water access and drainage are available. The PuriFI is designed to be easily moved, weighing approximately 42 pounds. It is a freestanding unit.

2. Water Connection

The PuriFI washing machine can be easily connected to a standard kitchen or bathroom faucet. Use the provided fill hose to connect the machine's water inlet to your faucet. Ensure a secure connection to prevent leaks.



Image: A close-up of a hand connecting the fill hose to a standard kitchen or bathroom faucet, illustrating the easy water hookup.

3. Drain Setup

Attach the provided drain hose to the machine's drain outlet. Position the drain hose to direct wastewater into a sink, bathtub, or other suitable drainage area. Ensure the hose is securely placed to prevent accidental dislodgement during operation.

4. Power Connection

Plug the power cord into a standard 120 Volts (AC) electrical outlet. The machine uses 250 watts during normal operation and up to 1500 watts when the internal heating element is active.

OPERATING INSTRUCTIONS

1. Loading Laundry

Open the top-load access. Load clothes into the stainless steel drum. The PuriFI has a wash capacity of 7.0 pounds. Avoid overloading to ensure optimal cleaning performance. For cloth diapers, the PuriFI is uniquely designed to wash them effectively without pre-treatment, thanks to its intensive hot water technology.



Image: The PuriFI washing machine highlighting key features: Diaper Magic Cycle, Built-In Heater, and Superior Rinse, with a graphic of a clean diaper.

2. Adding Detergent

Add the appropriate amount of laundry detergent directly into the wash drum with your clothes. For best results, follow detergent manufacturer guidelines.

3. Selecting a Wash Cycle

The PuriFI offers 10 standard cycles to suit various laundry needs. Use the touch control console to select your desired program:

- **Normal:** For everyday laundry.
- **Heavy Duty:** For heavily soiled items.
- **Quick:** For lightly soiled items or when time is limited.
- **120°F:** A normal cycle with heated water.
- **Diaper Magic:** Specialized cycle for cloth diapers.
- **Intensive Hot:** Utilizes the internal heater to reach up to 158°F for deep cleaning.

- **Gentle/Wool:** For delicate fabrics.
- **Rinse & Spin:** For rinsing and spinning already washed items.
- **Spin Only:** To remove excess water from items.
- **Self Clean:** For maintaining the cleanliness of the machine's drum.



Image: A close-up of the PuriFI's touch control panel, displaying the various wash cycle options and settings.

4. Starting the Wash Cycle

After selecting the cycle, press the START/PAUSE button to begin. The machine operates quietly at 34 decibels and features an 800 RPM spin cycle for efficient water removal.

5. Child Lock Feature

The PuriFI is equipped with a Child Lock feature for added safety. Refer to the control console for instructions on activating and deactivating this function.

6. Official Product Video

Your browser does not support the video tag.

Video: An official product video demonstrating the PuriFI Diaper Washer/Portable Washing Machine in operation, showcasing its features and ease of use.

MAINTENANCE

1. Cleaning the Lint Filter

Regularly check and clean the lint filter to maintain optimal performance and prevent lint buildup. The lint filter is typically located inside the wash drum or near the top rim. Remove any accumulated lint after each few washes.

2. Tub Cleaning

Utilize the "Self Clean" cycle periodically to clean the stainless steel drum and impeller, ensuring hygiene and longevity of the appliance.

3. Exterior Cleaning

Wipe the exterior of the machine with a soft, damp cloth. Avoid abrasive cleaners that could damage the finish.

4. Draining and Storage

After each use, ensure all water is drained from the machine. If storing for an extended period, disconnect water hoses and power cord, and allow the interior to air dry completely to prevent mold or mildew.

TROUBLESHOOTING

Common Issues and Solutions

- **Machine not starting:** Ensure the power cord is securely plugged in and the selected cycle has been initiated. Check if the Child Lock is active.
- **Water not filling:** Verify that the fill hose is properly connected to the faucet and the water supply is turned on.
- **Water not draining:** Check if the drain hose is properly positioned and not kinked or blocked. Ensure the machine is set to a drain cycle or the "Drain" option is selected if available.
- **Excessive noise or vibration:** Ensure the machine is placed on a level surface. Overloading or uneven distribution of laundry can also cause excessive noise; redistribute the load if necessary.

For persistent issues, refer to the detailed troubleshooting section in the full product manual or contact customer support.

SPECIFICATIONS

Technical Details

Feature	Specification
Brand	The Laundry Alternative
Model	PuriFI
Item Weight	42 pounds
Product Dimensions	16.5 x 15 x 28.5 inches
Capacity	7 Pounds
Max Spin Speed	850 RPM
Noise Level	34 Decibels
Installation Type	Freestanding
Control Console	Touch
Standard Cycles	10
Access Location	Top Load
Voltage	120 Volts (AC)
Power Consumption (Wash)	250 watts

Power Consumption (Heater On)	1500 watts
Material Type	Metal, Plastic (Stainless Steel Drum)
Included Components	Drain Hose, Fill Hose, Power Cord



Image: The PuriFI Portable Washing Machine with its dimensions (16.5" x 15" x 28.5"), weight (42 lbs), 110V outlet requirement, 7.0 lbs capacity, and quiet operation highlighted.

WARRANTY AND SUPPORT

Warranty Information

The Laundry Alternative offers a comprehensive three-year warranty on all PuriFI washing machine models. This warranty covers any issues that may arise with your machine within the specified period. For warranty claims or technical assistance, please contact our dedicated customer service team.

Customer Support

For further assistance, questions, or support, please visit the official The Laundry Alternative website or contact their customer service directly. Contact information can typically be found on the product packaging or the brand's official website.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question