

Energizer X1500

Energizer LED Lantern X1500 Instruction Manual

Model: X1500

INTRODUCTION

Thank you for choosing the Energizer LED Lantern X1500. This manual provides essential information for the safe and effective use of your new lantern. Designed for versatility and durability, this lantern offers bright, reliable illumination for various outdoor activities, emergencies, and general use. Please read these instructions carefully before operating the device.

PACKAGE CONTENTS

Ensure all items are present in the package:

- Two (2) Energizer LED Lanterns X1500

KEY FEATURES

- **High Brightness:** Delivers up to 1500 lumens of light.
- **Long Runtime:** Up to 70 hours on low mode.
- **Multiple Light Modes:** Cool White, Warm White, High, Low, and Emergency Strobe.
- **Dimming Feature:** Adjustable brightness for various needs.
- **360-Degree Illumination:** Removable cap allows for wide area lighting.
- **Durable Design:** Shatterproof lens and IPX4 water-resistant construction.
- **Versatile Hanging:** Integrated hook for hands-free use.



Image: The Energizer LED Lantern X1500 illuminates a tent with 1500 lumens, providing bright light for various activities.

SPECIFICATIONS

Model Name	Emergency Camping Lantern (X1500)
Light Output Maximum	1500 Lumens

Power Source	Battery Powered (3 D batteries, not included)
Runtime (Low Mode)	Up to 70 hours
Water Resistance Level	IPX4 Water Resistant
Material	Plastic
Item Weight	0.93 Kilograms
Item Dimensions (LxWxH)	3.82 x 7.64 x 8.82 inches

SETUP: BATTERY INSTALLATION

The Energizer LED Lantern X1500 requires 3 D batteries (not included) for operation.

- 1. Locate the Battery Compartment:** Turn the lantern upside down. The battery compartment cover is located at the base.
- 2. Open the Compartment:** Twist the battery compartment cover counter-clockwise to unlock and remove it.
- 3. Insert Batteries:** Insert three (3) D-size batteries according to the polarity indicators (+/-) inside the compartment. Ensure correct orientation.
- 4. Close the Compartment:** Replace the battery compartment cover and twist it clockwise until it is securely locked.

Important: Always use fresh batteries of the same type and brand. Do not mix old and new batteries, or different types of batteries. Remove batteries if the lantern will not be used for an extended period to prevent leakage.

OPERATING INSTRUCTIONS

Power On/Off and Mode Selection

The lantern features a single power button for controlling power and cycling through light modes.

- To Turn On:** Press the power button once. The lantern will typically turn on in its last used mode or a default high mode.
- To Cycle Modes:** Press the power button repeatedly to cycle through the available light modes: Cool White (High), Cool White (Low), Warm White (High), Warm White (Low), Strobe.
- To Turn Off:** After cycling through all modes, pressing the button one more time will turn the lantern off. Alternatively, press and hold the power button for approximately 2 seconds to turn off the lantern from any mode.



Image: The lantern offers four distinct light modes, including Warm, Cool, High intensity, and an Emergency Strobe, for various lighting needs.

360-Degree Area Illumination

For broader area lighting, the lantern's cap can be removed.

- 1. Remove Cap:** Gently twist the top cap of the lantern counter-clockwise and lift it off.
- 2. Position:** Place the lantern on a flat surface or hang it using the integrated hook for widespread light distribution.
- 3. Replace Cap:** To revert to focused lighting, align the cap and twist clockwise until secure.

Image: The Energizer LED Lantern X1500 provides complete 360-degree illumination, ideal for lighting up a wide area.

Hanging Function

The integrated hook allows for convenient hands-free lighting.

- **Locate Hook:** The metal hook is located at the top of the lantern.
- **Hang:** Extend the hook and hang the lantern from a tent loop, branch, or any suitable fixture.

Image: The lantern can be hung upside down using its integrated hook, providing convenient hands-free lighting.

MAINTENANCE

- **Cleaning:** Wipe the lantern with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Store the lantern in a cool, dry place when not in use. Remove batteries if storing for extended periods to prevent corrosion.
- **Battery Replacement:** Replace all three D batteries simultaneously when the light output diminishes. Refer to the "Battery Installation" section for instructions.

Image: The lantern features a weatherproof and shatterproof design, making it suitable for rugged outdoor use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Lantern does not turn on.	Dead or incorrectly installed batteries.	Check battery polarity. Replace all three D batteries with fresh ones.
Light output is dim.	Low battery power.	Replace all three D batteries.
Green light on power button blinks continuously when off.	This is an intended design feature to help locate the lantern in the dark.	This feature cannot be disabled. To stop the blinking, remove the batteries from the lantern.

WARRANTY AND SUPPORT

Warranty information for the Energizer LED Lantern X1500 is not specified in the product details. For any warranty claims, technical support, or product inquiries, please contact Energizer customer service directly through their official website or the retailer where the product was purchased.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question