



[Manuals.plus](#) /

> [Atlantic](#) /

> ATLANTIC Artisan III 19-inch Carry-On Luggage User Manual

## Atlantic AL17469 009

# ATLANTIC Artisan III 19-inch Carry-On Luggage User Manual

Model: AL17469 009

## INTRODUCTION

---

This manual provides essential information for the proper use, care, and maintenance of your ATLANTIC Artisan III 19-inch Carry-On Luggage. Designed for convenience and durability, this lightweight, water-resistant suitcase features 8 spinner wheels, a retractable handle, and multiple organizational compartments to enhance your travel experience.

## PRODUCT FEATURES

---

- **Durable Construction:** Crafted from durable, water-resistant polyester fabric and aluminum tubes, designed to withstand travel rigors.
- **Effortless Mobility:** Equipped with eight smooth-rolling 360-degree spinner wheels for easy maneuverability in any direction.
- **Secure Storage:** Features lockable zipper puller heads for enhanced security of your belongings.
- **Comfortable Handling:** Includes a retractable push-button telescopic handle for comfortable navigation and top and bottom carry handles for easy lifting.
- **Optimized Organization:** Interior features include a recycled lining, adjustable tie-down straps to secure contents, and multiple pockets, including a mesh zippered pocket on the lid.
- **Reinforced Design:** Reinforced bottom structure adds stability and protects high-impact areas.
- **Airline Compatibility:** Meets most Canadian airline carry-on requirements.



## ARTISAN III Collection

Image: ATLANTIC Artisan III Carry-On Luggage showcasing its dimensions and overall design.



### WATER-RESISTANT POLYESTER CONSTRUCTION

Weather the unexpected.  
Durable polyester fabric  
repels moisture to help keep  
your items dry and secure.

### RECYCLED LINING

Made with care inside and out.  
The lining comes from recycled  
plastic bottles,  
a lighter choice for you  
and for the planet.



Image: Interior view of the luggage showing the mesh pocket and tie-down straps for organized packing.

## SETUP

1. **Unpacking:** Remove all packaging materials and protective coverings from the luggage.

2. **Handle Extension:** Press the push-button on the top of the handle and pull upwards to extend the telescopic handle. Release the button to lock it at your desired height.
3. **Locking Zippers:** The luggage features lockable zipper puller heads. To use a TSA-approved lock (not included), thread the lock through the designated holes on the zipper pullers.

## OPERATING INSTRUCTIONS

---

### Packing Your Luggage

- **Main Compartment:** Place larger items in the main compartment. Utilize the adjustable tie-down straps to secure your clothing and prevent shifting during transit.
- **Lid Pockets:** The mesh zippered pocket on the lid is ideal for smaller items, accessories, or items you need quick access to.
- **Front Pockets:** Use the exterior front pockets for documents, travel essentials, or items you need to access frequently without opening the main compartment.

### Maneuvering Your Luggage

- **Spinner Wheels:** For optimal maneuverability, push or pull the luggage on all four wheels. This allows for 360-degree rotation and reduces strain on your arm.
- **Telescopic Handle:** Adjust the telescopic handle to a comfortable height for pushing or pulling.
- **Carry Handles:** Use the top and bottom carry handles when lifting the luggage into overhead bins, onto luggage racks, or into vehicles.

## MAINTENANCE

---

- **Cleaning Exterior:** Wipe the polyester fabric with a damp cloth and mild soap. Avoid harsh chemicals.
- **Cleaning Interior:** The interior lining can be spot cleaned with a damp cloth. Ensure the interior is completely dry before closing the luggage for storage.
- **Wheel Care:** Periodically check the spinner wheels for debris. Clean any accumulated dirt or hair to ensure smooth rolling.
- **Zipper Care:** Keep zippers free of debris. If zippers become stiff, apply a small amount of zipper lubricant or wax.
- **Storage:** Store your luggage in a cool, dry place away from direct sunlight when not in use.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Wheels not rolling smoothly	Debris caught in wheels; worn wheels.	Clean wheels of any debris. If wheels are worn, contact customer support for replacement options.
Telescopic handle sticks or won't extend/retract	Button mechanism obstructed; bent handle tubes.	Ensure the push-button is fully depressed. Check for obstructions. Avoid excessive force. If bent, contact customer support.
Zippers are difficult to open/close	Fabric caught in zipper; zipper needs lubrication.	Carefully free any fabric caught. Apply zipper lubricant or wax.

Problem	Possible Cause	Solution
Luggage feels unstable when standing	Uneven weight distribution; damaged bottom structure.	Distribute contents evenly. If the bottom structure is damaged, contact customer support.

## SPECIFICATIONS

---

- **Model Number:** AL17469 009
- **Dimensions (including wheels and handle):** 21.5" x 15" x 8.75" / 54.5 x 38 x 22 cm
- **Case Dimensions:** 18.5" x 14.5" x 8.5" / 47 x 37 x 19 cm
- **Weight:** 6.1 lbs / 2.8 kg
- **Material:** Durable Polyester Fabric
- **Wheel Type:** 8 Spinner Wheels (360-degree)
- **Handle Type:** Retractable Push-Button Telescopic Handle, Top and Bottom Carry Handles
- **Lock Type:** Lockable Zipper Puller Heads (lock not included)
- **Water Resistance:** Water Resistant
- **Lining:** Recycled Lining
- **Color:** Black
- **Country of Origin:** China

## WARRANTY & SUPPORT

---

Your ATLANTIC Artisan III Carry-On Luggage is backed by a **10-year limited warranty** against defects in materials and workmanship. For warranty claims, product support, or inquiries, please contact Atlantic customer service through their official website or the retailer where the product was purchased.

For more information, visit the [Atlantic Store](#).