

Bingo K20213

Bingo Keeppley Pokemon Pikachu Mini Food Cart K20213 Building Set Instruction Manual

Model: K20213 | Brand: Bingo

INTRODUCTION

This instruction manual provides detailed guidance for assembling and enjoying your Bingo Keeppley Pokemon Pikachu Mini Food Cart K20213 building set. Please read all instructions carefully before beginning assembly to ensure a smooth and correct build. This set is designed for enthusiasts of building blocks and Pokemon characters.

IMPORTANT SAFETY INFORMATION

Warning: Not for children less than 3 years old. This product contains small parts which may pose a choking hazard.

Always supervise young children during play. Keep packaging materials away from children to prevent suffocation. Ensure all parts are securely connected during assembly and play to avoid detachment and potential hazards.

PACKAGE CONTENTS

Before you begin, please verify that all components are present. The package should contain:

- Building block pieces (various shapes and colors)
- Instruction booklet (this manual)
- Sticker sheet (if applicable, though product description mentions printed graphics)

Refer to the image below for an illustration of the product packaging.



Figure 1: Product Packaging. The box displays the assembled Pikachu Mini Food Cart, the Keeppley brand logo, and the

SETUP AND ASSEMBLY INSTRUCTIONS

Follow these steps carefully to assemble your Pikachu Mini Food Cart. It is recommended to sort your building blocks by color and shape before starting.

1. **Preparation:** Unpack all components and lay them out on a clean, flat surface. Separate the pieces into logical groups (e.g., base pieces, wall pieces, roof pieces, wheels, decorative elements).
2. **Base Construction:** Begin by assembling the base of the food cart. Connect the larger flat pieces to form the chassis. Ensure all connections are firm.
3. **Side Walls and Interior:** Attach the side wall pieces to the base. Construct any interior elements, such as counters or display shelves, as indicated in the detailed steps of the physical instruction booklet.
4. **Roof and Awning:** Assemble the roof section and attach it to the top of the walls. Integrate the red and white striped awning pieces.
5. **Wheels and Axles:** Attach the axles to the underside of the cart and then secure the yellow wheels. Ensure they can rotate freely.
6. **Decorative Elements:** Add the Pikachu-themed decorative elements, such as the Pikachu head on the front, the Poké Ball logos on the sides, and the star-shaped ornaments on the roof.
7. **Final Check:** Review the assembled model against the images provided in this manual and the physical instruction booklet to ensure all parts are correctly placed and securely attached.



Figure 2: Front view of the assembled Pikachu Mini Food Cart, showing the main structure and wheels.



Figure 3: Side view of the assembled Pikachu Mini Food Cart, highlighting the awning and Poké Ball details.



Figure 4: Back view of the assembled Pikachu Mini Food Cart, showing the rear details and 'Pokemon' branding.

OPERATING INSTRUCTIONS

The Bingo Keeppley Pokémon Pikachu Mini Food Cart is a static display model with interactive elements:

- **Movable Wheels:** The cart features functional wheels, allowing it to be rolled across smooth surfaces. Gently push the cart to move it.
- **Movable Parts:** Certain parts of the model, such as the serving windows or roof elements, may be designed to open or adjust. Refer to the specific design of your model for these interactive features.

This model is intended for display and light play. Avoid applying excessive force to prevent damage to the building blocks.



Figure 5: Angled front view of the assembled cart, showcasing its overall design and movable wheels.

MAINTENANCE

- **Cleaning:** To clean the model, gently wipe it with a dry, soft cloth. For stubborn dust, a slightly damp cloth can be used, followed by immediate drying. Avoid harsh chemicals or abrasive cleaners.
- **Storage:** Store the assembled model or unbuilt pieces in a cool, dry place away from direct sunlight to prevent discoloration or warping of the plastic.
- **Disassembly:** If disassembling the model, do so carefully to avoid damaging the connection points of the blocks.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Missing pieces	Packaging error or pieces misplaced during unpacking.	Carefully check all packaging materials. If pieces are genuinely missing, contact customer support with proof of purchase and the specific missing part numbers (if available in the physical manual).

Problem	Possible Cause	Solution
Parts do not fit together	Incorrect orientation or incompatible pieces.	Double-check the instruction steps and piece orientation. Ensure you are using the correct pieces for that step. Apply gentle, even pressure.
Assembled model is unstable	Pieces not fully connected or incorrect assembly step.	Review previous assembly steps to ensure all connections are secure and correct. Press pieces firmly together until they click or feel stable.

SPECIFICATIONS

Feature	Detail
Model Number	K20213 (FG-QM-K20213)
Brand	Bingo / Keeppley
Product Dimensions	4 x 15 x 15 cm
Item Weight	255 g
Material	Plastic
Color	Multicolor (primarily yellow, brown, red, white)
Recommended Age	6 years and up
Special Features	Movable wheels, printed graphics (no stickers to prevent crease and fading)
Assembly Required	Yes

WARRANTY AND CUSTOMER SUPPORT

For information regarding warranty coverage, missing parts, or technical assistance, please refer to the contact information provided on the product packaging or the official Bingo/Keeppley website. Keep your proof of purchase for any warranty claims.

For general inquiries or further assistance, please contact your retailer or the manufacturer's customer service department.