Tchibo c55ec23c-4dbe-4f6e-a460-9677577dd0a9

Tchibo Cafissimo Pure Coffee Machine User Manual

Model: c55ec23c-4dbe-4f6e-a460-9677577dd0a9 | Brand: Tchibo

1. INTRODUCTION AND OVERVIEW

The Tchibo Cafissimo Pure Coffee Machine is designed to provide a convenient and high-quality coffee experience at the touch of a button. This capsule machine supports the preparation of Espresso, Caffè Crema, and filter coffee, utilizing a patented three-pressure brewing system to ensure optimal aroma fullness for each beverage type. Its compact and portable design makes it suitable for various settings, including home, travel, camping, and office use.

Key features include:

- Patented Three-Pressure Brewing System: Optimizes brewing for Espresso, Caffè Crema, and filter coffee.
- Ease of Use: Simple one-button operation with freely programmable drink quantity.
- Compact and Portable: Slim design for easy transport, ideal for various environments.
- Sustainability: Uses certified coffee from 100% sustainable cultivation and recyclable capsules.
- Adjustable Components: Features an adjustable coffee spout and a removable cup table for different cup sizes.



2. SAFETY INSTRUCTIONS

Please read all safety instructions carefully before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- · Always connect the appliance to a grounded power outlet.
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- · Keep the appliance out of reach of children.
- Do not operate the appliance if the power cord or plug is damaged.
- · Exercise caution when handling hot surfaces and hot liquids.
- Unplug the appliance before cleaning and when not in use for extended periods.
- Only use the appliance for its intended purpose of brewing coffee and tea with Cafissimo capsules.

3. PACKAGE CONTENTS

Upon opening the package, please ensure all components are present and undamaged:

- 1 x Tchibo Cafissimo Pure Capsule Machine (Arctic Green)
- 30 x Tchibo Cafissimo Coffee Capsules (10 x Coffee Mild, 10 x Caffè Crema Full Bodied, 10 x Espresso Strong)
- 1 x User Manual (this document)

4. PRODUCT OVERVIEW

Familiarize yourself with the main components of your Cafissimo Pure machine:



Image: A close-up front view of the Tchibo Cafissimo Pure coffee machine, showing the coffee spout, cup stand, and control buttons, with a glass cup filled with coffee.

- 1. Water Tank: Located at the back, with a 1-liter capacity.
- 2. Capsule Compartment: Where the coffee capsule is inserted.
- 3. Brewing Lever: Used to open and close the capsule compartment.
- 4. Coffee Spout: Where the brewed coffee dispenses.
- 5. Removable Cup Table/Drip Tray: Catches drips and can be removed for taller cups.
- 6. Control Buttons: For selecting beverage type (Espresso, Caffè Crema, Coffee) and power.
- 7. **Used Capsule Container:** Collects used capsules.



Image: A diagram illustrating the compact size of the Tchibo Cafissimo Pure coffee machine relative to an average person, highlighting its height of 27.2 cm.

5. SETUP

Follow these steps for the initial setup of your coffee machine:

- 1. **Unpack:** Carefully remove all packaging materials and the machine from the box.
- 2. **Placement:** Place the machine on a stable, flat, and heat-resistant surface, away from water sources and direct sunlight.
- 3. **Rinse Water Tank:** Remove the water tank, rinse it thoroughly with fresh water, and then fill it to the MAX mark with fresh, cold drinking water. Place it back securely.

4. First Rinse Cycle:

- Place an empty cup under the coffee spout.
- Plug the machine into a grounded power outlet.
- Press the power button to turn on the machine. The buttons will flash during heating (approx. 45 seconds).
- Once the buttons illuminate steadily, press any coffee button (e.g., Caffè Crema button) without inserting
 a capsule. This will run hot water through the system to clean it.
- Repeat this process 2-3 times to ensure the system is clean.
- 5. Your machine is now ready for use.

6. OPERATING INSTRUCTIONS

Brewing coffee with your Tchibo Cafissimo Pure is simple:

- 1. Fill Water Tank: Ensure the water tank is filled with fresh, cold water.
- 2. **Power On:** Press the power button to turn on the machine. Wait for the buttons to stop flashing, indicating the machine is heated and ready.

- 3. **Insert Capsule:** Lift the brewing lever, insert a Tchibo Cafissimo capsule into the capsule compartment, and close the lever firmly.
- 4. Place Cup: Place your desired cup on the cup table. If using a taller cup, remove the cup table/drip tray.
- 5. **Select Beverage:** Press the button corresponding to the desired beverage type (Espresso, Caffè Crema, or Coffee). The machine will automatically brew the coffee.
- 6. **Remove Capsule:** Once brewing is complete, lift the brewing lever to eject the used capsule into the integrated container.
- 7. Enjoy: Your fresh coffee is ready to enjoy.

Programmable Drink Quantity: You can customize the amount of coffee dispensed for each button. To do this, press and hold the desired beverage button until the desired amount of coffee is dispensed, then release the button. The machine will remember this setting for future brews.



Image: A graphic in German stating "PATENTIERTES BRÜHDRUCK SYSTEM FÜR 3 KAFFEESORTEN" (Patented Brewing Pressure System for 3 Coffee Types), emphasizing the machine's ability to brew different coffee varieties optimally.



Image: The Tchibo Cafissimo Pure coffee machine actively brewing coffee into a glass cup, positioned on a kitchen counter with various kitchen items in the background.

7. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and longevity of your machine.

Daily Cleaning:

- **Drip Tray and Used Capsule Container:** Empty and rinse the drip tray and the used capsule container daily. They can be washed with warm soapy water.
- Water Tank: Rinse the water tank daily and refill with fresh water.
- Exterior: Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners.

Descaling:

Descaling is crucial to remove mineral deposits and maintain brewing quality. The frequency depends on water hardness and usage. It is recommended to descale every 3-6 months.

- Use a descaling solution specifically designed for coffee machines. Follow the instructions on the descaling product.
- Typically, this involves filling the water tank with the descaling solution, placing a large container under the spout, and running the solution through the machine until the tank is empty.
- After descaling, rinse the water tank thoroughly and run several cycles with fresh water to flush out any remaining descaling solution.



Image: A graphic illustrating the sustainable aspects of Tchibo Cafissimo capsules, showing a "ZERTIFIZIERTER KAFFEE" (Certified Coffee) capsule and a "RECYCLEBARE KAPSEL" (Recyclable Capsule), emphasizing the brand's commitment to environmental responsibility.

8. TROUBLESHOOTING

If you encounter issues with your Cafissimo Pure machine, refer to the following common problems and solutions:

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Machine does not turn on.	No power supply; machine not plugged in.	Check power cord connection and wall outlet.
No coffee dispenses.	Water tank empty; capsule not inserted correctly; machine needs descaling.	Fill water tank; ensure capsule is properly seated and lever is closed; perform descaling.
Coffee is cold or not hot enough.	Machine not preheated; machine needs descaling.	Wait for buttons to stop flashing. If descaling, follow descaling instructions.
Water leaks from machine.	Water tank not seated correctly; drip tray full.	Ensure water tank is firmly in place; empty and reinsert drip tray.
Buttons are flashing continuously.	Machine is heating up or in descaling mode.	Wait for the buttons to become steady. If descaling, follow descaling instructions.

If the problem persists after attempting these solutions, please contact Tchibo customer support.

9. SPECIFICATIONS

Feature	Detail
Brand	Tchibo
Model Number	c55ec23c-4dbe-4f6e-a460-9677577dd0a9
Color	Arctic Green
Coffee Maker Type	Espresso Machine (Capsule)
Operation Mode	Fully Automatic
Water Tank Capacity	1 Liter
Special Features	Automatic shut-off after 9 minutes, Fast heating (45 seconds), Patented three-pressure brewing system
Filter Type	Reusable (for internal system, not for coffee)
Product Dimensions (L x W x H)	14.17 x 6.06 x 10.71 inches (approx. 36 x 15.4 x 27.2 cm)
Human Interface Input	Buttons
Manufacturer	Tchibo Gmbh

10. WARRANTY AND SUPPORT

Tchibo products are manufactured to high-quality standards and are subject to a warranty period in accordance with

local consumer protection laws. Please retain your proof of purchase for any warranty claims.

For technical support, troubleshooting assistance beyond this manual, or warranty inquiries, please contact Tchibo customer service through their official website or the contact information provided with your purchase. You can also visit the official Tchibo store on Amazon for more information and support resources.

Online Resources:

• Tchibo Official Website: www.tchibo.com

• Tchibo Store on Amazon: Visit Tchibo Store



Image: The official Tchibo brand logo, featuring stylized text in gold.

© 2024 Tchibo Gmbh. All rights reserved. Information in this manual is subject to change without notice.