

USARMT B09NCC6YF6

USARMT Gaming Media Remote Control User Manual

Model: B09NCC6YF6

INTRODUCTION

This manual provides instructions for the USARMT Gaming Media Remote Control, designed for use with Xbox Series X|S, Xbox One, and compatible media applications. This remote offers convenient control over your gaming console's media functions, including Blu-ray playback and streaming services.

The remote is pre-programmed and does not require additional setup or programming for basic functionality. Simply insert batteries to begin use.

FEATURES

- **Multipurpose Control:** Manages Xbox Series X|S, Xbox One, TV, Blu-ray, and streaming media applications.
- **Traditional Layout:** Features a familiar TV remote design for intuitive navigation.
- **Motion-Activated Backlighting:** Buttons illuminate automatically in low-light conditions for improved visibility.
- **Essential Controls:** Includes quick access to pause, skip, volume, and standard Xbox buttons (A, B, X, Y, D-pad).
- **Pre-programmed:** Ready for use upon battery insertion; no additional setup required.

SETUP

Battery Installation

The USARMT Gaming Media Remote Control requires batteries for operation. Batteries are not included with the remote.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide or gently pry open the cover.
3. Insert the required batteries (typically AAA, refer to the compartment for specific type and polarity) ensuring correct positive (+) and negative (-) alignment.

4. Replace the battery compartment cover until it clicks securely into place.

Once batteries are installed, the remote is ready for use with your compatible Xbox console.



Figure 1: Front view of the remote control, illustrating button layout.

OPERATING INSTRUCTIONS

The remote control is designed for intuitive operation. Point the remote towards your Xbox console or TV for optimal performance.

Basic Navigation and Media Control

- **Directional Pad (D-pad):** Use the up, down, left, and right arrows to navigate menus and selections. The central button acts as a confirmation or select button.
- **A, B, X, Y Buttons:** These correspond to the standard Xbox controller buttons for in-app and menu interactions.

- **Volume Controls (+/-):** Adjust the volume of your television or audio system.
- **Media Playback Buttons:** Includes Play, Pause, Fast Forward, Rewind, Skip Forward, and Skip Back for controlling video and music playback.
- **Power Button:** Located at the top, this button can power on/off your Xbox console or TV, depending on configuration.

Motion-Activated Backlighting

The remote features motion-activated backlighting. When the remote is moved or picked up in a dimly lit environment, the buttons will automatically illuminate, making them easier to see and use.



Figure 2: Angled view of the remote control, showing its profile.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Avoid using liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's responsiveness decreases or if the backlighting becomes dim. Always replace all batteries at the same time with new ones of the same type.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures. If storing for extended periods, remove the batteries to prevent leakage.

TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|---------------------------------|--|--|
| Remote is unresponsive. | Dead or incorrectly installed batteries. | Check battery polarity and replace with fresh batteries. |
| Remote not controlling Xbox/TV. | Obstruction between remote and console/TV; remote out of range; infrared sensor blocked. | Ensure a clear line of sight to the console/TV. Move closer to the device. Check if the console's IR sensor is obstructed. |

| Problem | Possible Cause | Solution |
|---------------------------|---|---|
| Backlighting not working. | Insufficient motion; bright ambient light; low batteries. | Move the remote to activate. Test in a darker environment. Replace batteries. |

SPECIFICATIONS

| Feature | Detail |
|-------------------------|---|
| Product Dimensions | 7 x 2 x 0.5 inches |
| Item Weight | 3 ounces |
| Manufacturer | USARMT |
| Brand | USARMT |
| Special Feature | Ergonomic, Motion-activated Backlighting |
| Color | Black |
| Compatible Devices | Xbox Series X S, Xbox One, Television, Blu-ray Players, Streaming Media Devices |
| Connectivity Technology | Infrared (IR) |



Figure 3: Top-down angled view of the remote control.

WARRANTY AND SUPPORT

Specific warranty information for the USARMT Gaming Media Remote Control is not included in this manual. For details regarding warranty coverage, technical support, or service inquiries, please refer to the documentation provided at the time of purchase or contact USARMT customer support directly.

You may also visit the official USARMT website for the most current support information.