

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [One For All](#) /
- › [One for All Slate R18200 Universal Remote Control User Manual](#)

One For All R18200

One for All Slate R18200 Universal Remote Control User Manual

Model: R18200 | Brand: One For All

INTRODUCTION

The One For All Slate R18200 Universal Remote Control is specifically designed for hospitality and medical applications. It provides simple yet effective control of entertainment systems in guest rooms, ensuring reliable performance and integrity. The Slate remote is fully cleanable, allowing it to be disinfected with common cleaning agents or wipes for the hospitality sector before each new guest stay, promoting hygiene and safety.



Image: A collection of One For All Slate R18200 universal remote controls, highlighting their availability in bulk for commercial use.

KEY FEATURES

- **Fully Cleanable Design:** Engineered to be entirely cleanable, suitable for hospitality and medical environments.
- **Disinfectant Resistant:** Withstands daily cleaning with common disinfectants and wipes.
- **Anti-Theft Battery Compartment:** Features a secure battery compartment that does not require tools for access, deterring theft.
- **Fully Backlit Keys:** All keys are backlit for easy visibility and operation in low-light conditions.
- **Commercial Use Only:** Designed and packaged specifically for commercial applications, available in convenient multi-packs (e.g., 20 remotes).



Image: A detailed view of the remote control's buttons, illuminated by backlighting, demonstrating the fully backlit key feature.

SETUP

1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Open the anti-theft battery cover. This compartment is designed to be secure but accessible without tools.
3. Insert two AAA alkaline batteries, ensuring correct polarity (+/-).
4. Close the battery cover securely until it clicks into place.





Image: The rear side of the remote control, illustrating the design of the anti-theft battery compartment.

2. Initial Programming (if required)

The Slate R18200 remote is pre-programmed for common hospitality TV systems. If your specific TV or entertainment system requires programming, refer to the detailed programming instructions provided with your bulk purchase or consult the One For All support website for specific codes and setup procedures. Typically, this

involves a simple code entry or auto-search function.

OPERATING INSTRUCTIONS

The Slate R18200 remote control features a simplified layout for intuitive use in hospitality settings.

- **Power Button (POWER):** Press to turn the TV or connected device on or off.
- **Volume Control (VOL +/-):** Adjusts the audio volume up or down.
- **Channel Control (CH +/-):** Changes the TV channel up or down.
- **Navigation Pad (ARROWS & OK/SELECT):** Use the arrow keys to navigate menus and the OK/SELECT button to confirm selections.
- **Menu (MENU):** Accesses the TV's main menu.
- **VOD (VOD):** Direct access to Video On Demand services (if supported by the TV system).
- **Guide (GUIDE):** Displays the electronic program guide.
- **Playback Controls (PLAY, PAUSE, STOP, REW, FF):** Controls media playback.
- **Numeric Keypad (0-9):** Directly enter channel numbers.
- **Backlit Keys:** The entire keypad illuminates when a button is pressed, making it easy to use in dimly lit rooms.





Image: A clear front view of the remote control, detailing the layout and function of each button.



Image: An individual operating the remote control in a hotel room, demonstrating typical usage.

MAINTENANCE

Cleaning the Remote Control

The Slate R18200 is designed for easy and thorough cleaning, crucial for hospitality environments.

1. Ensure the remote control is powered off (if applicable) or remove batteries before cleaning for safety.
2. Use a soft cloth dampened with common disinfectants or pre-moistened disinfectant wipes.
3. Wipe down all surfaces of the remote control, paying attention to the buttons and crevices.
4. Allow the remote to air dry completely before reinserting batteries or using.
5. *Do not submerge the remote control in liquid. Avoid harsh abrasive cleaners.*



Image: The remote control positioned in a hotel room setting, emphasizing its cleanable nature and readiness for guest use.

Battery Replacement

Replace batteries when the remote's performance degrades or the backlit keys no longer illuminate brightly. Follow the battery installation steps outlined in the "Setup" section.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly inserted batteries.	Check battery polarity. Replace batteries if necessary.
Remote not controlling the TV.	Remote not programmed correctly for the TV.	Refer to programming instructions or One For All support for correct setup. Ensure line of sight to the TV's IR receiver.
Buttons are sticky or unresponsive.	Dirt or residue under buttons.	Clean the remote thoroughly as per maintenance instructions.
Backlight not working.	Low battery power.	Replace batteries.

SPECIFICATIONS

Brand: One For All

Model Number: R18200

Color: Black

Connectivity Technology: Infrared (IR)

Special Features: Backlit Keys, Universal, Cleanable Design

Compatible Devices: Televisions (designed for hospitality TV systems)

Battery Composition: Alkaline

Power Source: Battery Powered (2x AAA, not included)

Maximum Range: Approximately 10 Meters (33 feet)

Item Weight: Approximately 3.43 Kilograms (for a pack of 20 remotes)

Manufacturer: Universal Electronics

Country of Origin: China

WARRANTY AND SUPPORT

Warranty information for the One For All Slate R18200 remote controls is typically provided at the point of purchase or with the bulk packaging. For detailed warranty terms, technical support, or programming assistance, please visit the official One For All website or contact your commercial distributor.

Please note that information regarding spare parts availability and guaranteed software updates is not publicly available for this product.

For further assistance, please visit: www.oneforall.com

© 2024 One For All. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.


Related Documents - R18200

	<p>One For All URC 6810 Universal Remote Setup Guide Learn & Code Programming</p> <p>Comprehensive setup guide for the One For All URC 6810 universal remote. Learn how to program your remote using learning or code methods, control multiple devices, and utilize advanced features.</p>
	<p>One For All OARC04G 4-Device Universal Remote Control User Guide</p> <p>Comprehensive user guide for the One For All OARC04G 4-Device Universal Remote Control. Learn how to install batteries, set up the remote using direct code or search methods, understand keypad functions, use extra features like macros and volume punch through, troubleshoot common issues, and find warranty information.</p>



[ONE FOR ALL URC1211 Essence TV Universal Remote Control User Manual](#)

User manual for the ONE FOR ALL URC1211 Essence TV Universal Remote Control. Learn how to set up, use, and program your remote for seamless control of your entertainment devices.

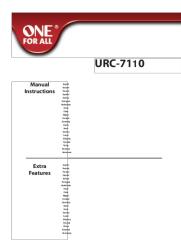


[ONE FOR ALL URC-7110 Universal Remote Control Manual](#)

User manual and setup guide for the ONE FOR ALL URC-7110 universal remote control. Learn how to use SimpleSet, Direct Code Set Up, and Search Method, plus explore features like Key Magic and Macros.



[ONE FOR ALL Sport Universal Remote User Guide & Code Book](#)

Comprehensive user guide and code book for the ONE FOR ALL Sport Universal Remote (Model URC-2575), detailing setup, advanced features, troubleshooting, and device codes for TVs, VCRs, Satellite Receivers, and Cable Boxes.

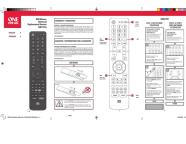

[One For All URC 1916 Hisense Universal Replacement Remote Quick Start Guide](#)

Learn how to set up and use your One For All URC 1916 universal replacement remote for Hisense TVs. Includes setup instructions, battery replacement, and learning functions.

Documents - One For All – R18200

no relevant documents