

## Mellerware ES9730030L

# Mellerware Crunchy XL Air Fryer

## MODEL: ES9730030L - INSTRUCTION MANUAL

### Important Safety Instructions

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons. Read all instructions carefully before operating this appliance.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the appliance is placed on a stable, heat-resistant surface, away from walls or other appliances to allow adequate air circulation.

### Product Overview

The Mellerware Crunchy XL Air Fryer is designed for healthy cooking with minimal to no oil. It features a digital touch screen for easy operation and a large capacity basket.



**Image:** Front view of the Mellerware Crunchy XL Air Fryer, showcasing its sleek black design and illuminated digital control panel.



**Image:** Side view of the Mellerware Crunchy XL Air Fryer, highlighting its compact yet spacious design.

### Components:

- **Main Unit:** Houses the heating element and fan.
- **Control Panel:** Digital touch screen for setting temperature, time, and selecting presets.
- **Frying Basket:** Non-stick coated basket for holding food.
- **Basket Handle:** For safe insertion and removal of the frying basket.
- **Air Inlet/Outlet:** For proper air circulation during operation.



**Image:** The non-stick frying basket of the Mellerware Crunchy XL Air Fryer, shown removed from the main unit.

## Setup

---

1. **Unpacking:** Remove all packaging materials, stickers, and labels from the appliance.
2. **Initial Cleaning:** Clean the frying basket and any removable parts with hot water, dish soap, and a non-abrasive sponge. Wipe the inside and outside of the appliance with a damp cloth. Ensure all parts are completely dry before use.
3. **Placement:** Place the appliance on a stable, horizontal, and heat-resistant surface. Ensure there is at least 10 cm (4 inches) of free space on the back and sides, and 10 cm (4 inches) above the appliance to allow for proper ventilation.
4. **Power Connection:** Plug the power cord into a grounded wall outlet.

## Operating Instructions

---

The Mellerware Crunchy XL Air Fryer features a digital touch screen for intuitive control.



**Image:** Close-up of the digital touch control panel, showing temperature and time settings, along with various preset icons.

### General Operation:

1. **Prepare Food:** Place the ingredients into the frying basket. Do not overfill the basket to ensure even cooking.
2. **Insert Basket:** Slide the frying basket back into the main unit until it clicks into place.
3. **Power On:** Plug in the appliance. The power button will illuminate. Touch the power button to turn on the display.
4. **Set Temperature and Time:**
  - **Manual Setting:** Use the temperature control buttons (up/down arrows with thermometer icon) to adjust the temperature between 80°C and 200°C. Use the time control buttons (up/down arrows with clock icon) to set the cooking time.
  - **Predefined Programs:** The air fryer has 10 preset programs for common foods. Touch the menu icon to cycle through the programs. Each program has a default temperature and time, which can be adjusted manually if needed.

- 5. **Start Cooking:** Once temperature and time are set, touch the power button again to start the cooking process. The fan and heating element will activate.
- 6. **Shake Basket (Optional):** For some foods, it is recommended to shake the basket halfway through the cooking time to ensure even browning. Carefully pull out the basket, shake, and reinsert. The appliance will pause automatically and resume when the basket is reinserted.
- 7. **End of Cooking:** The appliance will beep when the set cooking time has elapsed. Carefully pull out the basket and transfer the cooked food to a plate.
- 8. **Power Off:** Touch and hold the power button to turn off the appliance. Unplug from the wall outlet after use.

## Maintenance and Cleaning

Regular cleaning ensures optimal performance and extends the life of your air fryer.

- 1. **Before Cleaning:** Always unplug the appliance and allow it to cool down completely before cleaning.
- 2. **Frying Basket:** The non-stick frying basket is dishwasher safe. Alternatively, wash it with hot water, dish soap, and a non-abrasive sponge. Ensure no food residue remains.
- 3. **Interior:** Wipe the interior of the appliance with a damp cloth. For stubborn residue, use a mild detergent. Do not use abrasive cleaners or scourers.
- 4. **Exterior:** Wipe the exterior with a damp cloth. Do not immerse the main unit in water or any other liquid.
- 5. **Heating Element:** Use a cleaning brush to remove any food residue from the heating element.
- 6. **Storage:** Ensure all parts are clean and dry before storing the appliance in a cool, dry place.

## Troubleshooting

| Problem                               | Possible Cause                                         | Solution                                                                                                |
|---------------------------------------|--------------------------------------------------------|---------------------------------------------------------------------------------------------------------|
| Air fryer does not turn on.           | Appliance is not plugged in.                           | Ensure the power cord is securely plugged into a grounded outlet.                                       |
| Food is not cooked evenly.            | Basket is overfilled or food is not shaken.            | Do not overfill the basket. Shake the basket halfway through cooking.                                   |
| White smoke comes from the appliance. | Grease residue from previous use or fatty ingredients. | Clean the basket and interior thoroughly after each use. For fatty foods, ensure excess oil is drained. |
| Food is not crispy.                   | Incorrect temperature or cooking time.                 | Adjust temperature and time as needed. Ensure food is not overcrowded in the basket.                    |

## Specifications

- **Model Number:** ES9730030L
- **Power:** 1500 W
- **Capacity:** 5.5 Liters
- **Temperature Range:** 80°C - 200°C
- **Control Method:** Digital Touch Screen
- **Predefined Programs:** 10

- **Dimensions (L x W x H):** 36 x 36 x 41 cm
- **Weight:** 6.42 kg
- **Interior Material:** Ceramic
- **Non-stick Coating:** Yes
- **Dishwasher Safe Parts:** Frying Basket

## Warranty and Support

This product is covered by a manufacturer's warranty. For detailed warranty information, please refer to the documentation included with your purchase or contact Mellerware customer support.

If you encounter any issues or have questions regarding your Mellerware Crunchy XL Air Fryer, please contact our customer service department for assistance. Contact details can typically be found on the Mellerware official website or on your product packaging.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

#### Name

#### Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

#### Question

#### Details

Submit question