

[Manuals.plus](#) /

> [JISULIFE](#) /

> JISULIFE Handheld Mini Fan Instruction Manual

## JISULIFE FA21

# JISULIFE Handheld Mini Fan

## INSTRUCTION MANUAL

### Introduction

Thank you for choosing the JISULIFE Handheld Mini Fan, Model FA21. This portable and compact fan is designed to provide a refreshing breeze wherever you go. With its versatile 3-speed settings and convenient USB rechargeable battery, it's perfect for staying cool during outdoor activities, indoor use, makeup application, daily commutes, office work, travel, and concerts. This manual will guide you through the product's features, setup, operation, and maintenance.

Key features include:

- **3 Wind Speed Gears:** Easily adjust airflow with a single button.
- **USB Rechargeable Battery:** Built-in battery for convenient charging via various USB sources.
- **Excellent Portability:** Lightweight and compact design, ideal for on-the-go use.
- **Convenient 1-Click Operation:** Simple controls for power and speed adjustment.
- **Brushless Motor:** Ensures lower noise and enhanced durability.

### Product Overview

Familiarize yourself with the main components of your JISULIFE Handheld Mini Fan:



Image: Front view of the JISULIFE Handheld Mini Fan in white, showcasing its compact design and fan blades.

- **Fan Head:** Contains the fan blades and protective grille.
- **Power Button:** Used to turn the fan on/off and cycle through speed settings.
- **Charging Port (Type-C):** Located at the base of the handle for recharging.
- **LED Indicator Light:** Displays charging status.

## Setup

Before first use, please fully charge the fan.

1. Locate the Type-C charging port at the bottom of the fan handle.
2. Connect the provided Type-C charging cable to the fan's charging port.
3. Connect the other end of the USB cable to a suitable power source (e.g., USB wall adapter, laptop, power bank, car charger).
4. The LED indicator light will flash slowly while charging. It will remain steadily lit when fully charged.
5. A full charge typically takes about 2-3 hours. For quick charging, ensure your power source provides 5V/2A current.

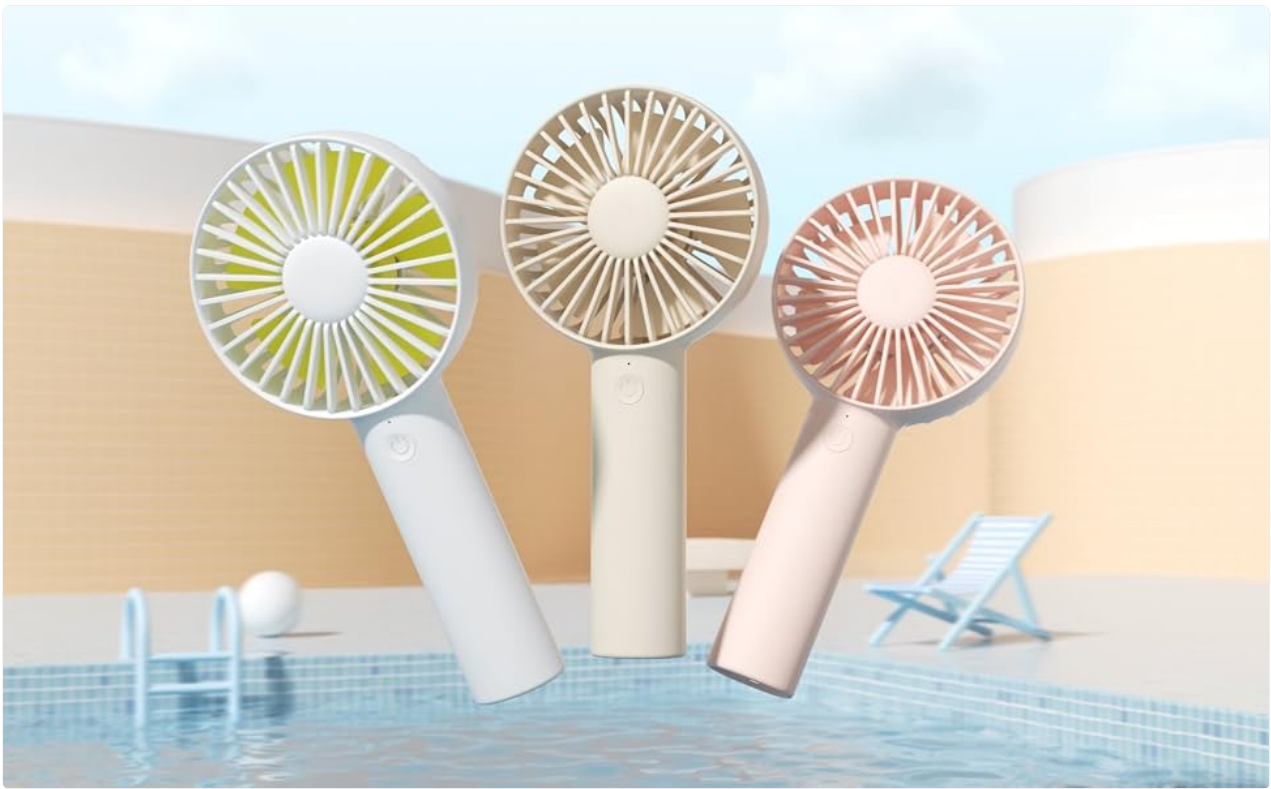


Image: Illustrations showing various charging methods for the fan, including a wall socket, laptop, power bank, and car charger.

## Operating Instructions

The JISULIFE Handheld Mini Fan features a simple one-button control for ease of use.

1. **Power On / Speed 1 (Light Air):** Short press the power button once to turn on the fan at the lowest speed (approx. 2800rpm), providing a gentle breeze. This speed offers approximately 10 hours of operation.
2. **Speed 2 (Soft Breeze):** Short press the power button a second time to switch to the medium speed (approx. 3500rpm), offering a soft and consistent airflow. This speed provides approximately 7 hours of operation.
3. **Speed 3 (Strong Wind):** Short press the power button a third time to activate the highest speed (approx. 4500rpm), delivering a powerful wind for maximum cooling. This speed provides approximately 3 hours of operation.
4. **Power Off:** Long press the power button for 3 seconds at any speed to turn off the fan directly. Alternatively, after Speed 3, a short press will turn the fan off.



Image: Diagram illustrating the three wind speed settings (Light Air, Soft Breeze, Strong Wind) with their corresponding RPMs.

## Maintenance

To ensure the longevity and optimal performance of your fan, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the exterior of the fan. Do not use abrasive cleaners or immerse the fan in water.
- **Storage:** When not in use for extended periods, store the fan in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Obstructions:** Ensure the fan grille is free from dust, lint, or other obstructions that could impede airflow or damage the motor.

## Troubleshooting

If you encounter any issues with your fan, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not turn on.	Battery is depleted.	Charge the fan using the provided USB cable.
Weak airflow.	Fan grille is blocked by dust or debris.	Clean the fan grille with a soft, dry cloth.
Fan makes unusual noise.	Foreign object inside the fan.	Turn off the fan immediately. Do not attempt to open the fan. Contact customer support.
Charging indicator not working.	Cable or power source issue.	Try a different USB cable or power adapter. Ensure connections are secure.

If the problem persists after trying these solutions, please contact JISULIFE customer support for further assistance.

## Specifications

Feature	Detail
Brand	JISULIFE
Model Name	FA21
Color	White
Power Source	Battery Powered (Rechargeable)
Product Dimensions	1.35"D x 3.62"W x 7.67"H
Item Weight	4.66 Ounces
Noise Level	52 dB
Wattage	5 watts
Number of Blades	5
Speed Settings	3
Voltage	5 Volts
Switch Type	Push Button
Connector Type	Type-C
Blade Material	Plastic
Manufacturer	Shenzhen Jisu Technology Co., Ltd.

## Warranty and Support

JISULIFE products are manufactured with high-quality standards. For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official JISULIFE website. Please retain your proof of purchase for any warranty claims.