

[Manuals.plus](#) /

> [SOKANY](#) /

> SOKANY AJ2085 Cordless Steam Iron User Manual

SOKANY AJ2085

SOKANY AJ2085 Cordless Steam Iron User Manual

Model: AJ2085 | Brand: SOKANY

1. INTRODUCTION

Thank you for choosing the SOKANY AJ2085 Cordless Steam Iron. This manual provides essential information for safe and efficient use of your appliance. Please read it thoroughly before first use and keep it for future reference.

The SOKANY AJ2085 offers powerful 2400W performance, a generous 270ml water tank, and a ceramic soleplate for smooth gliding. Its cordless design provides freedom of movement, while anti-calc and self-cleaning systems ensure optimal performance and longevity.

2. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Ensure the voltage indicated on the appliance matches your local mains voltage before connecting.
- Do not immerse the iron, base, or cord in water or other liquids.
- Keep the iron out of reach of children and pets.
- Never leave the iron unattended while it is switched on or connected to the power supply.
- Always place the iron on a stable, heat-resistant surface, especially when hot.
- Unplug the iron from the power outlet before filling with water, cleaning, or when not in use.
- Do not operate the iron with a damaged cord or plug, or if the iron has been dropped or damaged. Contact qualified service personnel for repair.
- Use the iron only for its intended purpose: ironing clothes.
- The soleplate and steam can reach very high temperatures. Avoid contact with skin.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your SOKANY AJ2085 steam iron.

BIG PLATE

Large Plate with Multiple Holes

Large contact area and large steam output



Image: The SOKANY AJ2085 cordless steam iron on its charging base, showcasing its green and black design.

1. **Soleplate:** Ceramic coated for smooth gliding.
2. **Water Tank:** Transparent tank with a capacity of 270ml.
3. **Water Inlet:** For filling the water tank.
4. **Spray Nozzle:** For misting clothes.
5. **Steam Control Dial:** Adjusts steam output.
6. **Temperature Control Dial:** Selects ironing temperature for different fabrics.
7. **Steam Burst Button:** For an extra shot of steam.
8. **Self-Clean Button:** Initiates the self-cleaning function.
9. **Indicator Light:** Shows heating status.
10. **Charging Base:** Provides power to heat the iron and stores the cord.
11. **Power Cord:** Connects the charging base to the mains.

One steam iron, help big problem



Adjustable
temperature
controler



Image: A detailed view of the SOKANY AJ2085 iron, highlighting its adjustable temperature control dial, water storage bin, and adjustable steam volume controls.

4. SETUP

- 1. Unpacking:** Carefully remove the iron and all accessories from the packaging. Retain packaging for storage or disposal.
- 2. First Use Preparation:** Before first use, wipe the soleplate with a soft, damp cloth to remove any manufacturing residues. It is normal for a slight odor or smoke to be emitted during the first heating; this will dissipate quickly.
- 3. Filling the Water Tank:**
 - Ensure the iron is unplugged from the power outlet and cooled down.
 - Open the water inlet cover.
 - Using a measuring cup, fill the water tank with clean tap water up to the MAX mark. Do not overfill.
 - Close the water inlet cover securely.



Image: A hand pouring water from a plastic container into the iron's water tank.

4. **Placing the Iron on the Base:** Place the iron securely onto its charging base. Ensure it clicks into place.
5. **Connecting to Power:** Plug the power cord of the charging base into a suitable electrical outlet (220V, 50Hz).

5. OPERATING INSTRUCTIONS

5.1. Heating the Iron

1. Place the iron on its charging base.
2. Turn the temperature control dial to the desired setting according to the fabric type (e.g., Nylon, Silk, Wool, Cotton, Linen). The indicator light will illuminate, indicating the iron is heating.
3. Wait for the indicator light to turn off, signaling that the iron has reached the selected temperature. For cordless use, the iron heats rapidly (approximately 5 seconds).

5.2. Dry Ironing

For dry ironing, ensure the steam control dial is set to the "0" (no steam) position. Select the appropriate temperature and iron as usual.

5.3. Steam Ironing

Steam ironing is recommended for fabrics like cotton and linen that require moisture to remove wrinkles effectively.

1. Fill the water tank as described in the Setup section.
2. Set the temperature control dial to the steam ironing range (usually between Wool and Linen settings). The indicator light will turn on.
3. Once the indicator light turns off, the iron is ready for steam ironing.
4. Adjust the steam control dial to the desired steam output.
5. Iron your garments. For continuous steam, ensure the iron is periodically placed back on its charging base to maintain temperature.



Image: The green and black SOKANY AJ2085 iron releasing a powerful burst of steam from its soleplate.

5.4. Steam Burst and Spray Functions

- **Steam Burst:** Press the steam burst button for an extra shot of steam to tackle stubborn wrinkles. Wait a few seconds between bursts to allow the iron to reheat.
- **Spray:** Press the spray button to mist the fabric with water, which can help in removing creases, especially during dry ironing.

5.5. Vertical Steaming

The iron can be used for vertical steaming of hanging garments, curtains, or drapes. Hold the iron vertically a few centimeters away from the fabric and press the steam burst button. Ensure the water tank is sufficiently filled.



Image: A person actively using the SOKANY AJ2085 iron to smooth out wrinkles on clothing.

6. MAINTENANCE AND CLEANING

6.1. Cleaning the Soleplate

- Ensure the iron is unplugged and completely cool.
- Wipe the soleplate with a soft, damp cloth. For stubborn stains, use a non-abrasive liquid cleaner specifically designed for iron soleplates.
- Never use abrasive scourers or chemical cleaners as they can damage the ceramic coating.

6.2. Self-Cleaning Function

The self-cleaning function helps remove mineral deposits and impurities from the steam vents.

1. Fill the water tank to the MAX level.
2. Set the steam control to "0" and the temperature dial to MAX.
3. Plug in the iron and allow it to heat until the indicator light turns off.
4. Unplug the iron. Hold it horizontally over a sink.
5. Press and hold the self-clean button. Hot water and steam will be expelled from the soleplate, carrying impurities.
6. Gently shake the iron back and forth until the water tank is empty.
7. Release the self-clean button.
8. Reheat the iron to dry the soleplate, then unplug and allow to cool before storing.



Image: A blue square icon with the text "SELF CLEAN", indicating the self-cleaning feature.

6.3. Anti-Calc System

The integrated anti-calc system helps reduce the build-up of limescale, prolonging the life and efficiency of your iron. Regular use of the self-cleaning function complements this system.



Image: A blue square icon with the text "ANTI CALC", indicating the anti-calc feature.

6.4. Storage

After use, unplug the iron, empty the water tank, and allow it to cool completely. Store the iron on its base in an upright position in a dry, safe place.


7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Iron does not heat up.	Not plugged in; power outage; temperature dial set to MIN; iron not properly seated on base.	Check power connection; ensure power is on; set temperature dial to desired setting; ensure iron is correctly placed on the charging base.
No steam or insufficient steam.	Water tank empty; temperature too low; steam control set to "0"; steam vents clogged.	Fill water tank; set temperature to steam range; adjust steam control; perform self-cleaning.
Water leaking from soleplate.	Temperature too low for steam; water tank overfilled; anti-drip system issue.	Increase temperature; do not overfill water tank; if problem persists, contact support.
White flakes coming from soleplate.	Mineral deposits (limescale).	Perform self-cleaning function. Use distilled water in areas with hard water.
Iron sticks to fabric.	Temperature too high for fabric type; soleplate dirty.	Adjust temperature according to fabric care label; clean soleplate.

8. SPECIFICATIONS

Feature	Detail
Model Name	AJ2085
Brand	SOKANY
Power	2400 Watts
Voltage	220 Volts
Frequency	50 Hz
Water Tank Capacity	270 ml
Soleplate Material	Ceramic
Special Features	Cordless, Anti-Drip System, Anti-Calc System, Self-Cleaning, Vertical Steaming, Adjustable Steam, Adjustable Temperature
Weight	150 Grams
Color	Green

Note: The product title mentions a 370ml water tank, while feature bullets indicate 270ml. The 270ml capacity is used here for consistency with detailed product features.

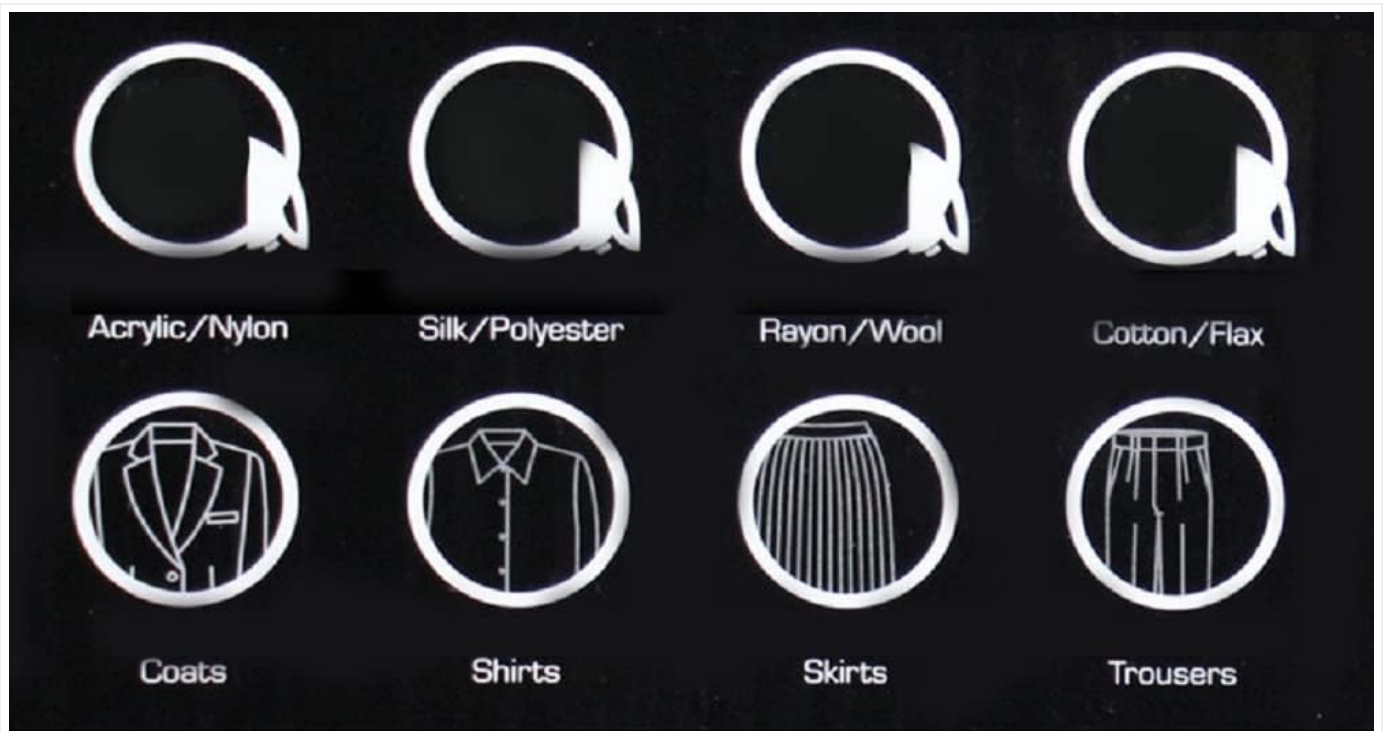

SPECIFICATION

ITEM NO.: AJ2085

ITEM NAME: Steam Iron

POWER: 2000-2400W

VOLTAGE: 220V

RATED FREQUENCY: 50HZ

COLOR: Purple, Green

PRODUCT SIZE: As photo

PACKING SIZE: 32.5*13.5*17.5CM 1.4KG

MACHINE SIZE: 31*12*16CM 1.2KG

31cm



Image: A diagram showing the specifications and dimensions of the SOKANY AJ2085 steam iron, including power, voltage, and frequency.

9. WARRANTY AND SUPPORT

Specific warranty information is not provided in this manual. Please refer to the warranty card included with your product or contact your retailer for details regarding warranty coverage and support services.

For technical assistance or inquiries, please contact SOKANY customer service through the contact information provided on the product packaging or the official SOKANY website.



