

[Manuals.plus](#) /

› [Loyker](#) /

› Loyker X6 Ear Wax Removal Tool Camera User Manual

Loyker X6

Loyker X6 Ear Wax Removal Tool Camera User Manual

Model: X6

INTRODUCTION

The Loyker X6 Ear Wax Removal Tool Camera is an advanced device designed for visual inspection and gentle cleaning of the ear canal, nose, throat, and for examining tonsil stones. Featuring a 1080P HD camera with 6 LED lights and a 360° wide-angle lens, it provides clear, real-time visuals directly to your smartphone. Its intelligent 6-axis gyroscope ensures stable image transmission for precise and safe operation. The device is equipped with a Type-C fast charging port and an IP67 waterproof lens for easy maintenance.

PACKAGE CONTENTS

- Loyker X6 Ear Wax Removal Tool Camera (Main Unit)
- Silicone Ear Picks (various sizes)
- Cleaning Brush
- USB Type-C Charging Cable
- User Manual



Image: Loyker X6 Ear Wax Removal Tool Camera with included silicone ear picks, cleaning brush, and USB-C charging cable.

SAFETY INFORMATION

Please read all instructions carefully before use. This device is intended for personal use and should be handled with care to avoid injury. Do not use the device if you experience pain, discomfort, or bleeding. Consult a medical professional if you have pre-existing ear conditions or concerns. Keep out of reach of children. The device is not intended for children under 6 years old. Always ensure the silicone ear spoon cover is securely attached before insertion. Do not over-insert the device into the ear canal. Clean the device thoroughly after each use.

Proposition 65 Warning: This product may contain chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

SETUP

1. **Charge the Device:** Before first use, fully charge the Loyker X6 using the provided USB Type-C cable. The indicator light will show charging status. A full charge provides approximately 90 minutes of continuous use and up to 30 days of standby

time.

2. **Download the App:** Search for the official Loyker app on your smartphone's app store (iOS or Android). Install the app.
3. **Connect via Wi-Fi:** Power on the Loyker X6 device. Open the installed app on your smartphone. Follow the in-app instructions to connect to the device's Wi-Fi network. The app will display the live camera feed once connected.
4. **Attach Ear Pick:** Select the appropriate silicone ear pick and securely attach it to the tip of the device. Ensure it is firmly in place.



Image: Illustration showing Wi-Fi connection, Type-C charging port, and 6-axis gyroscope for stable imaging.

OPERATING INSTRUCTIONS

The Loyker X6 is designed for various inspection and cleaning tasks. Always proceed gently and observe the live feed on your smartphone to ensure safe operation.

Ear Examination and Wax Removal

1. Ensure the device is charged and connected to the app.
2. Gently insert the device into the ear canal while observing the live feed on your smartphone. The 360° wide-angle lens and 6 LED lights will illuminate the area.
3. Use the soft silicone ear pick to gently dislodge and remove earwax. Avoid pushing wax deeper into the ear canal.
4. The intelligent 6-axis gyroscope stabilizes images for smooth transmission, allowing for precise cleaning without damaging the ear canal.

Family Health Guardian Assistant

Complete inspection accessories,
Provides safe inspection



Ear Exam



Keep clean



Nose Exam



Save time



Oral Exam



Protect health



Skin Exam



Save money



Image: The Loyker X6 device being used for ear wax removal, showing the camera's view on a smartphone.

Nose, Throat, and Skin Examination

The Loyker X6 can also be used for visual inspection of other areas:

- **Nose Examination:** Carefully insert the device into the nostril to inspect the nasal passages.
- **Throat/Tonsil Stone Examination:** Gently guide the device into the mouth to view the throat area and check for tonsil stones.

- **Skin Examination:** Use the device to get a magnified view of skin areas for closer inspection.



Image: Visual guide demonstrating the use of Loyker X6 for ear, nose, oral, and skin examinations.

Official Product Videos

Your browser does not support the video tag.

Video: A user demonstrating the unboxing and initial setup of the Loyker X6 Ear Wax Removal Tool Camera, highlighting the compact packaging and accessories. This video is provided by an Influencer.

MAINTENANCE

Proper maintenance ensures the longevity and hygiene of your Loyker X6 device.

- **Cleaning the Lens:** The IP67 waterproof lens can be easily cleaned with water or wiped with alcohol cotton after each use. Ensure the lens is dry before storage.
- **Cleaning Ear Picks:** Remove the silicone ear picks and wash them with soap and water, or wipe with an alcohol swab. Allow them to air dry completely before reattaching or storing.
- **Storage:** Store the device and its accessories in a clean, dry place, away from direct sunlight and extreme temperatures.

New silicone ear spoon

Complete inspection accessories,
Provides safe inspection

loyker

other

Non-slip Ear spoon

Effective cleaning



Increases friction

Not easy to fall off



Image: The Loyker X6 device demonstrating its IP67 waterproof lens, suitable for easy cleaning with water.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Device not turning on	Low battery	Charge the device fully using the USB Type-C cable.
Unable to connect to app	Wi-Fi not enabled or incorrect network selected	Ensure device Wi-Fi is on and select the correct network in your phone's Wi-Fi settings. Restart both device and app if needed.
Blurred image	Dirty lens	Clean the camera lens with water or an alcohol swab.
Image not stable	Interference or device movement	Ensure stable grip. If issue persists, restart the device and app.

SPECIFICATIONS

- **Model Number:** X6
- **Product Dimensions:** 6.69 x 2.55 x 0.7 inches
- **Weight:** 1.76 ounces
- **Battery:** 1 Lithium Polymer battery (included)
- **Battery Life:** Up to 90 minutes use, 30 days standby
- **Charging Port:** USB Type-C
- **Camera Resolution:** 1080P HD
- **LED Lights:** 6 thermostatic LED systems
- **Waterproof Rating:** IP67
- **Gyroscope:** Intelligent 6-axis
- **Manufacturer:** Loyker
- **First Available:** December 10, 2021

WARRANTY AND SUPPORT

Loyker products are manufactured to the highest quality standards. For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official Loyker website. Keep your purchase receipt for warranty claims.

For additional support, you may visit the [Loyker Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question