

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Sweepulire](#) /

› [Sweepulire Electric Spin Scrubber User Manual - Model B09NDMLHCM](#)

## Sweepulire B09NDMLHCM

# Sweepulire Electric Spin Scrubber User Manual

Model: Sweepulire Electric Spin Scrubber (B09NDMLHCM)

Brand: Sweepulire

## 1. INTRODUCTION

Thank you for choosing the Sweepulire Electric Spin Scrubber. This device is designed to simplify your cleaning tasks, offering an efficient and ergonomic solution for various surfaces in your home. Please read this manual thoroughly before first use to ensure safe and optimal operation.

## 2. IMPORTANT SAFETY INSTRUCTIONS

- **Do Not Submerge:** The main unit of the scrubber is not designed to be submerged in water. Avoid immersing the handle or motor housing.
- **Water Exposure:** While brush heads are designed for wet cleaning, ensure the main unit and charging port remain dry.
- **Charging:** Use only the provided AC adapter for charging. Ensure the charging port is dry before connecting the adapter.
- **Children and Pets:** Keep the device out of reach of children and pets. This is not a toy.
- **Damaged Device:** Do not operate the scrubber if it is damaged, has a frayed cord, or is not functioning correctly. Contact customer support for assistance.
- **Proper Use:** Use the device only for its intended cleaning purposes as described in this manual.
- **Chemicals:** Always follow the safety instructions of any cleaning agents used with the scrubber. Avoid highly corrosive or flammable chemicals.

## 3. PACKAGE CONTENTS

Please verify that all items are included in your package:

- Electric Spin Scrubber Main Unit
- Extendable Handle
- 8 Replacement Brush Heads (various types)
- AC Adapter
- Storage Hook
- User Manual (this document)
- Quick Start Guide



*Video: Unboxing the Sweepulire Electric Spin Scrubber. This video demonstrates the contents of the package, including the quick start guide, product manual, and the various brush attachments.*

## 4. PRODUCT FEATURES

- **Powerful Motor:** Features a robust motor with two spin speeds (300 RPM gentle mode, 400 RPM high-speed mode) for effective cleaning.
- **Long-Lasting Battery:** Provides up to 90 minutes of continuous cleaning on a single charge.
- **Extendable Handle:** Adjustable handle extends up to 47 inches, allowing you to reach high or low areas without bending or straining.
- **Adjustable Brush Head:** The brush head can be adjusted to a 45° angle for optimal reach into corners and tight spaces.
- **Versatile Brush Heads:** Includes 8 specialized brush heads for various cleaning tasks and surfaces.
- **Lightweight Design:** Ergonomically designed for comfortable use, reducing fatigue during extended cleaning sessions.

## 5. ASSEMBLY

1. **Connect Handle Sections:** Align the metal extension pole with the main unit and the handle grip. Push firmly until they click into place.
2. **Attach Brush Head:** Select the desired brush head. Align the brush head with the rotating spindle on the main unit and twist clockwise until it locks securely.
3. **Adjust Length (Optional):** To extend the handle, press the black button on the extension pole and pull the sections apart to your desired length. Release the button to lock.
4. **Adjust Angle (Optional):** To change the angle of the brush head, press the gray button near the brush head joint and adjust to the desired angle (up to 45°). Release the button to lock.



*Image: The Sweepulire Electric Spin Scrubber with its handle fully extended, illustrating how the device can be adjusted for different reach requirements.*

## 6. CHARGING INSTRUCTIONS

1. Ensure the scrubber is turned off before charging.

2. Locate the charging port, typically at the top of the handle, covered by a protective cap.
3. Open the protective cap and insert the AC adapter plug firmly into the charging port.
4. Plug the AC adapter into a standard wall outlet.
5. The indicator light will illuminate red to show that the device is charging.
6. Once fully charged, the indicator light will turn green. Disconnect the adapter and close the protective cap to prevent water entry.

A full charge provides approximately 90 minutes of runtime.



## Clean Smarter, Not Harder

Say goodbye to pain and hello to convenience

*Image: A detailed view of the charging port on the Sweepulire Electric Spin Scrubber, illustrating the connection of the AC adapter and the red light indicating the charging status.*

### 7. OPERATING INSTRUCTIONS

1. **Prepare Surface:** For best results, especially on stubborn stains, pre-soak the area with your preferred

cleaning solution for 5-10 minutes.

2. **Power On/Off:** Press the power button once to turn the scrubber on. Press it again to turn it off.
3. **Change Speed:** The scrubber features two spin speeds. Press and hold the power button for 2-3 seconds to switch between the 300 RPM gentle mode and the 400 RPM high-speed mode.
4. **Cleaning:** Gently guide the spinning brush head over the surface you wish to clean. Apply light pressure; the motor does most of the work.
5. **Reach Difficult Areas:** Utilize the extendable handle and adjustable brush head angle to clean high walls, low floors, and tight corners without straining.
6. **After Use:** Turn off the scrubber. Remove the brush head for cleaning and rinse the main unit (avoiding the charging port) to remove any residue.

# Upgraded Power Scrubber

40% more efficient than others



Dual  
Spin Speeds



400RPM  
Powerful Motor



200  
RPM



250  
RPM



300  
RPM



350  
RPM



400  
RPM

Image: The electric spin scrubber actively cleaning a bathtub, showcasing its effectiveness on curved surfaces.



*Image: The electric spin scrubber being used to clean a tiled shower wall, highlighting its ability to clean vertical surfaces.*

# Adjustable Extension Arm



 Extend up to 47 inches

 0-45° Adjustable Heads

*Image: The electric spin scrubber cleaning around a kitchen sink, illustrating its adaptability for various cleaning tasks.*

# 8 Replacement Brush Heads

Get more beyond your  
expectations!



*Image: The electric spin scrubber cleaning a stovetop, showing its application for kitchen cleaning.*

**Your browser does not support the video tag.**

*Video: This video demonstrates the Sweepulire Electric Spin Scrubber in action, highlighting its effectiveness in cleaning various bathroom surfaces and its ease of use.*

## 8. BRUSH HEAD GUIDE

Your Sweepulire Electric Spin Scrubber comes with 8 specialized brush heads, each designed for specific cleaning tasks:

- **Large Flat Brush:** Ideal for large flat surfaces like floors, tiles, and shower walls.
- **Small Flat Brush:** Suitable for smaller flat areas, countertops, and sinks.
- **Corner Brush (Pointed):** Designed to reach into tight corners, grout lines, and around fixtures.
- **Dome Brush:** Excellent for curved surfaces like bathtubs and toilet bowls.
- **Scouring Pads:** For tough stains and grime on durable surfaces (e.g., stovetops, oven interiors).
- **Sponge Pads:** For delicate surfaces like glass or for polishing.
- **Microfiber Pad:** For gentle cleaning and wiping.
- **Wool Pad:** For polishing and buffing.

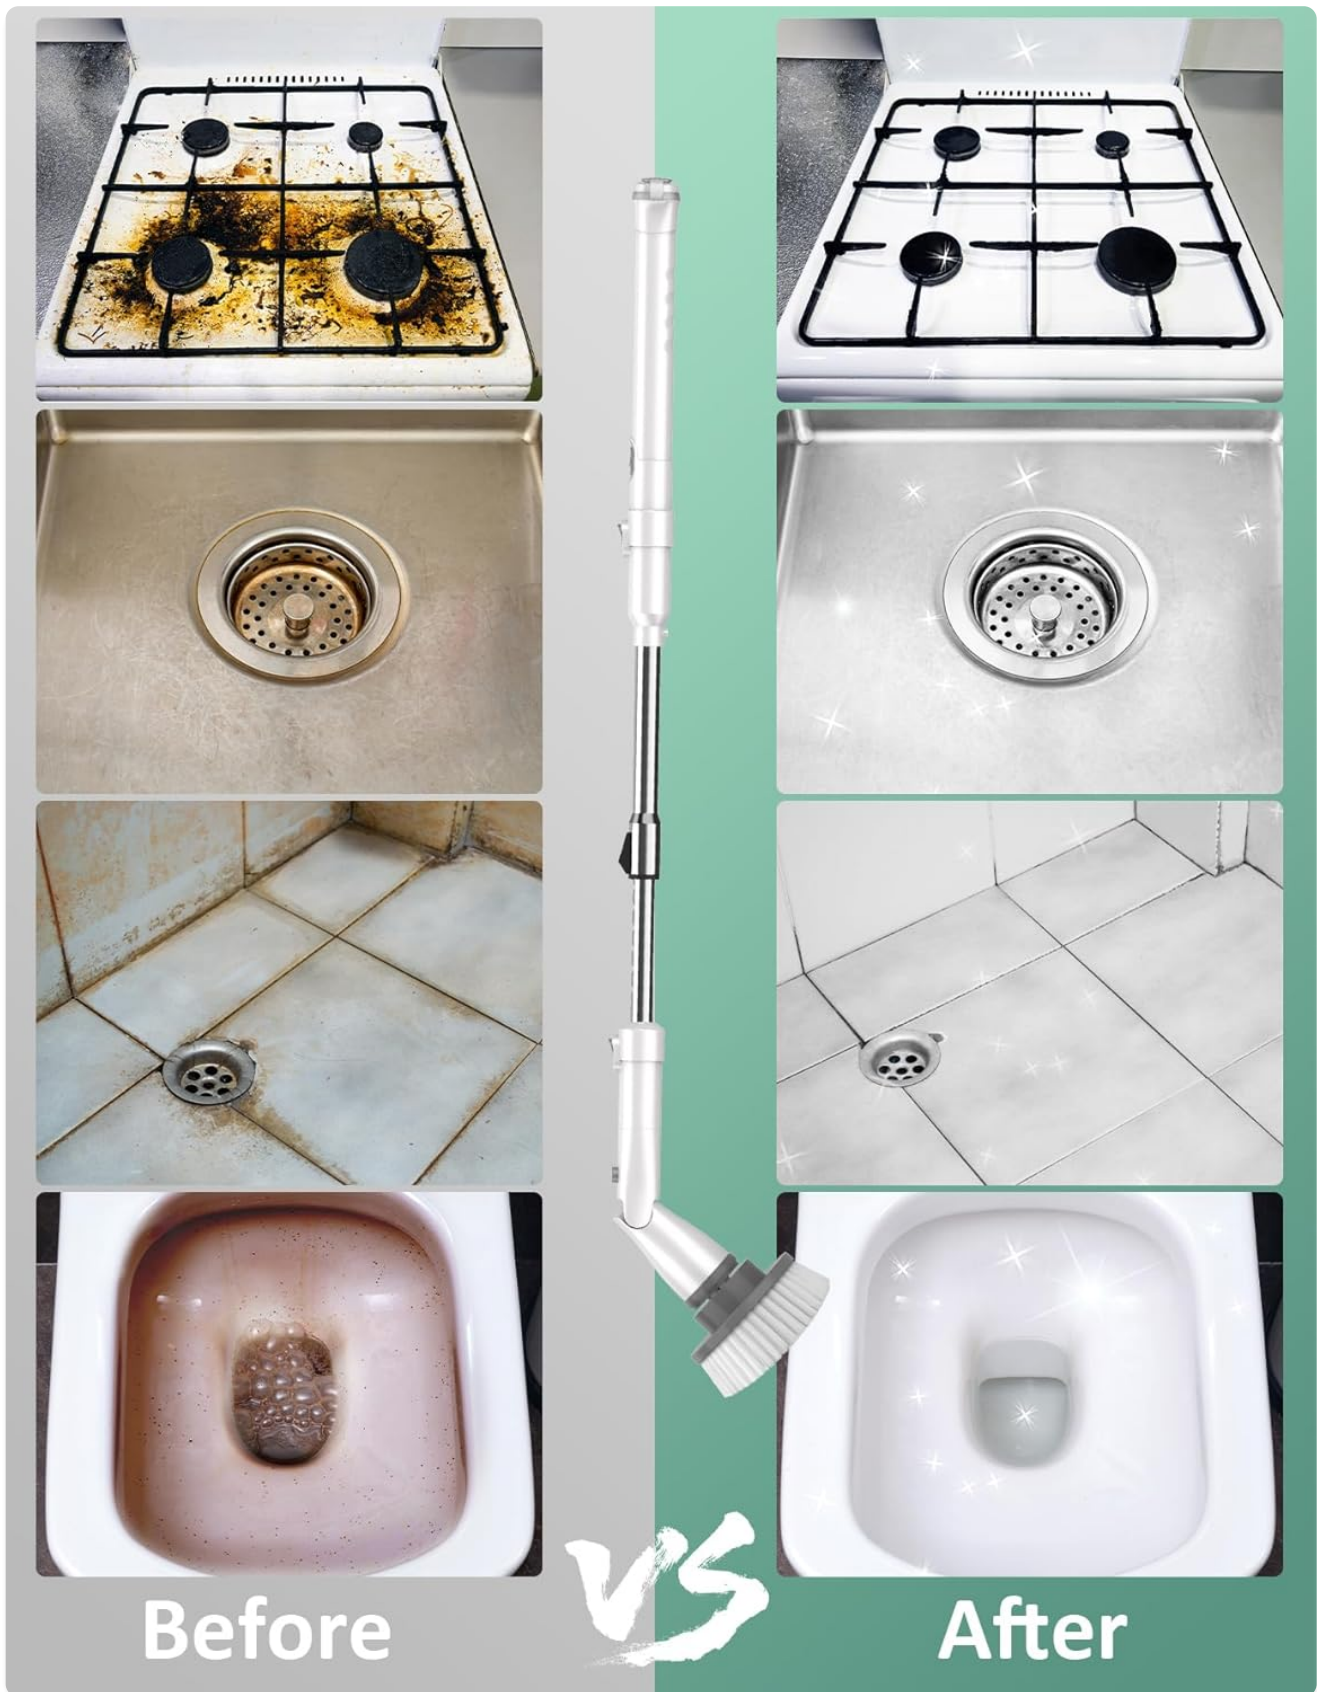


Image: An assortment of the 8 specialized brush heads included with the scrubber, demonstrating the variety available for different cleaning needs.

## 9. MAINTENANCE AND CARE

- **Cleaning Brush Heads:** After each use, remove the brush head and rinse it thoroughly under running water to remove dirt and cleaning solution residue. Allow to air dry completely before storing.

- **Cleaning Main Unit:** Wipe the main unit and handle with a damp cloth. Do not use abrasive cleaners or submerge the unit in water. Ensure the charging port cap is securely closed during cleaning.
- **Storage:** Store the scrubber in a cool, dry place. Use the provided hook to hang it for convenient storage and drying.
- **Battery Care:** For optimal battery life, avoid completely draining the battery frequently. Charge the device when the power is low.

## 10. TROUBLESHOOTING

Problem	Possible Cause	Solution
Scrubber does not turn on.	Battery is low or depleted.	Charge the scrubber fully (indicator light turns green).
Scrubber stops during operation.	Battery is depleted.	Recharge the device.
Brush head not spinning effectively.	Brush head is not securely attached.	Ensure the brush head is twisted clockwise until it locks.
Reduced cleaning power.	Brush head is worn out or clogged.	Clean the brush head or replace it with a new one.
Charging light not illuminating.	AC adapter not properly connected or faulty.	Check connections. Try a different outlet. If issue persists, contact support.

## 11. SPECIFICATIONS

- **Brand:** Sweepulire
- **Model Number:** Sweepulire Electric Spin Scrubber (B09NDMLHCM)
- **Color:** All White
- **Handle Material:** Stainless Steel, Plastic
- **Product Dimensions:** 6"L x 5.5"W x 17"H (compact)
- **Extended Length:** Up to 47 inches
- **Material:** Stainless Steel
- **Spin Speeds:** 2 (300 RPM, 400 RPM)
- **Battery:** 2 Lithium Ion batteries (included)
- **Runtime:** Up to 90 minutes
- **Item Weight:** 3.7 Pounds
- **Included Components:** Electric Spin Scrubber, 8 Replacement Brush Heads, AC Adapter, Hook, User

- **Surface Recommendation:** Bathroom, Shower, Bathtub, Tile, Grout, Sink, Kitchen, Car, Floor, etc.

## 12. WARRANTY AND SUPPORT

Sweepulire stands by its products with reliable after-sales service. Your purchase includes:

- **18 Months Maintenance:** For any manufacturing defects or issues arising from normal use within 18 months of purchase.
- **Lifetime Technique Support:** Access to technical assistance and guidance for the lifespan of your product.

If you encounter any issues or are not completely satisfied with your purchase, please contact Sweepulire customer service for prompt assistance. We are committed to ensuring your cleaning experience is stress-free.