

Smoby 7600840110

Smoby Sand and Water Activity Table Instruction Manual

Model: 7600840110

Brand: Smoby

1. INTRODUCTION

Thank you for choosing the Smoby Sand and Water Activity Table. This versatile outdoor play table is designed to provide a stimulating environment for sensory activities and creative play for young children. It features two removable sections for filling with sand, water, or other child-friendly materials. This manual provides essential information for the safe assembly, operation, and maintenance of your product.

This product is suitable for children over 18 months of age.



Image 1.1: The Smoby Sand and Water Activity Table, showcasing its dual compartments and included accessories.

2. SAFETY INFORMATION

Please read and understand all safety instructions before assembly and use. Failure to follow these instructions may result in injury.

- **Adult Supervision Required:** This toy is intended for use under direct adult supervision at all times.
- **Choking Hazard:** Small parts may be present. Ensure all components are securely assembled before allowing children to play.
- **Water Safety:** When using water, ensure the water level is appropriate for the child's age and ability. Never leave children unattended near water.
- **Stable Surface:** Place the table on a flat, stable surface to prevent tipping.
- **Outdoor Use:** This product is designed for outdoor use.
- **Sun Protection:** An umbrella (not included) can be secured in the central hole to provide shade for your child during play.

Retain this manual for future reference.

3. PACKAGE CONTENTS

Please verify that all components are present before beginning assembly:

- 1 x Smoby Outdoor Sand and Water Activity Table
- 2 x Removable Trays (for sand/water)
- 2 x Tray Lids (protective covers)
- 1 x Red Boat Toy
- 2 x Sand Moulds
- 1 x Shovel
- 1 x Rake



Image 3.1: Included accessories: red boat, yellow sand moulds, green shovel, and rake.

4. ASSEMBLY INSTRUCTIONS

The Smoby Sand and Water Activity Table requires minimal assembly. Adult assembly is required.

1. Carefully unpack all components from the packaging.
2. Attach the four legs to the underside of the table frame. Ensure each leg clicks securely into place.
3. Insert the two removable trays into their designated compartments on the tabletop.
4. Verify that the table is stable and all parts are securely connected before use.

5. OPERATING INSTRUCTIONS

The Smoby Sand and Water Activity Table offers versatile play options:

- **Sand Play:** Fill one or both removable trays with play sand. Use the included shovel, rake, and moulds for creative sand construction.
- **Water Play:** Fill one or both removable trays with water. The red boat toy can be floated in the water. Always supervise children during water play.

- **Combined Play:** Use one tray for sand and the other for water to create a diverse play experience.
- **Tabletop Use:** When not in use for sand or water, place the protective lids over the trays to convert the unit into a regular activity table for drawing or other games.
- **Sun Protection:** A central hole is provided for securing a standard sun umbrella (not included) to protect children from direct sunlight during play.



Image 5.1: Children engaging in sand and water play with the activity table.



Image 5.2: The table with lids on, used as a surface for drawing activities.

6. CARE AND MAINTENANCE

Proper care will extend the life of your Smoby Sand and Water Activity Table:

- **Cleaning:** The table is easy to clean. Simply wipe down surfaces with a damp cloth or wash with mild soapy water. Rinse thoroughly and allow to air dry.
- **Tray Cleaning:** The removable trays can be easily lifted out for thorough cleaning and emptying.
- **UV Protection:** The outdoor playset is treated with an anti-UV coating to help prevent fading and discoloration from sunlight exposure.
- **Storage:** When not in use, especially during prolonged periods, it is recommended to cover the table or store it in a sheltered area to protect it from extreme weather conditions. Ensure trays are empty and dry before covering or storing.

7. TROUBLESHOOTING

If you encounter any issues with your Smoby Sand and Water Activity Table, please consider the following:

- **Instability:** Ensure all four legs are fully and securely attached to the table frame. Verify the table is placed on a flat, even surface.
- **Missing Parts:** Refer to the "Package Contents" section. If any parts are missing upon unboxing, please contact Smoby customer support.
- **Difficulty Cleaning:** For stubborn dirt, use a soft brush with soapy water. Avoid abrasive cleaners

or harsh chemicals.

8. SPECIFICATIONS

Feature	Detail
Model Number	7600840110
Product Dimensions (L x D x H)	69 cm x 69 cm x 46 cm (27.17 x 27.17 x 18.11 inches)
Item Weight	4 kg (8.8 pounds)
Recommended Age	18 months and up
Manufacturer	Simba Toys

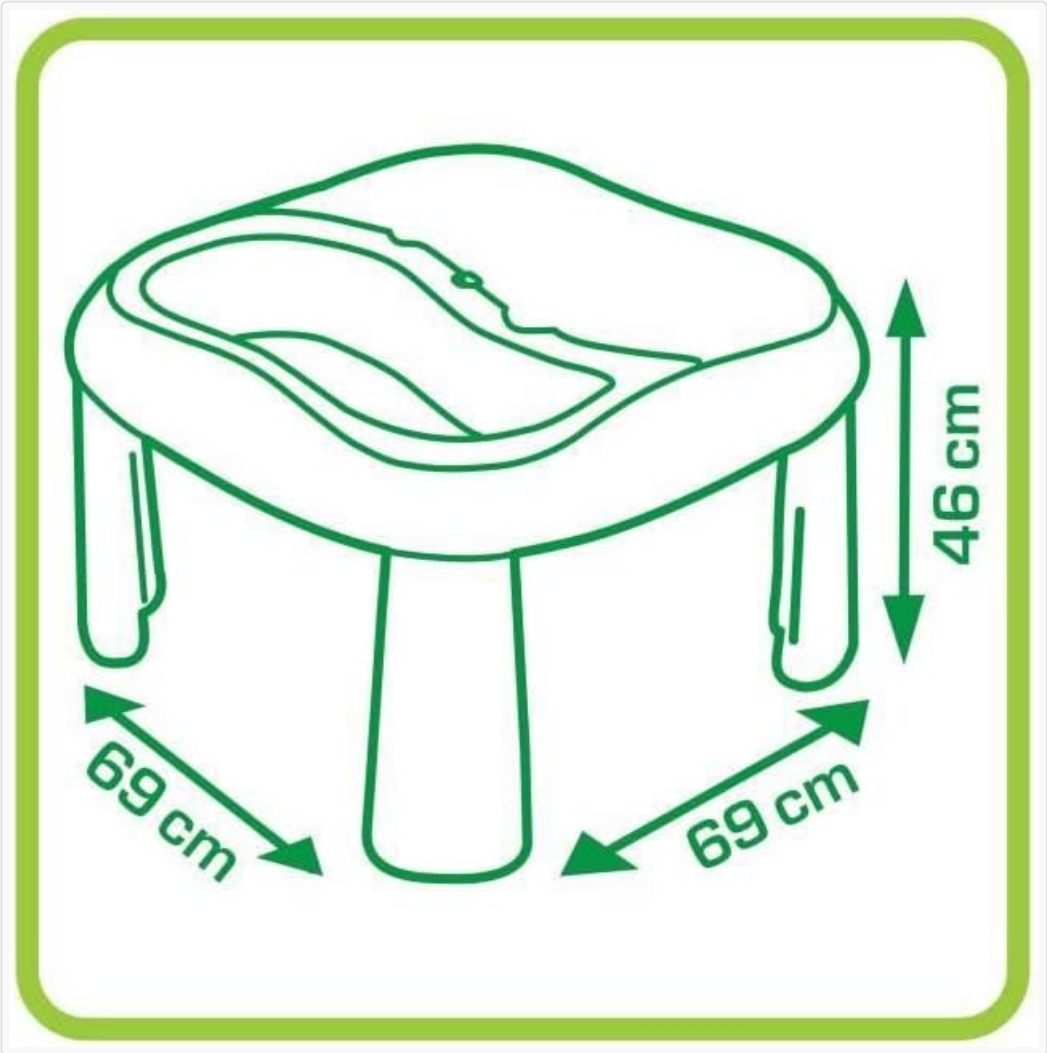 



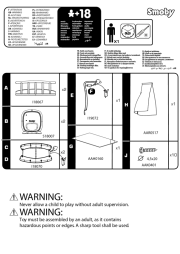 

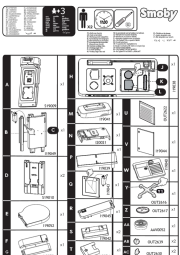 
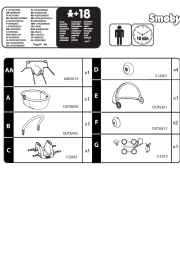 
Image 8.1: Dimensional diagram of the Smoby Sand and Water Activity Table.

9. WARRANTY AND SUPPORT

For information regarding warranty coverage or if you require technical assistance, please contact Smoby customer support through their official website or the retailer from whom the product was

purchased. Please have your model number (7600840110) and proof of purchase available when contacting support.

Related Documents - 7600840110

 <p>Thumbnail image showing the Smoby Baby Nurse Toilet assembly instructions and safety guide. It includes a list of parts, a diagram of the toilet, and safety warnings.</p>	<p>Smoby Baby Nurse Toilet Assembly Instructions and Safety Guide</p> <p>Comprehensive assembly instructions and safety warnings for the Smoby Baby Nurse Toilet toy. Learn how to assemble the play toilet with clear steps and component identification.</p>
 <p>Thumbnail image showing the Smoby Bercelonnette assembly instructions and safety guide. It includes a list of parts, a diagram of the toy, and safety warnings.</p>	<p>Smoby Bercelonnette Assembly Instructions and Safety Guide</p> <p>Detailed assembly instructions and safety information for the Smoby Bercelonnette toy. Includes part identification, step-by-step assembly guides, and important warnings for safe use.</p>
 <p>Thumbnail image showing the Smoby Pushchair + Pram assembly instructions. It includes a list of parts, a diagram of the pushchair, and safety warnings.</p>	<p>Smoby Pushchair + Pram Assembly Instructions</p> <p>Step-by-step guide for assembling the Smoby Pushchair + Pram (Model 03291X0/15). Includes important safety information, part identification, and assembly procedures.</p>
 <p>Thumbnail image showing the Smoby 7600312303 Chef's Kitchen 2-in-1 with Dining Area user manual. It includes a list of parts, a diagram of the kitchen, and safety warnings.</p>	<p>Smoby 7600312303 Chef's Kitchen 2-in-1 with Dining Area User Manual</p> <p>Comprehensive user manual for the Smoby 7600312303 Chef's Kitchen 2-in-1 with Dining Area. This guide provides detailed assembly instructions, safety warnings, and usage information for this children's play kitchen.</p>
 <p>Thumbnail image showing the Smoby Landau Calin Baby Doll Stroller assembly instructions. It includes a list of parts, a diagram of the stroller, and safety warnings.</p>	<p>Smoby Landau Calin Baby Doll Stroller Assembly Instructions</p> <p>This document provides comprehensive assembly instructions for the Smoby Landau Calin baby doll stroller. It details the parts included, offers step-by-step guidance for assembly, and highlights crucial safety warnings for safe usage.</p>



[Smoby Baby Nurse Electronic Doll Bath - Assembly Instructions and Safety Guide](#)

Comprehensive guide for assembling and safely using the Smoby Baby Nurse Electronic Doll Bath (Model AAP2330C), including parts list, step-by-step instructions, and important safety warnings for children.