

[Manuals.plus](#) /

> [EDISHINE](#) /

> EDISHINE LED Corner Floor Lamp User Manual

## EDISHINE B09NFD27TS

# EDISHINE LED Corner Floor Lamp Instruction Manual

Model: B09NFD27TS

## 1. INTRODUCTION

Thank you for choosing the EDISHINE LED Corner Floor Lamp. This minimalist, dimmable light is designed to enhance your living space with versatile illumination. Featuring adjustable color temperatures and brightness levels, it provides optimal lighting for various activities, from relaxing to working. This manual provides detailed instructions for assembly, operation, maintenance, and troubleshooting to ensure you get the most out of your new lamp.



Figure 1: EDISHINE LED Corner Floor Lamp in a modern living room setting.

## 2. SAFETY INFORMATION

Please read all safety instructions carefully before using the lamp. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Ensure the power supply voltage matches the lamp's requirements (120V).

- Do not expose the lamp to water or moisture. Use only in dry indoor locations.
- Do not attempt to disassemble or modify the lamp. Refer all servicing to qualified personnel.
- Keep the lamp away from heat sources and direct sunlight.
- Ensure the lamp is placed on a stable, level surface to prevent tipping. The heavy metal base is designed for stability.
- Unplug the lamp from the power outlet before cleaning or when not in use for extended periods.
- The LED light source is integrated and not replaceable. Do not attempt to replace the bulb.

### **3. PACKAGE CONTENTS**

Verify that all components are present before assembly:

- LED Lamp Pole (multiple sections)
- Round Base
- Power Adapter
- RF-433 Remote Control (with pre-installed battery)
- User Manual (this document)

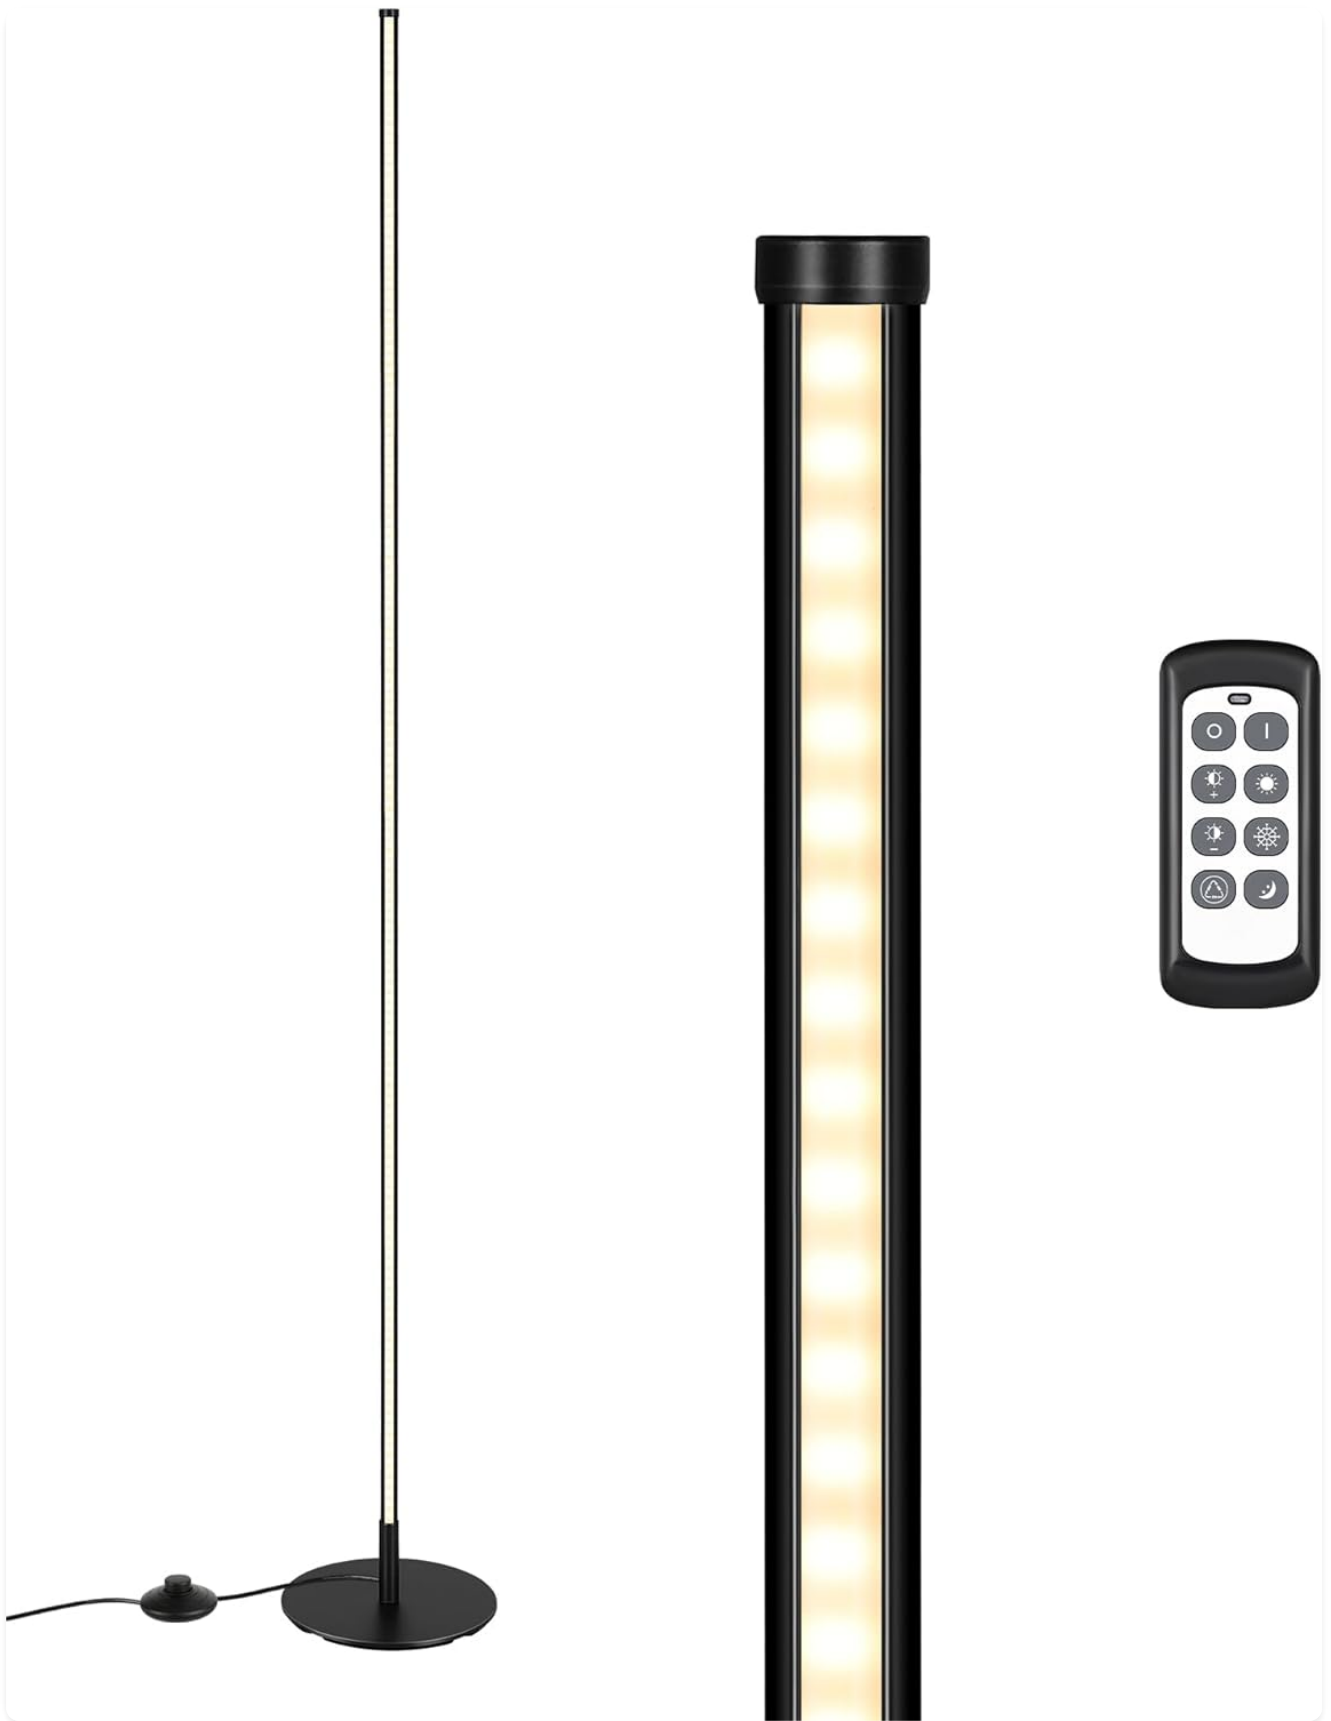


Figure 2: Included components of the lamp.

#### 4. SETUP AND ASSEMBLY

The EDISHINE LED Corner Floor Lamp is designed for quick and easy assembly. No tools are required.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, flat surface.
2. **Attach Lamp Pole to Base:** Take the bottom section of the lamp pole and screw it clockwise into the threaded hole in the center of the round base until secure.
3. **Assemble Lamp Pole:** Connect the remaining sections of the lamp pole by screwing them together clockwise. Ensure each section is tightly connected to form a straight, stable pole.
4. **Connect Power Adapter:** Plug the power adapter into the lamp's power input port, typically located near the base. Then, plug the adapter into a standard 120V wall outlet.
5. **Position the Lamp:** Place the assembled lamp in your desired corner or location. The lamp is designed to cast light against a wall for optimal ambiance.



Figure 3: Securely attach the lamp pole to the base.

## 5. OPERATING INSTRUCTIONS

Your EDISHINE LED Corner Floor Lamp offers multiple ways to control its lighting features.

### 5.1 Power On/Off

- **Foot Switch:** Lightly press the circular foot switch located on the power cord to turn the lamp ON or OFF.
- **Remote Control:** Press the 'ON' (⏻) button to turn the lamp ON, or the 'OFF' (⏻) button to turn it OFF.

### 5.2 Adjusting Brightness (Dimmable)

The lamp offers 7 brightness levels (10% to 100%).

- **Foot Switch:** Long press the foot switch to cycle through brightness levels from 10% to 100%. Release when the desired brightness is reached.
- **Remote Control:** Use the 'Brightness+' (★+) and 'Brightness-' (★-) buttons to incrementally adjust the brightness.

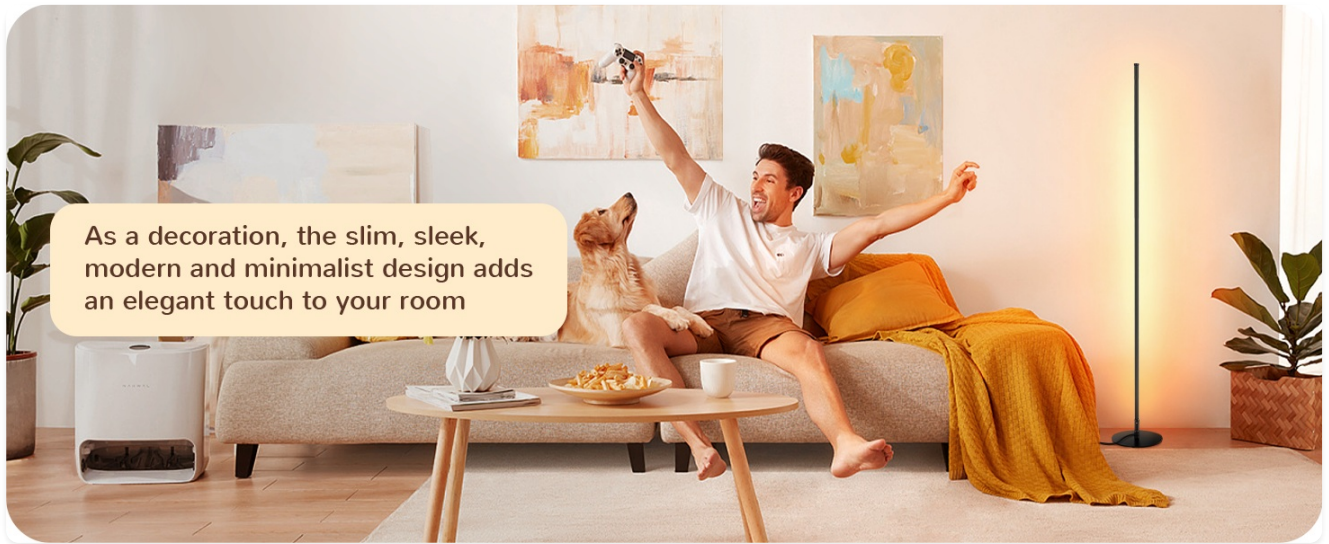


Figure 4: Adjusting brightness levels for various activities.

### 5.3 Changing Color Temperature (CCT)

The lamp provides 7 color temperatures ranging from 2700K (warm white) to 6000K (cool white).

- **Remote Control:** Use the 'CCT+' (\*+) and 'CCT-' (\*-) buttons to cycle through the 7 color temperature options.
- **Preset CCT:** The remote also has a '3 CCT' button (△) for quick access to common color temperatures.

# Dimmable & Memory Function

- Dimmable & Memory Function
- Memorize the brightness you set before turning it off



Figure 5: Visual representation of 7 color temperature options.

## 5.4 Night Light Mode

Activate the night light mode for a soft, warm glow (3000K, 30% brightness).

- **Remote Control:** Press the 'Night light Mode' (☾) button.




Figure 6: Night light mode provides a gentle, sleep-friendly illumination.

## 5.5 Memory Function

The lamp features a memory function that remembers your last brightness and color temperature setting when turned off and back on.

## RF-433 Remote Control

The remote allows you to adjust any mode you need without leaving your comfort seat

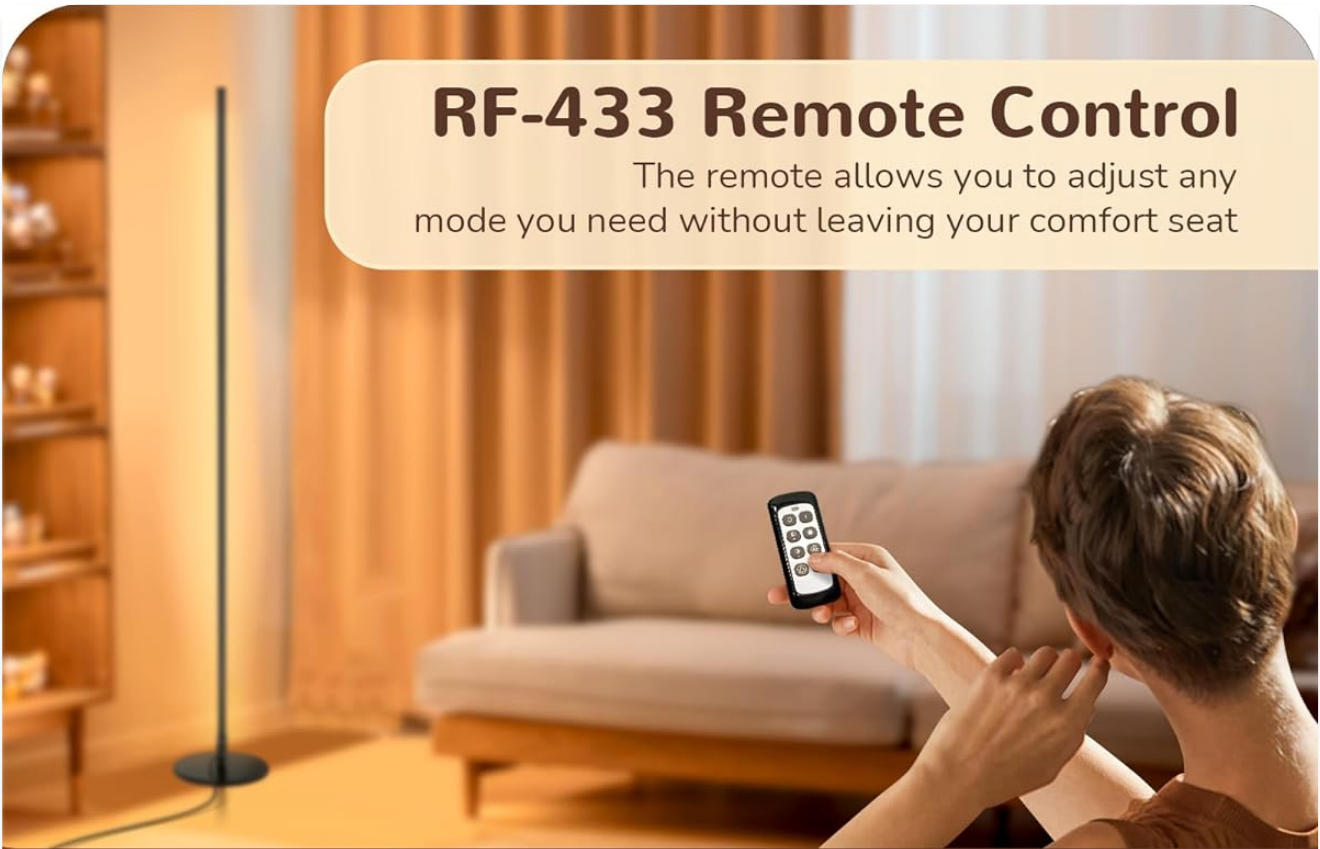

## Foot Step Switch

Free your waist and hands

Short Press: ON/OFF

Long Press: 10%-100% adjust the brightness



Figure 7: The lamp retains your preferred settings.

### 5.6 Remote Control Pairing (If Needed)

If your remote control is not responding, you may need to re-pair it with the lamp. Based on user experience, follow these steps:

1. Ensure the lamp is plugged in and powered on (via the wall outlet).
2. On the remote, long press the 'ON' (I) button.
3. Immediately after, long press the 'OFF' (O) button.
4. The lamp should turn off, indicating successful pairing.

# Atmosphere Lighting

Add a cozy mood for your room



Figure 8: RF-433 Remote Control and Foot Switch.

## 6. MAINTENANCE

To ensure the longevity and optimal performance of your EDISHINE LED Corner Floor Lamp, follow these simple maintenance guidelines:

- **Cleaning:** Unplug the lamp before cleaning. Use a soft, dry cloth to wipe down the lamp pole and base. Do

not use abrasive cleaners, solvents, or liquids, as they may damage the finish or electrical components.

- **Storage:** If storing the lamp for an extended period, disassemble it and store it in its original packaging in a dry, cool place to protect it from dust and damage.
- **Handling:** Avoid bending or applying excessive force to the lamp pole, as this may damage the internal LED strip.

## 7. TROUBLESHOOTING

If you encounter any issues with your lamp, please refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Lamp does not turn on.	Not plugged in; power outlet issue; loose connection; faulty adapter.	Ensure lamp is securely plugged into a working outlet. Check all connections. Try a different outlet. Contact customer support if adapter is suspected faulty.
Remote control not working.	Remote battery low/dead; remote not paired.	Replace remote battery. Re-pair the remote control following instructions in Section 5.6.
Light flickers or is unstable.	Loose connection; power fluctuation.	Check all lamp pole connections and power adapter connection. Ensure stable power supply.
Cannot change brightness/color.	Remote control issue; lamp malfunction.	Ensure remote battery is good and remote is paired. If issue persists, contact customer support.

If the problem persists after trying these steps, please contact EDISHINE Customer Support for further assistance.

## 8. SPECIFICATIONS

Feature	Detail
Model	B09NFD27TS
Dimensions (D x W x H)	7.8"D x 7.8"W x 57.5"H
Item Weight	5 Pounds
Light Source Type	Integrated LED
Wattage	19 watts
Voltage	120 Volts
Brightness	1100 Lumen
Color Temperature (CCT)	2700K - 6000K (7 levels)

Feature	Detail
Brightness Levels	10% - 100% (7 levels)
Control Method	RF-433 Remote Control, Foot Switch
Material	Aluminum, Metal, Acrylonitrile Butadiene Styrene
Lifespan	Over 30,000 hours



## 9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official EDISHINE brand store online. Keep your purchase receipt for warranty claims.

**EDISHINE Store:** <https://www.amazon.com/stores/EDISHINE/page/7F9DBDA3-794E-4306-8037-5ECC8933FD8C>