

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- > [Philips](#) /
- > [Philips HD9956/00 Baking Insert User Manual](#)

Philips HD9956/00

Philips HD9956/00 Baking Insert User Manual

Model: HD9956/00

INTRODUCTION

Thank you for choosing the Philips HD9956/00 Baking Insert. This accessory is designed to expand the versatility of your cooking appliance, allowing you to bake a variety of items such as muffins, cupcakes, and small cakes. This manual provides essential information for the safe and effective use, cleaning, and maintenance of your baking insert.



Image: A person and a child baking together, with a bowl of batter and eggs on the counter, illustrating the joy of baking with bakeware.

SAFETY INFORMATION

Please read this safety information carefully before using the baking insert. Failure to follow these instructions may result in personal injury or damage to the product.

- **Heat Resistance:** The baking insert is designed for use in high-temperature cooking environments, such as air fryers or ovens. Always ensure the insert is placed securely.
- **Handling Hot Insert:** Always use oven mitts or heat-resistant gloves when handling the baking insert during or immediately after cooking, as it will be extremely hot.
- **Placement:** Ensure the baking insert is placed on a stable, heat-resistant surface when removed from the appliance.
- **Food Safety:** Always ensure food is cooked to safe internal temperatures.
- **Cleaning:** Allow the insert to cool completely before cleaning to prevent thermal shock and potential damage.
- **Children:** Keep the baking insert out of reach of children, especially when hot.

PRODUCT OVERVIEW

The Philips HD9956/00 Baking Insert is a durable and robust accessory made from high-quality silicone. It is designed to fit compatible Philips air fryers and other square-shaped cooking appliances, enabling you to bake various treats with ease. Its non-stick properties and dishwasher-safe design ensure convenient use and cleaning.



Image: The Philips HD9956/00 Baking Insert, a black silicone square pan with integrated handles, shown from an angle to highlight its design.

SETUP

1. **Unpacking:** Carefully remove the baking insert from its packaging. Retain packaging for future storage or disposal.
2. **Initial Cleaning:** Before first use, wash the baking insert thoroughly with warm soapy water. Rinse

well and dry completely. This removes any manufacturing residues.

3. **Placement:** Ensure your cooking appliance (e.g., air fryer) is clean and ready for use. Place the baking insert securely into the basket or drawer of your appliance. Do not force it into place.

OPERATING INSTRUCTIONS

The Philips HD9956/00 Baking Insert is suitable for baking various items. Follow these general guidelines for optimal results:

- **Preparation:** Prepare your batter or dough according to your recipe. For best results with silicone, a light greasing or flouring may be beneficial for certain recipes, though silicone is generally non-stick.
- **Filling:** Pour or place your mixture into the baking insert. Avoid overfilling; leave sufficient space for rising. The insert has a capacity of 9 cups, suitable for muffins or cupcakes.
- **Cooking:** Place the filled baking insert into your preheated air fryer or oven. Follow your recipe's recommended cooking time and temperature. Silicone bakeware may sometimes require slight adjustments to cooking times compared to metal pans.
- **Removal:** Once baking is complete, carefully remove the hot baking insert from the appliance using oven mitts.
- **Cooling:** Allow baked goods to cool in the insert for a few minutes before attempting to remove them. This helps prevent sticking and maintains shape.



Image: Several square-shaped chocolate brownies with nuts, some on a white cake stand and one with a bite taken out, demonstrating baked goods that can be made using the insert.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your Philips HD9956/00 Baking Insert.

- **Cool Down:** Always allow the baking insert to cool completely before cleaning.

- **Dishwasher Safe:** The Philips HD9956/00 Baking Insert is dishwasher safe. Place it on the top rack for best results.
- **Hand Washing:** If hand washing, use warm water with a mild dish soap and a soft sponge or cloth. Avoid abrasive cleaners or scouring pads, as these can damage the silicone surface.
- **Drying:** Ensure the insert is thoroughly dry before storing to prevent water spots or residue buildup.
- **Storage:** Store the baking insert in a clean, dry place. Its flexible nature allows for easy storage.

TROUBLESHOOTING

If you encounter any issues with your baking insert, consider the following common solutions:

- **Food Sticking:**
 - Ensure the insert was lightly greased or floured, especially for recipes prone to sticking.
 - Allow baked goods to cool sufficiently before attempting to remove them.
- **Difficulty Cleaning Stains:**
 - For stubborn stains, soak the insert in warm soapy water for a period before scrubbing.
 - Ensure no abrasive cleaners are used.
- **Unusual Odor:**
 - New silicone products can sometimes have a faint odor. Wash thoroughly before first use.
 - If odors persist after use, ensure the insert is completely clean and dry before storage.

SPECIFICATIONS

Model Number	HD9956/00
Brand	Philips
Material	Silicone
Product Dimensions	22 x 22 x 8.9 cm (8.7 x 8.7 x 3.5 inches)
Capacity	9 Cups (e.g., for muffins/cupcakes)
Special Features	Dishwasher safe
Item Weight	463 g (16.3 oz)

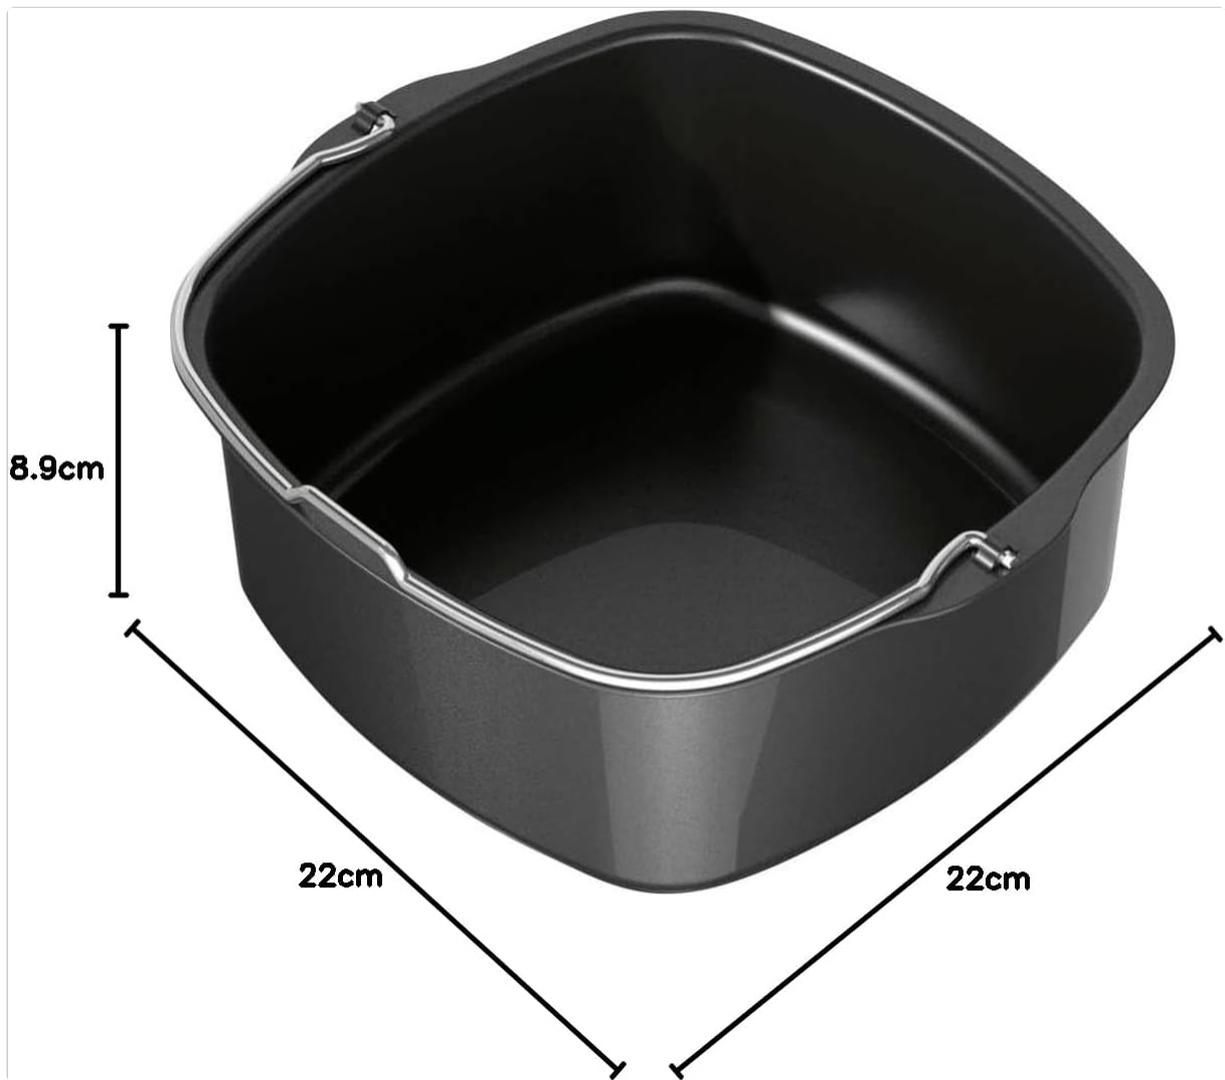


Image: Diagram illustrating the dimensions of the Philips HD9956/00 Baking Insert, showing its width, depth, and height.

WARRANTY AND SUPPORT

For warranty information or product support, please refer to the documentation provided with your original Philips appliance or visit the official Philips website. You can also contact Philips customer service for assistance with your HD9956/00 Baking Insert.

Online Support: www.philips.com/support