

[manuals.plus](#) /

› [TRESKO](#) /

› [TRESKO 2000W Infrared Heater Instruction Manual](#)

## TRESKO 2000W Infrared Heater

# TRESKO 2000W Infrared Heater Instruction Manual

Model: 2000W Infrared Heater

## 1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your TRESKO 2000W Infrared Heater. Please read these instructions carefully before installation and use, and retain them for future reference. This infrared heater is designed to provide efficient heating for both indoor and outdoor environments.



Image 1.1: TRESKO 2000W Infrared Heater, showing the main unit, remote control, and mounting bracket.

## 2. SAFETY INSTRUCTIONS

Always observe basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- **Read all instructions:** Familiarize yourself with the heater's operation and safety guidelines before use.
- **Placement:** Ensure the heater is installed at a safe distance from flammable materials (e.g., curtains, furniture). Maintain a minimum clearance as specified in the installation section.
- **Power Supply:** Connect the heater only to a grounded outlet with the correct voltage (220V). Do not overload electrical circuits.
- **Outdoor Use:** This heater is suitable for outdoor use and is corrosion-resistant. However, avoid direct exposure to heavy rain or extreme weather conditions.
- **Children and Pets:** Keep children and pets away from the heater, especially when it is in operation, as surfaces can become hot.

- **Maintenance:** Disconnect the power supply before cleaning or performing any maintenance.
- **Damage:** Do not operate the heater with a damaged cord or plug, or if the heater malfunctions or has been dropped or damaged in any manner. Contact customer support for assistance.
- **Ventilation:** Ensure adequate ventilation when using the heater, especially indoors.



Image 2.1: The heater installed on a patio, demonstrating its robust and safe design for outdoor environments.

### 3. PACKAGE CONTENTS

Verify that all components are present and undamaged upon unpacking:

- TRESKO 2000W Infrared Heater Unit
- Remote Control
- Wall Mounting Bracket
- Instruction Manual

## 4. SETUP AND INSTALLATION

The TRESKO Infrared Heater is designed for easy wall mounting. Follow these steps for secure installation:

- Choose Location:** Select a suitable wall location, ensuring sufficient clearance from ceilings, walls, and flammable objects. The heater is suitable for both indoor and outdoor use.
- Mounting Bracket:** Securely attach the provided wall mounting bracket to the chosen surface using appropriate fasteners (not included, depending on wall type). Ensure the bracket is level and can support the heater's weight (approximately 4 kg).
- Attach Heater:** Carefully attach the heater unit to the mounting bracket. Ensure it is firmly secured.
- Adjust Angle:** The heater features an adjustable tilt angle. Loosen the adjustment screws on the bracket, set the desired angle to direct heat, and then tighten the screws firmly.
- Power Connection:** Plug the power cord into a suitable 220V grounded electrical outlet. The power cord length is 1.45 meters.

# Facile montaggio a parete

Easy wall mounting



750 W      1500 W      2000 W



-  MASSIMA RIFLESSIONE
-  GRIGLIA DI PROTEZIONE IN ACCIAIO INOX
-  RESISTENTE ALLE INTEMPERIE
-  ALLOGGIAMENTO IN ALLUMINIO
-  ESTREMAMENTE ROBUSTO

Image 4.1: Visual guide for easy wall mounting, highlighting the heater's robust construction and features.

## 5. OPERATING INSTRUCTIONS

The TRESKO Infrared Heater is operated using the included remote control.



Image 5.1: The heater's modern design and remote control functionality, illustrating quick heat-up and power levels.

### 5.1. Remote Control Functions

- **Power Button ( )**: Press to turn the heater ON or OFF.
- **Heat Level Buttons**: Select from three power levels:
  - **750W**: For lower heat output.
  - **1500W**: For medium heat output.
  - **2000W**: For maximum heat output.

## 5.2. Initial Operation

1. Ensure the heater is securely mounted and plugged into a grounded power outlet.
2. Press the Power button on the remote control to turn the heater ON. The quartz tube will begin to heat up rapidly.
3. Select your desired heat level (750W, 1500W, or 2000W) using the corresponding buttons on the remote.
4. To turn OFF the heater, press the Power button again.

The heater operates silently, making it suitable for use in various environments without causing disturbance.

---

## 6. MAINTENANCE

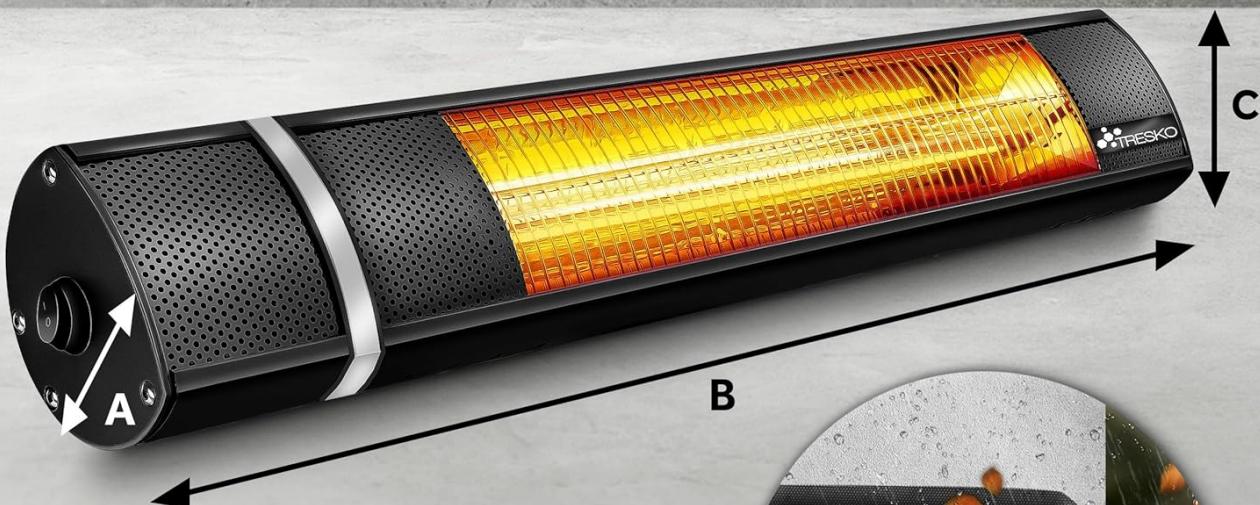
Regular maintenance ensures optimal performance and longevity of your heater.

- **Cleaning:** Before cleaning, always unplug the heater and allow it to cool completely. Use a soft, damp cloth to wipe the exterior surfaces. Do not use abrasive cleaners or solvents.
- **Protective Grille:** The stainless steel protective grille can be gently wiped to remove dust. Do not attempt to remove the grille.
- **Storage:** If storing the heater for an extended period, ensure it is clean and dry. Store it in a cool, dry place, ideally using the included protective cover.
- **Corrosion Resistance:** The heater is designed to be corrosion-resistant, making it durable for outdoor use.

# Dimensioni

## Measurements

**A** 16,5 cm **C** 10,5 cm  
**B** 63 cm **1,45 m**



ALL'INTERNO E  
ALL'ESTERNO



RESISTENTE ALLA  
CORROSIONE



COPERTURA PRO-  
TETTIVA INCLUSA



Image 6.1: Heater dimensions and features, including its suitability for indoor/outdoor use and corrosion resistance.

## 7. TROUBLESHOOTING

If you encounter issues with your TRESKO Infrared Heater, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Heater does not turn on.	No power supply; Remote control battery low; Heater switch off.	Check power cord connection and wall outlet; Replace remote control batteries; Ensure heater is switched on via remote.
Heater produces insufficient heat.	Incorrect heat level selected; Heater too far from target area.	Select a higher heat level (1500W or 2000W); Adjust heater's tilt angle or reposition closer to the area requiring heat.

Problem	Possible Cause	Solution
Remote control not working.	Batteries depleted; Obstruction between remote and heater sensor.	Replace batteries in the remote control; Ensure a clear line of sight to the heater's sensor.

If the problem persists after attempting these solutions, please contact customer support.

## 8. SPECIFICATIONS

**Brand:**

TRESKO

**Model:**

2000W Infrared Heater

**Color:**

Black

**Product Dimensions (L x W x H):**

63 x 16.5 x 10.5 cm

**Weight:**

4 kg

**Wattage:**

2000 watts (with 3 adjustable levels: 750W, 1500W, 2000W)

**Voltage:**

220 Volts

**Automatic Shut-off:**

Yes

**Number of Speeds/Heat Levels:**

3

**Special Features:**

Adjustable tilt angle, Remote control, Instant-Heat quartz tube, Corrosion-resistant, Silent operation, Stainless steel protective grille, Aluminum housing

**Form Factor:**

Tower (Wall-mounted)

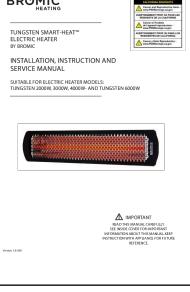
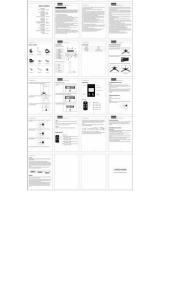
**Indoor/Outdoor Use:**

Outdoor (also suitable for indoor use)

## 9. WARRANTY AND SUPPORT

TRESKO products are manufactured to high-quality standards. For warranty information, technical support, or replacement parts, please refer to the purchase documentation or contact your retailer. Please have your product model and purchase date available when contacting support.

## Related Documents - 2000W Infrared Heater

 <b>CE</b>	<p><a href="#"><u>TRESKO THSL-009 Infrared Standing Heater User Manual</u></a></p> <p>Comprehensive user manual for the TRESKO THSL-009 infrared standing heater, covering safety, operation, installation, maintenance, and technical specifications.</p>
	<p><a href="#"><u>4-Element Infrared Quartz Heater User Manual   Model HT1168_B</u></a></p> <p>Comprehensive user manual for the 4-Element Infrared Quartz Heater (Model HT1168_B). Includes safety instructions, operating procedures, specifications, troubleshooting guide, and maintenance tips for optimal performance and safety.</p>
	<p><a href="#"><u>Bromic Tungsten Smart-Heat Electric Heater Installation, Instruction, and Service Manual</u></a></p> <p>Comprehensive manual for Bromic Tungsten Smart-Heat Electric Heaters, covering installation, operation, maintenance, and troubleshooting for 2000W, 3000W, 4000W, and 6000W models.</p>
	<p><a href="#"><u>TRUSTECH Patio Heater PHF-1500R User Manual</u></a></p> <p>User manual for the TRUSTECH Patio Heater, Model PHF-1500R. Provides operating instructions, safety features, maintenance guidelines, troubleshooting tips, and warranty information.</p>
	<p><a href="#"><u>PATIO BOSS NX-1500R Electric Outdoor Heater Owner's Manual</u></a></p> <p>Comprehensive owner's manual for the PATIO BOSS NX-1500R electric outdoor heater, covering safety instructions, installation, operation, maintenance, and storage.</p>