

DWD-Company GmbH & Co. KG TRESKO 3000W Infrared Heater (Model B09NH285T8)

TRESKO 3000W Infrared Heater Instruction Manual

Model: B09NH285T8

Brand: DWD-Company GmbH & Co. KG

1. INTRODUCTION

Thank you for choosing the TRESKO 3000W Infrared Heater. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your new infrared heater. Please read this manual thoroughly before use and retain it for future reference.

This infrared heater is designed to provide efficient and comfortable warmth for both indoor and outdoor environments, such as patios, gardens, workshops, or indoor spaces. Its advanced infrared technology ensures rapid heating and energy efficiency.

2. SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow these basic precautions:

- Read all instructions before using this heater.
- Ensure the power supply voltage matches the rating on the heater's label.
- Do not operate any heater with a damaged cord or plug, or after the heater malfunctions or has been dropped or damaged in any manner.
- Do not use the heater in areas where gasoline, paint, or flammable liquids are stored.
- Keep combustible materials such as furniture, pillows, bedding, papers, clothes, and curtains at least 1 meter (3 feet) from the front of the heater and away from the sides and rear.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- Always unplug the heater when not in use.
- Do not use this heater in bathrooms, laundry areas, or similar indoor locations. Never locate heater where it may fall into a bathtub or other water container.
- Supervise children and pets when the heater is in operation.

- The heater is corrosion-resistant and suitable for outdoor use, but avoid direct exposure to heavy rain or extreme weather conditions.

3. PACKAGE CONTENTS

Please check the package contents upon unpacking:

- TRESKO 3000W Infrared Heater Unit
- Remote Control
- Wall Mounting Brackets (2x)
- Protective Cover
- Instruction Manual (this document)



Image 3.1: Contents of the TRESKO Infrared Heater package, including the heater unit, remote control, and mounting brackets.

4. PRODUCT OVERVIEW

The TRESKO Infrared Heater features a modern design with a robust aluminum housing and a stainless steel protective grille, ensuring durability and safety. It utilizes low-glare infrared tubes for efficient heat conversion.



Image 4.1: Overview of the heater's modern design and key features, including quick heating, 1.45m cable length, three heat settings, and a maximum power of 3000W.



Image 4.2: The heater's robust and safe construction, featuring low-glare infrared tubes, individual adjustability, and ease of installation.

5. SETUP AND INSTALLATION

The TRESKO Infrared Heater is designed for easy wall mounting to save space. Follow these steps for installation:

1. Choose a suitable location for mounting. Ensure there is sufficient clearance from combustible materials (at least 1 meter from the front, and adequate space from sides and rear).
2. Mark the drilling points for the wall mounting brackets. Use a level to ensure the heater will be installed horizontally.
3. Drill holes and insert appropriate wall plugs (if necessary, depending on wall material).
4. Securely attach the two wall mounting brackets to the wall using screws.
5. Carefully attach the heater unit to the mounting brackets. Ensure it is securely fastened.
6. Adjust the tilt angle of the heater as desired. The adjustable tilt angle allows for targeted heat distribution.

Einfache Wandmontage

Easy wall mounting



MAXIMALE
REFLEKTION



EDELSTAHL
SCHUTZGITTER



ALLWETTER
BESTÄNDIG



ALUMINIUM
GEHÄUSE



EXTREM
ROBUST



Image 5.1: Illustration of the easy wall mounting process and the heater's durable construction materials.

6. OPERATING INSTRUCTIONS


Your TRESKO Infrared Heater comes with a remote control for convenient operation.

1. **Power On/Off:** Plug the heater into a suitable power outlet. Use the power button on the remote control to turn the heater on or off.
2. **Adjusting Heat Settings:** The heater has three adjustable heat settings: 1000W, 2000W, and 3000W. Use the corresponding buttons on the remote control to select your desired heat output.
3. **Adjusting Tilt Angle:** Manually adjust the tilt angle of the heater to direct warmth precisely where it is needed.

The heater operates quietly, making it suitable for various environments without causing disturbance.



Image 6.1: The heater provides comfortable warmth for enjoyable evenings outdoors.

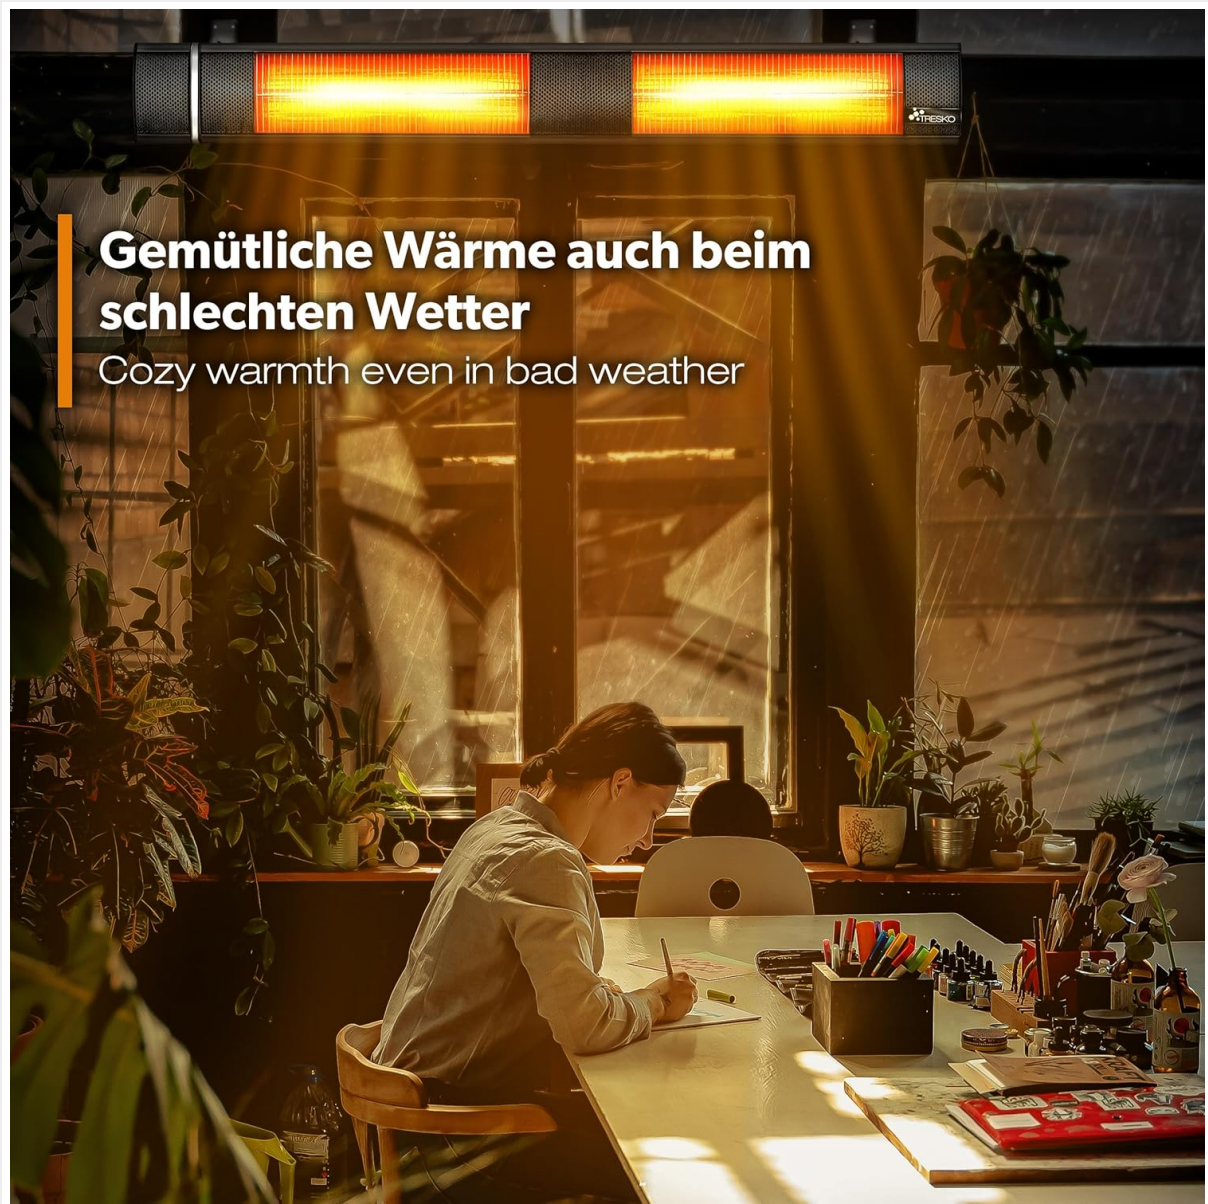

Gemütliche Wärme auch beim schlechten Wetter

Cozy warmth even in bad weather

Image 6.2: The heater ensures cozy warmth indoors, even during inclement weather.

7. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your heater.

- **Cleaning:** Before cleaning, always unplug the heater and allow it to cool down completely. Use a soft, damp cloth to wipe the exterior surfaces. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use for extended periods, store the heater in a cool, dry place. Use the provided protective cover to shield it from dust and moisture.
- **Inspection:** Periodically check the power cord and plug for any signs of damage. If any damage is found, do not use the heater and contact customer support.

8. TROUBLESHOOTING

If you encounter issues with your TRESKO Infrared Heater, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Heater does not turn on.	No power supply. Remote control battery low. Overheat protection activated.	Check if the heater is properly plugged in. Replace remote control batteries. Unplug the heater, let it cool down for 10-15 minutes, then plug it back in.
Heater produces insufficient heat.	Incorrect heat setting. Heater too far from target area.	Select a higher heat setting (2000W or 3000W). Reposition the heater closer to the area requiring heat, or adjust the tilt angle.
Unusual noise during operation.	Loose mounting. Internal component issue.	Ensure the heater is securely mounted. If noise persists, discontinue use and contact customer support.

If the problem persists after attempting these solutions, please contact customer support.

9. SPECIFICATIONS

- **Model:** TRESKO 3000W Infrared Heater (B09NH285T8)
- **Power Output:** 1000W / 2000W / 3000W (adjustable)
- **Dimensions (L x W x H):** 96 x 16.5 x 10.5 cm (37.8 x 6.5 x 4.1 inches)
- **Cable Length:** 1.45 meters (approx. 4.75 feet)
- **Voltage:** Standard household voltage (refer to product label for exact specifications)
- **Material:** Aluminum housing, Stainless steel protective grille
- **Features:** Remote control, Wall mountable, Indoor & Outdoor use, Corrosion-resistant, Low-glare infrared tubes, Quiet operation
- **Manufacturer:** DWD-Company GmbH & Co. KG

Abmessungen

Measurements

A 16,5 cm

C 10,5 cm

B 96 cm

1,45 m



Image 9.1: Detailed measurements and key features of the TRESKO Infrared Heater.

10. WARRANTY AND SUPPORT

For warranty information, technical support, or any inquiries regarding your TRESKO Infrared Heater, please contact the manufacturer directly:

DWD-Company GmbH & Co. KG

Please refer to your purchase documentation or the manufacturer's website for specific contact details and warranty terms applicable to your region.