#### Manuals+

Q & A | Deep Search | Upload

#### manuals.plus /

- Microsoft /
- Microsoft Xbox Series S Gaming Console User Manual E93MSRRS00144

#### Microsoft Xbox Series S

## Microsoft Xbox Series S Gaming Console User Manual

Model: E93MSRRS00144

Overview Setup Operation Maintenance Troubleshooting Specifications Warranty & Support

## 1. PRODUCT OVERVIEW

The Microsoft Xbox Series S is an all-digital gaming console designed for next-generation gaming experiences. It offers high performance in a compact form factor, featuring advanced hardware for immersive gameplay and rapid loading times. Key features include a custom 512GB NVMe SSD for minimized load times, Quick Resume for seamless game switching, and 3D Spatial Sound technology for an enhanced audio experience. The console supports thousands of games across four generations of Xbox titles.



Image 1.1: The Xbox Series S console in white, positioned vertically, with a matching white wireless controller and two black cables (HDMI and power) in the foreground.

## 2. INITIAL SETUP

## 2.1 Unpacking and Component Check

Before beginning, ensure all components are present in the packaging:

- Xbox Series S Console
- Xbox Wireless Controller
- HDMI Cable
- Power Cable

## 2.2 Connecting the Console

- Positioning: Place the Xbox Series S on a stable, flat surface with adequate ventilation. Ensure no vents are
  obstructed.
- 2. Power Connection: Connect the power cable to the console's power port and then to a wall outlet.
- 3. **HDMI Connection:** Connect one end of the HDMI cable to the HDMI OUT port on the console and the other end to an HDMI input on your television or monitor.
- 4. **Network Connection (Optional):** For a wired internet connection, connect an Ethernet cable from your router to the Ethernet port on the console. For wireless, setup will occur during initial power-on.



Image 2.1: Rear view of the Xbox Series S console, highlighting the various ports including Ethernet, USB, HDMI, and power input.

## 2.3 Initial Power-On and System Configuration

- 1. Power On: Press the Xbox button on the front of the console or on the controller to power on the system.
- 2. **Controller Pairing:** If the controller does not automatically pair, press and hold the Pair button on the console (small circular button near the USB port) and then press and hold the Pair button on the controller (small circular button on the top edge, near the USB port) until the Xbox button on the controller flashes.
- 3. **On-Screen Setup:** Follow the on-screen prompts to select your language, region, connect to a wireless network (if not using wired Ethernet), and sign in with your Microsoft account.
- 4. System Updates: The console may require a system update. Allow the update to complete before proceeding.

## 3. OPERATING INSTRUCTIONS

## 3.1 Powering On and Off

- To Power On: Press the Xbox button on the console or the Xbox button on your paired controller.
- **To Power Off:** Press and hold the Xbox button on your controller until the Power Center appears, then select "Turn console off." Alternatively, press and hold the Xbox button on the console for 10 seconds until it powers down.
- Sleep Mode: A quick press of the Xbox button on the controller or console will put the system into Instant-On (sleep) mode, allowing for quick resume and background updates.

## 3.2 Controller Usage

The Xbox Wireless Controller is your primary interface for navigating the console and playing games. Familiarize yourself with the buttons and their functions:

- Xbox Button: Powers on the console/controller, opens the Guide.
- View Button: Provides additional information or actions in games and apps.
- Menu Button: Opens context-sensitive menus.
- D-Pad, Left/Right Sticks: Navigation and movement.
- A, B, X, Y Buttons: Action buttons, typically used for confirmation, cancellation, or specific in-game actions.
- Triggers (LT, RT) & Bumpers (LB, RB): Used for various in-game actions.
- Share Button: Captures screenshots and game clips.

## 3.3 Game Management

- Downloading Games: Access the Microsoft Store or Xbox Game Pass library to download digital games.
- Launching Games: Select a game from your "My games & apps" library or the Home screen to launch it.
- Quick Resume: The Xbox Series S supports Quick Resume, allowing you to switch between multiple games instantly, picking up exactly where you left off.

## 3.4 Audio Settings

The console supports advanced audio technologies like Dolby Atmos and DTS 5.1. These can be configured in the system settings under "General" > "Volume & audio output" to enhance your immersive experience with 3D Spatial Sound.

## 4. MAINTENANCE

## 4.1 Cleaning the Console

- Exterior: Use a soft, dry, lint-free cloth to clean the exterior surfaces of the console and controller.
- Vents: Gently wipe dust from the ventilation grilles. Do not use compressed air directly into the vents as it can push dust further inside.
- Avoid Liquids: Do not use liquid cleaners, solvents, or abrasive materials.

#### 4.2 Ventilation

Ensure the console is placed in an area with good airflow. Avoid placing it in enclosed cabinets or on soft surfaces that can block the vents. Proper ventilation is crucial for optimal performance and longevity.

## 4.3 Software Updates

The Xbox Series S regularly receives system updates to improve performance, add features, and enhance security. Ensure your console is connected to the internet to receive these updates. Updates can be configured to install automatically in Instant-On mode.

## 5. TROUBLESHOOTING

Issue	Possible Solution
Console does not power on.	Verify the power cable is securely connected to both the console and a working wall outlet.
	Try a different power outlet.
	Ensure the power brick (if applicable) light is on.

Issue	Possible Solution
No display on TV/monitor.	<ul> <li>Check that the HDMI cable is securely connected to both the console and the TV.</li> <li>Ensure your TV is set to the correct HDMI input source.</li> <li>Try a different HDMI cable or HDMI port on your TV.</li> <li>Restart the console and TV.</li> </ul>
Controller not connecting or disconnecting.	<ul> <li>Ensure the controller has fresh batteries or is fully charged.</li> <li>Re-pair the controller by pressing the Pair buttons on both the console and controller.</li> <li>Move closer to the console to ensure a clear wireless signal.</li> <li>Update controller firmware via console settings.</li> </ul>
Cannot connect to Xbox Live/Internet.	<ul> <li>Check your network cable connection (if wired) or Wi-Fi settings.</li> <li>Restart your router and modem.</li> <li>Test your network connection through the console's network settings.</li> <li>Verify Xbox Live service status online.</li> </ul>

# 6. TECHNICAL SPECIFICATIONS

Feature	Detail
Model Number	E93MSRRS00144
CPU	8X Cores @ 3.6 GHz (3.4 GHz w/SMT) Custom Zen 2 CPU
GPU	4 TFLOPS, 20 CUs @1.565 GHz Custom RDNA 2 GPU
Memory	10GB GDDR6 (8GB @ 224 GB/s, 2GB @ 56 GB/s)
Internal Storage	512GB Custom NVMe SSD
Video Capabilities	High Dynamic Range (HDR), HDMI 2.1, Auto Low Latency Mode, HDMI Variable Refresh Rate, AMD FreeSync
Performance Target	1440p @ 60 FPS, up to 120 FPS
Audio System	3D Spatial Sound, Dolby TrueHD with Atmos, DTS 5.1, L-PCM (up to 7.1), Dolby Digital 5.1
Connectivity	1x HDMI 2.1, 3x USB 3.1, 1x RJ-45 Ethernet, 802.11ac 2x2 Wi-Fi
Dimensions	5.95 x 2.56 x 10.83 inches
Weight	4.25 pounds

Note: Specifications are subject to change without notice.

## 7. WARRANTY AND SUPPORT

## 7.1 Manufacturer's Warranty

This product is covered by a limited manufacturer's warranty. Specific terms and conditions, including warranty period and coverage details, are typically provided with the product packaging or can be found on the official Microsoft Xbox support website. Please retain your proof of purchase for warranty claims.

## 7.2 Customer Support

For technical assistance, troubleshooting, or service inquiries, please visit the official Microsoft Xbox Support website. You can find comprehensive FAQs, troubleshooting guides, and contact options there.

Official Microsoft Store: Visit the Microsoft Store on Amazon

© 2025 Microsoft Corporation. All rights reserved. Xbox Series S is a trademark of Microsoft Corporation.

#### **Related Documents - Xbox Series S**



#### Xbox 360 Chatpad User Manual and Guide

Comprehensive user guide for the Microsoft Xbox 360 Chatpad. Learn about its features, setup, connecting to your controller, using the keyboard, troubleshooting common issues, and important safety information. Compatible with Xbox 360 consoles and controllers.



#### How to Create a Bootable Windows 10 USB and Install Windows

A comprehensive guide on creating a bootable Windows 10 USB drive using Microsoft's Media Creation Tool and performing a clean installation on a PC, including boot selection and drive management.



#### Microsoft Surface Pro 5 Teardown: Detailed Component Analysis and Repairability

Explore the internal architecture of the Microsoft Surface Pro 5 with this comprehensive teardown guide. Discover detailed specifications, component identification, and insights into its repairability score.



## Xbox One X Project Scorpio Edition Motherboard Replacement Guide

A detailed guide from iFixit on how to replace the motherboard of the Xbox One X Project Scorpio Edition, manufactured by Microsoft in 2017. Includes step-by-step instructions and tool requirements.



## How to Connect to Bluetooth on Windows 11

A comprehensive guide detailing two methods to enable and connect Bluetooth devices on a Windows 11 PC, including step-by-step instructions and visual descriptions.



## Xbox One and Kinect Sensor Product Manual: Safety, Warranty, and Usage Guide

Comprehensive safety, warranty, and usage guide for the Xbox One console and Kinect sensor. Covers electrical safety, battery precautions, console care, health warnings for gamers, and regulatory information.