



Manuals.plus /

› SMOOSAT /

› SmooSat E9 PRO Electric Scooter User Manual

## SMOOSAT E9 PRO

# SmooSat E9 PRO Electric Scooter User Manual

Model: E9 PRO | Brand: SMOOSAT

## 1. PRODUCT OVERVIEW

The SmooSat E9 PRO Electric Scooter is designed for kids aged 8 and up, offering a fun and safe riding experience with its colorful rainbow lights, adjustable speed and height, and foldable design. It features a durable aluminum alloy frame and an intuitive LED display.




Figure 1: SmooSat E9 PRO Electric Scooter (Pink model shown)

## 2. SETUP AND ASSEMBLY

Your SmooSat E9 PRO Electric Scooter comes partially assembled. Follow these steps to complete the setup and prepare for first use.

### 2.1 Unboxing and Initial Inspection

1. Carefully open the product packaging and remove all components.
2. Inspect the scooter and all included accessories for any signs of damage.
3. Verify that all parts listed in the packing list are present: E9 PRO Kids Electric Scooter, Charger, 5mm Allen Wrench, Quick Start Guide.

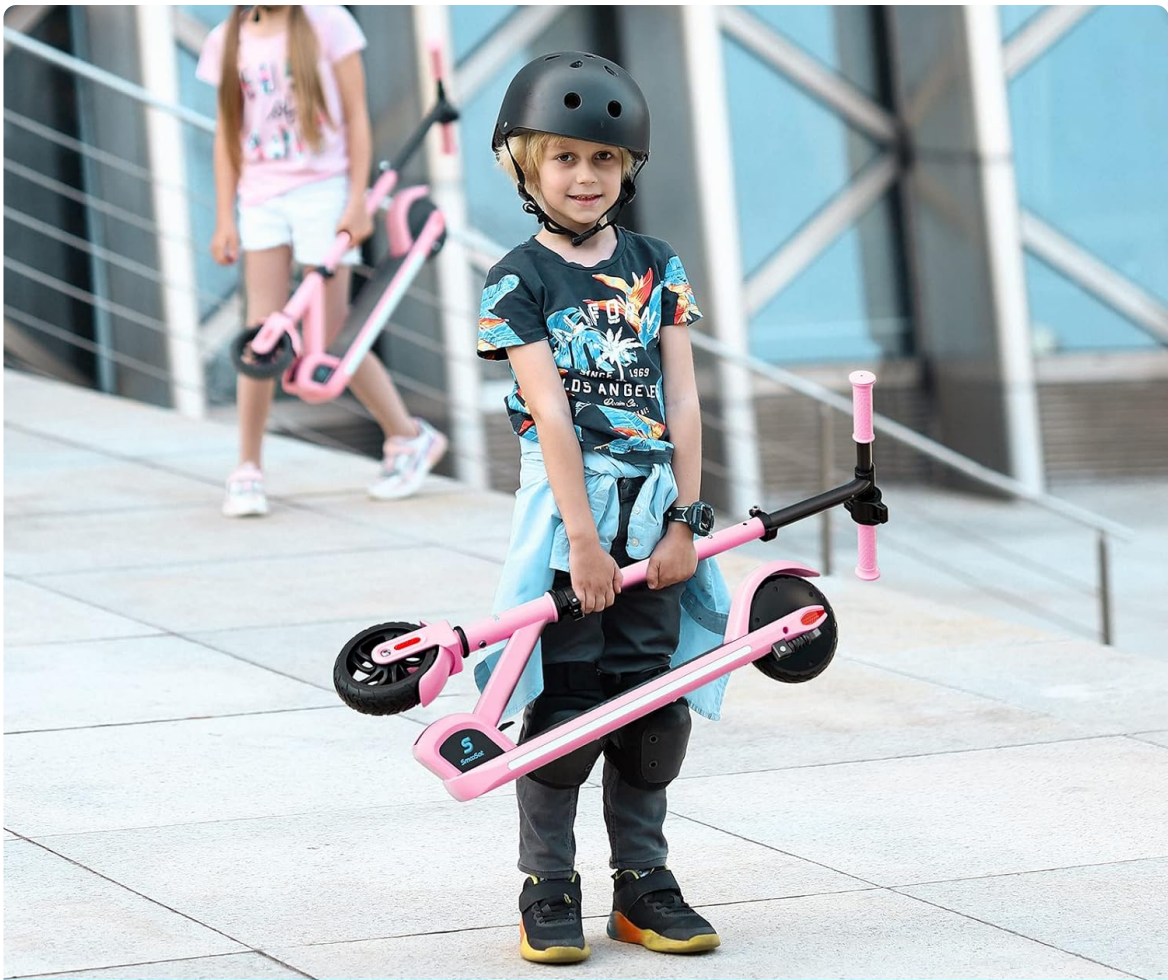

## EASY TO FOLD AND CARRY

Folded Size 29" x 14" x 10"

Figure 2: Folded scooter as it appears upon unboxing.

For a visual guide on unboxing and initial setup, please refer to the official unboxing video below.

Your browser does not support the video tag.

Video: SmooSat E9 PRO Electric Scooter - Unboxing by Users. This video demonstrates the unboxing process and initial handling of the scooter.

### 2.2 Handlebar Assembly

1. Locate the handlebar and the main stem of the scooter.
2. Use the provided 5mm Allen Wrench to loosen the screw on the handlebar clamp.
3. Carefully insert the handlebar into the stem, ensuring the wires are not pinched.
4. Align the handlebar and tighten the screw firmly with the Allen Wrench to secure it in place.

For detailed assembly steps, watch the installation tutorial video:

Your browser does not support the video tag.

Video: SMOOSAT E9 PRO Electric Scooter Installation Tutorial. This video provides step-by-step instructions for assembling the scooter, including handlebar attachment.

### 2.3 Initial Charging

Before first use, fully charge the scooter's battery. The charging port is located near the handlebar base.

- Open the rubber cover on the charging port.
- Connect the charger to the scooter and then plug it into a standard wall outlet.
- The charging indicator light on the charger will change (e.g., from red to green) when charging is complete.
- Charging time is approximately 5 hours for a full charge.

## 3. OPERATING INSTRUCTIONS

---

### 3.1 Powering On/Off and Speed Adjustment

- To power on the scooter, long press the power button on the handlebar display. The LED display will illuminate.
- To change speed modes (Economical, Normal, Sport), short press the power button. The display will show 'E', 'N', or 'S' respectively.
  - **Economical (E) Mode:** Max speed 5 mph. Ideal for beginners.
  - **Normal (N) Mode:** Max speed 8 mph.
  - **Sport (S) Mode:** Max speed 10 mph. For skilled riders.
- To power off the scooter, long press the power button again.

## LED DISPLAY & 3 SAFE SPEEDS

- E (Economical)  
Max Speed - 5mph
- N (Normal)  
Max Speed - 8mph
- S (Sport)  
Max Speed - 10mph



Figure 3: Handlebar LED display showing speed modes and battery level.

### 3.2 Rainbow LED Lights

The scooter features colorful rainbow LED lights along the pedals for enhanced visibility and fun. These lights can be controlled via a dedicated button on the handlebar.

- Short press the light button to cycle through different light modes and colors.
- Long press the light button to turn the lights on or off.



Figure 4: Scooter with illuminated rainbow LED lights.

### 3.3 Adjustable Height

The handlebar height can be adjusted to accommodate riders of different heights (4.0~5.3 feet).

- Open the quick-release clamp on the stem.
- Adjust the handlebar to one of the three preset heights: 28 in, 32 in, or 36 in. Ensure the locking pin clicks into place.
- Close the quick-release clamp firmly to secure the handlebar.

# 3 ADJUSTABLE HEIGHTS



## Heights

28in /32in /36in



## Rider

4.0ft-5.3ft



## Age


8 Years+

Figure 5: Adjustable handlebar heights for various rider sizes.

### 3.4 Folding and Kickstand

The scooter features a one-step folding mechanism for easy transport and storage.

- To fold: Press the folding mechanism release lever and fold the stem down until it locks into place.
- To unfold: Release the folding mechanism and pull the stem up until it clicks into the riding position.
- The convenient kickstand allows for easy parking and resting the scooter upright. Simply push it down with your foot to deploy.

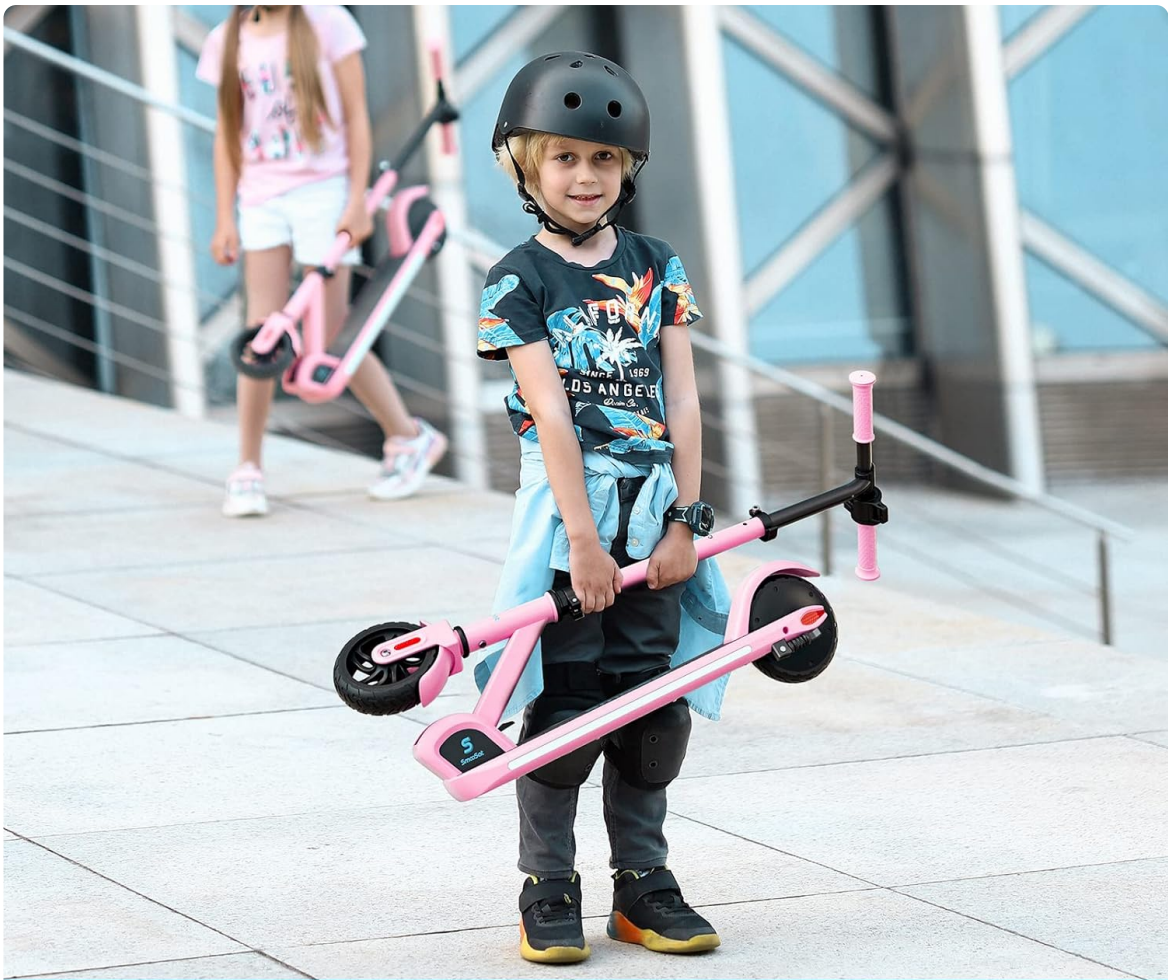

## EASY TO FOLD AND CARRY

 Folded Size 29" x 14" x 10" 

Figure 6: Easy to fold and carry design.



Figure 7: Convenient kickstand for easy parking.

See the scooter in action, demonstrating its features and usage:

Your browser does not support the video tag.

Video: Christmas is coming - SmooSat E9 Pro Electric Kids Scooter. This video showcases the scooter's features, including its lights and general operation.

## 4. MAINTENANCE

Proper maintenance ensures the longevity and safe operation of your SmooSat E9 PRO Electric Scooter.

### 4.1 Charging and Battery Care

- Always use the original charger provided with the scooter.
- Do not overcharge the battery. Disconnect the charger once the battery is full.
- If storing the scooter for an extended period, ensure the battery is charged to about 50-70% and

recharge it every 30-60 days to prevent deep discharge.

- Avoid exposing the battery to extreme temperatures.

## 4.2 Cleaning and Storage

- Clean the scooter with a damp cloth. Do not use harsh chemicals or abrasive materials.
- Avoid direct water spray or submersion, as this can damage electrical components.
- Store the scooter in a cool, dry place away from direct sunlight and moisture.

## 5. TROUBLESHOOTING

If you encounter issues with your SmooSat E9 PRO, refer to the following common troubleshooting tips:

Problem	Possible Cause	Solution
Scooter does not power on.	Low battery; Power button not pressed correctly.	Charge the battery fully. Long press the power button for 2 seconds.
Scooter not charging.	Charger not connected properly; Faulty charger/port.	Ensure secure connection. Try a different outlet. Contact support if issue persists.
Motor does not engage.	Speed not reaching 3 MPH for kick-start; Low battery.	Ensure the scooter is moving at least 3 MPH before engaging the throttle. Charge battery.

For more complex issues, please refer to the official User Guide PDF or contact customer support.

## 6. SPECIFICATIONS

Feature	Specification
Brand	SMOOSAT
Model Name	E9 PRO
Age Range (Description)	Youth (8+ years)
Weight Limit	132 Pounds (60 KG)
Product Dimensions	32.1"L x 14.6"W x 37.4"H
Item Weight	14 Pounds
Motor Power	130 W Brushless Motor
Battery Capacity	54 Wh Rechargeable Battery
Maximum Speed	10 mph (adjustable to 5 mph, 8 mph)
Maximum Distance Range	5 Miles
Charging Time	5 Hours
Handlebar Height	Adjustable (28 in / 32 in / 36 in)
Frame Material	Aluminum
Special Features	Rainbow LED Lights, Foldable, LED Display

## 7. WARRANTY AND SUPPORT

The SmooSat E9 PRO Electric Scooter comes with a **180-day warranty**. For any product-related inquiries, technical support, or warranty claims, please refer to the official user guide or contact SmooSat customer service.

**Official User Guide:** [Download PDF User Guide](#)

**Manufacturer:** SmooSat

**Brand Store:** [Visit SmooSat Store on Amazon](#)