

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [PRITOM](#) /

› [PRITOM K10 Kids Tablet User Manual](#)

PRITOM K10

PRITOM K10 Kids Tablet User Manual

MODEL: K10

INTRODUCTION

Thank you for choosing the PRITOM K10 Kids Tablet. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your new device. Please read this manual thoroughly before using the tablet to ensure optimal performance and safety.

IMPORTANT SAFETY INFORMATION

To prevent damage to your tablet or injury to yourself and others, please observe the following precautions:

- Do not expose the tablet to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the tablet to strong impacts. The included silicone case provides protection, but is not indestructible.
- Keep the tablet away from water and other liquids.
- Use only the charger provided or approved by PRITOM.
- Do not attempt to disassemble, repair, or modify the tablet yourself. Refer all servicing to qualified personnel.
- Supervise young children during tablet use, especially when charging.
- Ensure proper ventilation when using the tablet to prevent overheating.

WHAT'S IN THE Box

Upon opening the package, please verify that all items are present and in good condition:

- PRITOM K10 Kids Tablet (with pre-installed silicone case)
- Charging Cable
- Power Adapter
- User Manual (this document)

PRODUCT OVERVIEW

The PRITOM K10 is a 10-inch Android tablet designed for children, featuring a durable silicone case and parental control capabilities.



Figure 1: Front and back view of the PRITOM K10 Kids Tablet with its protective case.

Key Features

- **Parental Control App:** Pre-installed Pritom Kids app allows parents to set time limits, filter content, and monitor app usage.
- **Durable Design:** Food-grade silicone case with an integrated stand provides protection against drops and makes it easy for kids to hold.
- **Comfortable Viewing:** 10-inch HD IPS screen (1280x800 resolution) with "Eye Comfort" and "Read Mode" to reduce eye strain.
- **Android 10 Go OS:** Access to Google Play Store for a wide variety of apps, e-books, videos, and games.
- **Ample Storage:** 2GB RAM and 64GB ROM, expandable up to 512GB with a microSD card.
- **Long Battery Life:** 6000mAh lithium polymer battery provides up to 8 hours of daily use.

PRITOM K10 kids tablet

Featured with 10 inch HD IPS display touchscreen, providing wonderful viewing experience for kids with large screen and clear picture. The Silicone Boundary and Anti-Scratch Shell protect the tablet nicely. With Read mode and Eye comfort mode, kids can adjust the light to protect eyes for long time using.



Figure 2: The PRITOM K10 tablet designed for comfortable viewing.

GETTING STARTED: SETUP

1. Initial Charging

Before first use, fully charge the tablet. Connect the charging cable to the tablet's charging port and the power adapter to a wall outlet. The battery indicator on the screen will show charging status. A full charge typically takes several hours.



Video and Drama



Daily use



Reading



Figure 3: The tablet features a 6000mAh battery for extended use.

2. Powering On/Off

- **To Power On:** Press and hold the Power button (usually located on the side or top edge) until the PRITOM logo appears on the screen.
- **To Power Off:** Press and hold the Power button until a power-off menu appears. Select "Power off" or "Shut down".

3. Initial Configuration

The first time you power on the tablet, you will be guided through a setup wizard:

1. **Select Language:** Choose your preferred language.
2. **Connect to Wi-Fi:** Select your Wi-Fi network and enter the password. A stable internet connection is required for initial setup and app downloads.
3. **Google Account:** Sign in with an existing Google account or create a new one. This is necessary to access Google Play Store and other Google services.
4. **Date & Time:** Confirm or adjust the date and time settings.

5. **Pritom Kids App Setup:** Follow the on-screen prompts to configure the pre-installed parental control app.

OPERATION

1. Basic Navigation

The tablet uses a touch-sensitive screen for navigation:

- **Tap:** To select an item or open an app.
- **Swipe:** To scroll through pages or lists.
- **Pinch-to-Zoom:** To zoom in or out on images or web pages.
- **Long Press:** To access contextual menus or move app icons.

2. Using the Pritom Kids App (Parental Controls)

The Pritom Kids app is designed to provide a safe and controlled environment for children. Parents can manage settings from their own device or directly on the tablet.



Figure 4: Parental control features and kid-friendly content.

- **Time Limitation:** Set daily usage limits for the tablet or specific apps.
- **Content Filter:** Control access to websites and apps to ensure age-appropriate content.
- **Password Access:** Protect parental settings with a password to prevent children from altering them.
- **App Management:** Approve or block apps available to your child.
- **Usage Reports:** Monitor how much time your child spends on different applications.

3. Eye Comfort and Read Mode

To protect children's eyes, the tablet includes special display modes:

- **Eye Comfort Mode:** Softens the screen light to reduce blue light emission, which can cause eye strain. Activate this mode from the quick settings panel or display settings.
- **Read Mode:** Turns the screen to black and white, simulating an e-reader, ideal for reading e-books. Activate this mode from the quick settings panel or display settings.

Stunning IPS Display

10.1
inch

IPS
Touchscreen

178°
Wide Angle



Figure 5: The tablet features a stunning IPS display with eye comfort options.

4. Connecting to Networks

- **Wi-Fi:** Go to *Settings > Network & internet > Wi-Fi* Turn Wi-Fi on, select your network, and enter the password.
- **Bluetooth:** Go to *Settings > Connected devices > Connection preferences > Bluetooth* Turn Bluetooth on, then pair with desired devices like headphones or speakers.

5. Using the Camera

The tablet is equipped with front and rear cameras. Open the Camera app from the home screen to take photos or record videos.

6. Expanding Storage with SD Card

The tablet supports microSD cards up to 512GB. Insert the card into the designated slot (refer to the tablet's physical layout for exact location) to expand storage for apps, photos, and videos.

MAINTENANCE

1. Cleaning the Tablet

Use a soft, lint-free cloth to clean the screen and body of the tablet. For stubborn smudges, slightly dampen the cloth with water or a screen cleaner. Avoid using harsh chemicals or abrasive materials.

2. Battery Care

- Avoid completely draining the battery regularly.
- Do not leave the tablet charging for extended periods after it's fully charged.
- Store the tablet in a cool, dry place if not used for a long time, with the battery charged to about 50%.

3. Software Updates

Periodically check for system updates to ensure your tablet has the latest features and security patches. Go to *Settings > System > System update*.

4. Case Care

The silicone case can be wiped clean with a damp cloth. Ensure it is dry before reattaching it to the tablet.

Silicone Boundary & Anti-Scratch Shell



Durable Stand



Silicon Frame



Figure 6: The durable silicone case provides protection and includes a stand.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Tablet won't turn on	Low battery; System crash	Charge the tablet for at least 30 minutes. If still unresponsive, press and hold the Power button for 10-15 seconds to force a restart.
Slow performance / Apps freezing	Too many apps running; Low storage; Outdated software	Close unused apps. Clear cache. Free up storage by deleting unnecessary files. Check for system updates.
Wi-Fi connection issues	Incorrect password; Router issue; Tablet Wi-Fi off	Ensure Wi-Fi is on. Re-enter password. Restart router. Forget network and reconnect.

Problem	Possible Cause	Solution
Battery drains quickly	High screen brightness; Background apps; Old battery	Reduce screen brightness. Close background apps. Limit video streaming. If battery life significantly degrades, contact support.
Parental controls not working	Incorrect settings; App malfunction	Verify settings within the Pritom Kids app. Ensure the app is updated. Restart the tablet.

Factory Reset

If problems persist, a factory reset may resolve them. **Warning:** This will erase all data on the tablet. Back up important files before proceeding.

1. Go to *Settings > System > Reset options*
2. Select *Erase all data (factory reset)*.
3. Confirm your decision. The tablet will restart and begin the reset process.

SPECIFICATIONS

Feature	Detail
Brand	PRITOM
Model Name	K10
Operating System	Android 10 Go (Upgradable to Android 13)
Screen Size	10.1 Inches
Screen Resolution	1280x800 Pixels (HD IPS)
Processor	1.6 GHz Quad Core (Unisoc)
RAM	2 GB DDR3 SDRAM
Internal Storage (ROM)	64 GB
Expandable Storage	Up to 512 GB via MicroSD card
Battery Capacity	6000mAh Lithium Polymer
Average Battery Life	8 Hours (daily use)
Wireless Connectivity	2.4G Wi-Fi, Bluetooth
Cameras	Rear Webcam Resolution: 2 MP

Feature	Detail
Color	Blue
Item Weight	2.31 pounds
Product Dimensions (LxWxH)	13.2 x 7.9 x 1.57 inches

WARRANTY AND SUPPORT

Warranty Information

PRITOM products typically come with a limited warranty covering manufacturing defects. Please refer to the warranty card included with your product or visit the official PRITOM website for detailed warranty terms and conditions.

Customer Support

If you encounter any issues not covered in this manual or require further assistance, please contact PRITOM customer support. You can usually find contact information (email, phone, or support portal) on the official PRITOM website or through your purchase platform.

For the latest information and support resources, please visit the [PRITOM Official Store on Amazon](#).

© 2025 PRITOM. All rights reserved.

Related Documents - K10

 K10 USER MANUAL <small>Please read this manual thoroughly before using and keep it for future reference.</small>	<p>K10 Tablet User Manual - Android 13</p> <p>Comprehensive user manual for the K10 Android 13 tablet, covering specifications, functions, settings, app management, multimedia, troubleshooting, and regulatory compliance.</p>
 PRITOM IRA T1029 USER GUIDE	<p>PRITOM IRA T1029 User Guide</p> <p>User guide for the PRITOM IRA T1029 tablet, covering function overview, getting started, home screen, settings, network connection, app management, multimedia, troubleshooting, and specifications.</p>

 NotePad K10 <small>Tablet PC</small>  <small>USER MANUAL</small>	<p><u>Dragon Touch NotePad K10 User Manual - Comprehensive Guide</u></p> <p>Explore the Dragon Touch NotePad K10 Tablet PC with this official user manual. Learn about setup, features, Wi-Fi and Bluetooth connectivity, internet browsing, troubleshooting, and support.</p>
	<p><u>Visual Land Prestige P10+/P11 Pro/10QH+ Kids K10+/K11 Pro Quick Start Guide and Warranty Information</u></p> <p>This document provides a quick start guide and warranty information for Visual Land Prestige P10+/P11 Pro/10QH+ and Kids K10+/K11 Pro tablets. It covers charging instructions, Google Kids Space setup, general setup procedures, troubleshooting, and FCC compliance.</p>
	<p><u>Dragon Touch Tablet User Manual</u></p> <p>Comprehensive user manual for Dragon Touch tablets, covering setup, features, connectivity, troubleshooting, and specifications. Learn how to operate your Android tablet efficiently.</p>