

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [HOUSNAT](#) /

› [HOUSNAT 3-in-1 Sandwich Maker Instruction Manual \(Model B09NKPQ84D\)](#)

HOUSNAT B09NKPQ84D

HOUSNAT 3-in-1 Sandwich Maker Instruction Manual

MODEL: B09NKPQ84D

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance. Keep this manual for future reference.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.

2. PRODUCT OVERVIEW

The HOUSNAT 3-in-1 Sandwich Maker is a versatile kitchen appliance designed for preparing sandwiches, waffles, and grilled foods. It features interchangeable non-stick plates and adjustable temperature control for optimal cooking.



Figure 1: HOUSNAT 3-in-1 Sandwich Maker.

Key Features

- **3-in-1 Versatility:** Includes three sets of removable plates for sandwiches, waffles, and grilling.
- **5-Gear Temperature Control:** Adjustable temperature settings to suit various ingredients and desired cooking levels.
- **Fast Heating:** 1200W power ensures quick preheating (3-4 minutes) and cooking (approx. 5 minutes for waffles).
- **Independent ON/OFF Button:** Allows for easy power control without unplugging.
- **Easy to Clean:** Non-stick coating and removable plates facilitate effortless cleaning.



Figure 2: The HOUSNAT 3-in-1 Sandwich Maker showing the three interchangeable plate types: grilled, waffle, and sandwich.

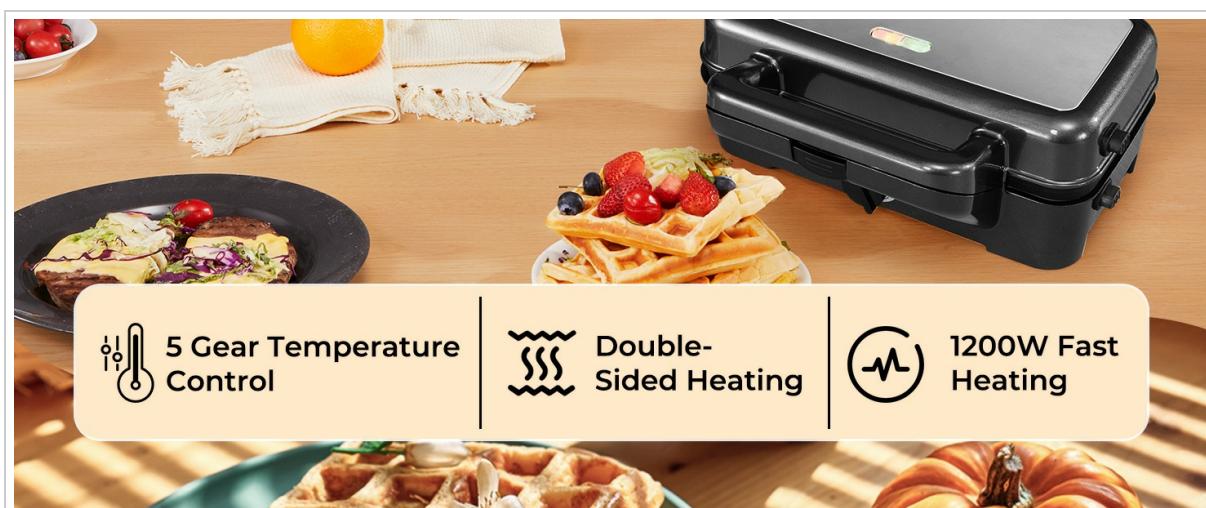


Figure 3: Close-up of the 5-gear temperature control dial and indicator lights on the HOUSNAT Sandwich Maker.

3. SETUP

Unpacking

Carefully remove the appliance and all accessories from the packaging. Ensure all components are present and undamaged. Dispose of packaging materials responsibly.

Attaching and Changing Plates

The appliance comes with three sets of interchangeable plates: sandwich, waffle, and grill. To change plates:

1. Ensure the appliance is unplugged and completely cool.
2. Locate the release buttons on the side of the plates.
3. Press the release buttons and gently lift the plates to remove them.
4. Align the desired plates with the slots and press down firmly until they click into place.

Your browser does not support the video tag.

Video 1: This video demonstrates how to easily install and remove the waffle plates from the sandwich maker.

4. OPERATING INSTRUCTIONS

General Operation

1. Ensure the correct plates are installed and the appliance is clean.
2. Plug the appliance into a suitable power outlet. The red indicator light will illuminate, indicating power is on.
3. Set the temperature control dial to your desired heat setting (1-5 gears).
4. Allow the appliance to preheat. The green indicator light will illuminate when the appliance has reached the set temperature and is ready for cooking.
5. Carefully open the lid and place your ingredients onto the bottom plate.
6. Close the lid and secure the latch.
7. Cook for the recommended time or until desired browning is achieved. The green light may cycle on and off during cooking to maintain temperature.
8. Once cooking is complete, carefully open the lid and remove the food using a heat-resistant utensil.
9. Unplug the appliance and allow it to cool completely before cleaning.



Figure 4: The 1200W powerful heating element ensures fast cooking with double-sided heating and overheat protection.

Making Sandwiches

Use the sandwich plates for perfectly sealed and toasted sandwiches.

1. Install the sandwich plates.
2. Preheat the appliance to your desired temperature (typically 3-5 gear).
3. Place bread with fillings onto the bottom plate.
4. Close the lid and cook for 3-5 minutes, or until golden brown and the filling is heated through.

Your browser does not support the video tag.

Video 2: This video demonstrates the step-by-step process of making a sandwich using the appliance, from preheating to serving.

Making Waffles

Prepare delicious Belgian waffles with the waffle plates.

1. Install the waffle plates.
2. Preheat the appliance to your desired temperature (typically 3-5 gear).

3. Pour waffle batter onto the bottom plate, ensuring even spread.
4. Close the lid and cook for 4-5 minutes, or until the waffles are golden brown and crispy.

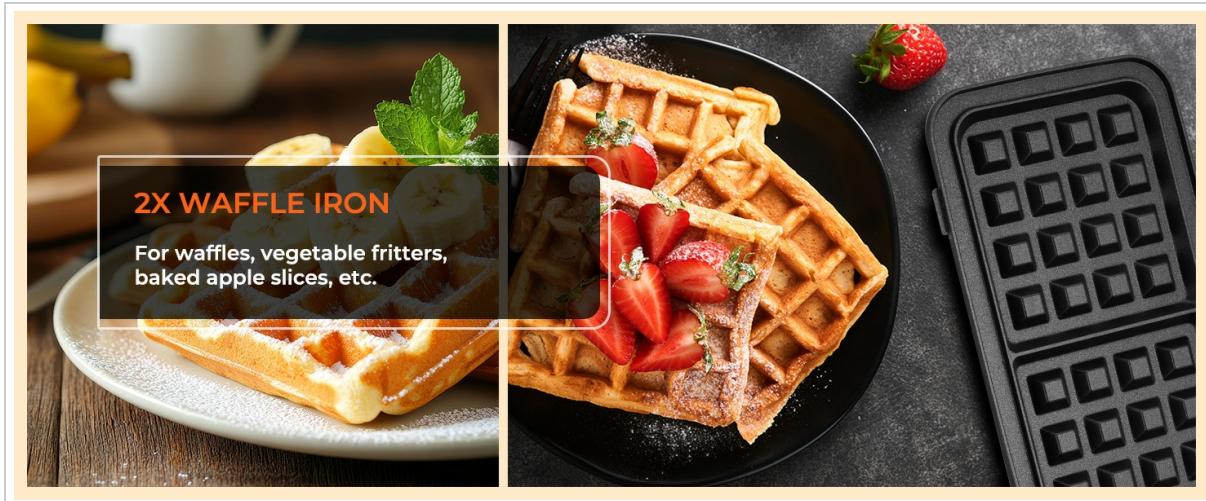


Figure 5: Step-by-step guide for making waffles using the HOUSNAT Sandwich Maker, including preheating, adding batter, and cooking.

Your browser does not support the video tag.

Video 3: This video illustrates the process of making waffles, including pouring batter and the final cooked result.

Grilling

Use the grill plates for cooking meats, vegetables, and paninis.

1. Install the grill plates.
2. Preheat the appliance to your desired temperature (typically 3-5 gear for meats, 1-2 for vegetables).
3. Lightly brush the plates with oil if desired.
4. Place food items onto the bottom plate.
5. Close the lid and cook until food is thoroughly cooked and has desired grill marks.



Figure 6: The HOUSNAT Sandwich Maker with grill plates, showcasing various grilled foods like sausage, fillet steak, fried egg, and roasted vegetables.

Your browser does not support the video tag.

Video 4: This video demonstrates grilling various items such as sausages, vegetables, and bacon on the panini press plates.

5. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your appliance.

Cleaning the Plates

1. Ensure the appliance is unplugged and completely cool before cleaning.
2. Remove the plates by pressing the release buttons.
3. Wash the plates with warm, soapy water using a soft sponge or cloth. Avoid abrasive cleaners or scouring pads that could damage the non-stick coating.
4. Rinse thoroughly and dry completely before reattaching or storing. The plates are also dishwasher safe.

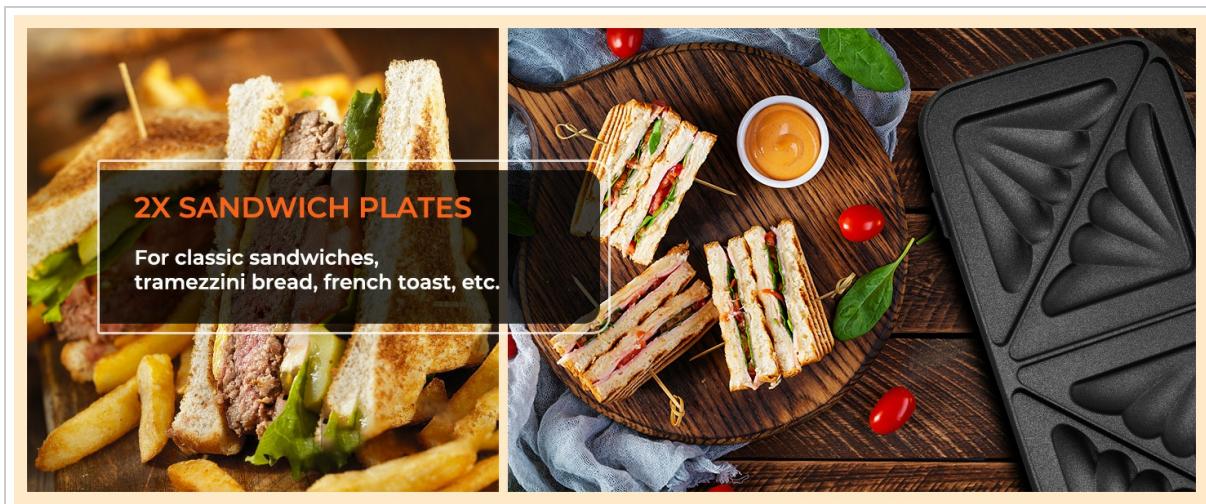


Figure 7: A hand wiping the non-stick plate of the HOUSNAT Sandwich Maker, demonstrating ease of cleaning.

Cleaning the Exterior

- Wipe the exterior of the appliance with a damp cloth. Do not use abrasive cleaners.
- Never immerse the main unit in water or any other liquid.

Storage

Store the appliance in a dry, clean place. The compact design allows for upright storage to save space.



Figure 8: Dimensions of the HOUSNAT Sandwich Maker, highlighting its compact upright storage capability.

6. TROUBLESHOOTING

- Appliance not heating:** Ensure the power cord is securely plugged into a working outlet. Check if the temperature dial is set to an active heating level.
- Food sticking to plates:** Ensure plates are clean and properly installed. Lightly brush plates with cooking oil or butter before adding ingredients.
- Uneven cooking:** Ensure ingredients are evenly distributed on the plates. Allow sufficient preheating time until the green indicator light illuminates.
- Indicator lights not working:** If the red power light does not illuminate when plugged in, check the power source. If the green ready light does not illuminate after preheating, contact customer support.

7. SPECIFICATIONS

Feature	Specification
Brand	HOUSNAT
Model	B09NKPQ84D
Color	Black
Power/Wattage	1200 watts
Product Dimensions	23.7 x 12 x 12 cm
Item Weight	3.45 kg
Material	Stainless Steel
Special Features	Cool Touch, Non Stick Coating, Removable Surface

8. WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. For specific warranty details, please refer to the warranty card included in your product packaging or contact HOUSNAT customer support.

If you encounter any issues or have questions regarding your HOUSNAT 3-in-1 Sandwich Maker, please contact our customer support team for assistance. Contact information can typically be found on the manufacturer's website or on the product packaging.