



Manuals.plus /

› YOOYIST /

› YOOYIST JSQ04PRO 4-Channel Commercial Kitchen Timer Instruction Manual

YOOYIST JSQ04PRO

YOOYIST JSQ04PRO 4-Channel Commercial Kitchen Timer Instruction Manual

Model: JSQ04PRO

1. INTRODUCTION

This manual provides detailed instructions for the YOOYIST JSQ04PRO 4-Channel Commercial Kitchen Timer. Designed for professional kitchen environments, this timer helps manage multiple cooking tasks efficiently and accurately. Please read this manual thoroughly before operating the device to ensure proper use and longevity.



Figure 1: YOOYIST JSQ04PRO 4-Channel Commercial Kitchen Timer

2. KEY FEATURES

- **4-Channel Design:** Track up to four independent cooking tasks simultaneously.
- **Ultra-Loud Alarm:** Ensures timers are heard even in noisy kitchen environments.
- **Heavy-Duty Stainless Steel Construction:** Durable and easy-to-clean, built to withstand demanding use.
- **Oversized LED Digits:** Clear visibility from various angles across the kitchen.
- **Wall-Mount Ready:** Includes mounting accessories for flexible placement.

- **Built-in Memory:** Recalls last settings instantly, reducing setup time.
- **Plug-In Power (110V/220V AC):** Eliminates battery dependence and ensures continuous operation.
- **Two Time Modes:** Supports Hours:Minutes and Minutes:Seconds modes.

Product Design



Figure 2: Key design features including waterproof surface, stainless steel, LED display, and adjustable stand.

3. SETUP

3.1 Unboxing and Initial Inspection

Carefully remove the timer from its packaging. Inspect the device for any signs of damage. Ensure all components, including the power cord and mounting accessories, are present.

Your browser does not support the video tag.

Video 1: Unboxing and initial overview of the YOOYIST Commercial Kitchen Timer.

3.2 Placement Options

The timer can be placed on a countertop using its adjustable stand or mounted on a wall for optimal visibility and space-saving. Mounting accessories are included for wall installation.

Ways to Place the Timer



Figure 3: The timer can be wall-mounted or used with its stand on a table.

3.3 Power Connection

Connect the timer to a standard 110V or 220V AC power outlet using the provided power cord. The timer does not require batteries for operation.

4. OPERATION

4.1 Power On/Off

Press the **ON/OFF** button to power the timer on or off.

4.2 Setting the Time

1. Press the **TIME** button to select a channel (1-4). The selected channel's display will flash.
2. Use the **INCREASE** and **DECREASE** buttons to set the desired time for minutes and seconds.
3. Press the **TIME** button again to confirm the setting and move to the next channel, or press the corresponding channel number (1-4) to start the countdown.

Your browser does not support the video tag.

Video 2: Instructions on how to set the time for a channel on the commercial timer.

4.3 Setting "Hour:Minutes" Mode

1. Long press the **DECREASE** button for 5 seconds to enter the "H:N" (Hour:Minute) mode. The display will show "H:N S".
2. Press the number key (1-4) for the desired channel to change it to "Hour" mode. An "H" indicator will light up next to the time.
3. Press the **DECREASE** button to save the setting.

Your browser does not support the video tag.

Video 3: Guide to setting the timer in "Hour:Minutes" mode.

4.4 Setting a Reminder

1. First, set the main countdown time for a channel as described in Section 4.2.
2. Then, press the **REMINDER** button. The display will show a flashing time.
3. Use the **INCREASE** and **DECREASE** buttons to set the desired reminder time (e.g., 5 seconds before the main timer).
4. Press the **REMINDER** button again to save. The reminder will sound at the set interval before the main timer expires.

Your browser does not support the video tag.

Video 4: How to set a reminder function on the commercial timer.

4.5 Adjusting Volume

To adjust the alarm volume, press the **INCREASE** or **DECREASE** buttons. The volume can be adjusted while the timer is idle or when an alarm is actively sounding.

Your browser does not support the video tag.

Video 5: Demonstrating how to set the volume for the commercial timer.

4.6 Memory Function

The timer retains the last set time for each channel even after being powered off or unplugged. This feature saves time by eliminating the need to re-enter frequently used times.



Figure 4: The timer features a memory function to retain settings.

5. MAINTENANCE

 
5.1 Cleaning

The stainless steel construction allows for easy cleaning. Wipe the surface with a damp cloth and mild detergent. Avoid abrasive cleaners or harsh chemicals that could damage the finish or electronic components. Ensure the device is unplugged before cleaning.

Product Description



Adjustable
Volume

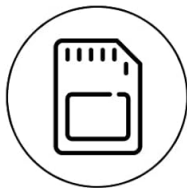

Data
Retention



Time
Reminder

Weight: 0.73kg / 1.61lb

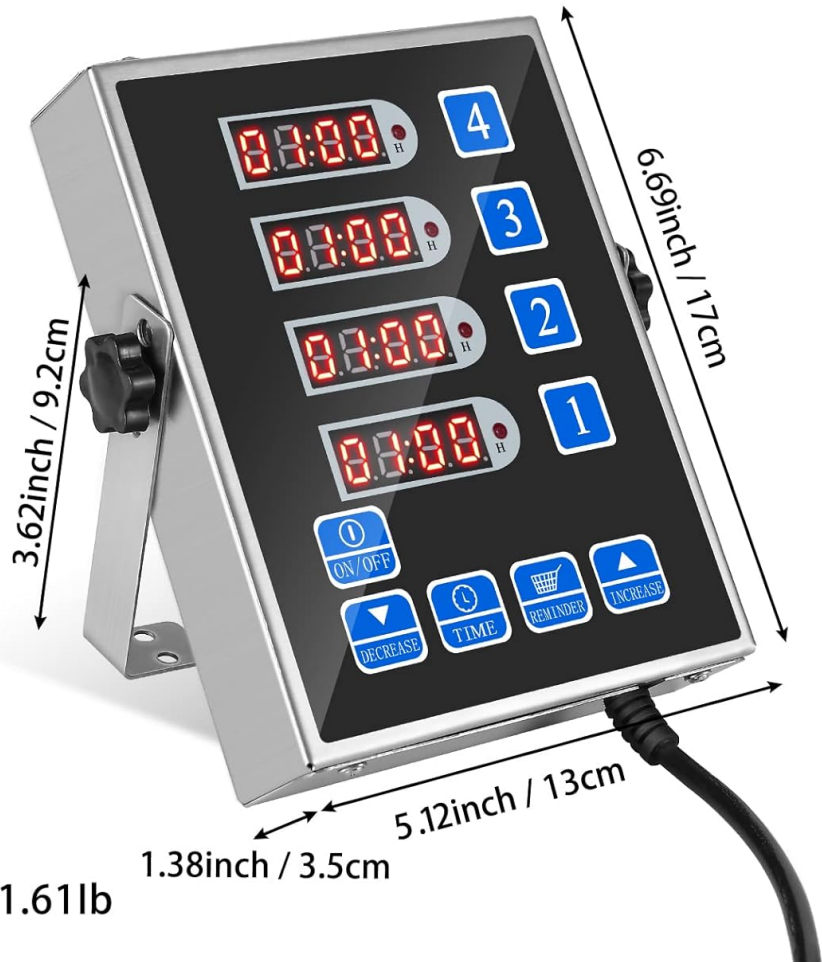 


Figure 5: The timer's dimensions and key features for easy reference.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Timer does not power on.	No power supply or loose connection.	Check power cord connection and ensure the outlet is functional.
Alarm is too quiet or not audible.	Volume setting is too low.	Adjust the volume using the INCREASE button.
Timer settings are not saved.	Incorrect saving procedure or power interruption during setting.	Ensure settings are confirmed by pressing the TIME or REMINDER button after adjustment. The timer has a built-in memory for last settings.
Display is dim or flickering.	Power fluctuation or internal issue.	Try plugging into a different outlet. If the problem persists, contact customer support.

 
7. SPECIFICATIONS

- **Model Number:** JSQ04PRO
- **Brand:** YOOYIST
- **Color:** Black
- **Material:** Stainless Steel
- **Product Dimensions (D x W x H):** 1.38" x 5.1" x 6.7" (3.5cm x 13cm x 17cm)
- **Item Weight:** 0.84 Kilograms (1.85 lbs)
- **Number of Settings:** 4 (channels)
- **Screen Size:** 2 Inches
- **Power Source:** 110V or 220V AC (Plug-in)

Product Description



Adjustable
Volume

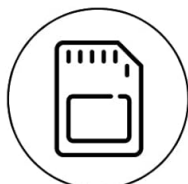

Data
Retention



Time
Reminder

Weight: 0.73kg/1.61lb

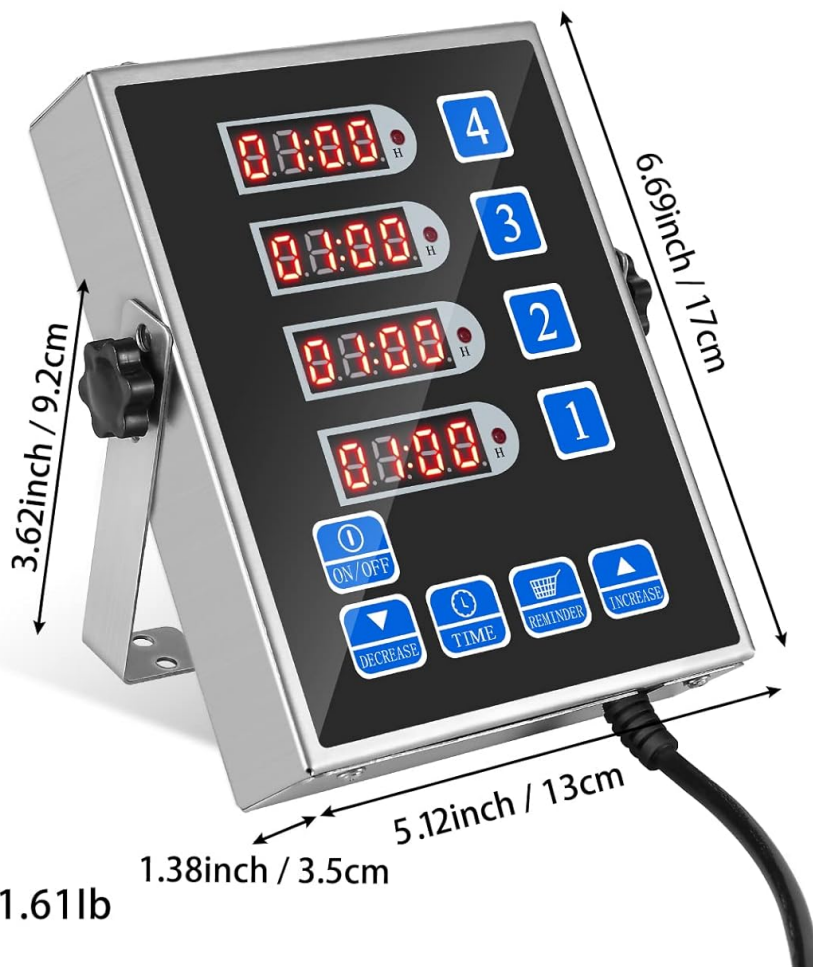 


Figure 6: Detailed product dimensions and features.

8. WARRANTY INFORMATION

YOOYIST offers an additional 30 days (60 days in total) for product returns. All products purchased have a 365-day warranty as standard. The warranty period begins on the day the product is originally shipped. The warranty covers all items and conditions identified in the original manufacturer's warranty. Some items specifically not covered by the warranty are loss and theft, water damage, and customer abuse.

9. CUSTOMER SUPPORT

For further assistance, troubleshooting, or warranty claims, please contact YOOYIST customer support. You can also visit the official YOOYIST store for more information and resources.

Brand: YOOYIST

Visit the YOOYIST Store on Amazon