

Smoby 7600742000

Smoby Rookie Tricycle Instruction Manual

Model: 7600742000

1. INTRODUCTION

Thank you for choosing the Smoby Rookie Tricycle. This manual provides essential information for the safe assembly, operation, and maintenance of your tricycle. Please read it thoroughly before use and retain it for future reference. The Smoby Rookie Tricycle is designed to provide a fun and engaging riding experience for children, aiding in the development of motor skills and coordination.



Image 1.1: The Smoby Rookie Tricycle, featuring a red frame, white seat, and black handlebars and basket.

2. SAFETY INFORMATION

WARNING: TOY INSIDE - For use under adult supervision.

- Always ensure adult supervision when a child is using the tricycle.
- Do not use the tricycle near stairs, on steep slopes, or in areas with vehicular traffic.
- Ensure all parts are securely assembled before each use.
- Children should wear appropriate safety gear, such as a helmet, when riding.
- The maximum weight capacity for this tricycle is 50 kg.

- Regularly inspect the tricycle for any loose parts, damage, or wear.



Image 2.1: A child wearing a helmet while riding the Smoby Rookie Tricycle, demonstrating safe use.

3. WHAT'S IN THE BOX

Upon opening the packaging, please verify that all components are present and undamaged.

- SMOBY ROOKIE TRICYCLE (disassembled components)



Image 3.1: The Smoby Rookie Tricycle packaging box, showing the product image and key features.

4. SETUP AND ASSEMBLY

Assembly should be performed by an adult. Please follow these general steps. Refer to the included assembly diagram for detailed instructions.

1. **Unpack Components:** Carefully remove all parts from the packaging.
2. **Attach Rear Wheels:** Securely attach the two rear wheels to the main axle.
3. **Install Front Wheel and Pedals:** Attach the front wheel assembly, ensuring the pedals are correctly

oriented and secured.

4. **Mount Handlebar:** Insert the handlebar into the front fork and tighten it firmly. The handlebar is adjustable to accommodate your child's growth.
5. **Attach Seat:** Secure the seat to the frame.
6. **Install Storage Basket:** Attach the rear storage basket to the designated points on the frame.
7. **Final Check:** Before first use, ensure all screws, bolts, and connections are tight and secure.



Image 4.1: The Smoby Rookie Tricycle highlighting features such as curved saddle, adjustable handlebar, lightweight design, soft-touch components, metal frame, silent wheels, handle, limited rotation, and storage bin.

5. OPERATING INSTRUCTIONS

The Smoby Rookie Tricycle is designed for simple and intuitive use by children aged 2 years and up.

- **Riding:** Instruct the child to sit comfortably on the seat, place their feet on the pedals, and grasp the handlebars. They can propel the tricycle by pedaling and steer by turning the handlebars.
- **Adjustable Handlebar:** The handlebar height can be adjusted to suit the child's height as they grow. Loosen the securing mechanism, adjust to the desired height, and re-tighten firmly.
- **Silent EVA Wheels:** The tricycle features silent EVA wheels for quiet operation, suitable for both indoor and outdoor use.
- **Storage Basket:** The rear basket can be used to carry small toys or personal items. Ensure items are securely placed to prevent them from falling out during movement.
- **Limited Rotation:** The handlebar has a limited rotation range to prevent over-steering and enhance stability.



Image 5.1: A young boy confidently riding the Smoby Rookie Tricycle, demonstrating its ease of use.

6. MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your Smoby Rookie Tricycle.

- **Cleaning:** Wipe the tricycle with a damp cloth and mild soap. Avoid harsh chemicals that may damage the finish.
- **Inspection:** Periodically check all nuts, bolts, and screws for tightness. Re-tighten as necessary. Inspect wheels and pedals for wear or damage.
- **Storage:** Store the tricycle in a dry, sheltered area to prevent rust and material degradation.
- **Lubrication:** If any moving parts, such as the wheels or pedals, begin to squeak, apply a small amount of silicone-based lubricant.

7. TROUBLESHOOTING

This section addresses common issues you might encounter.

- **Squeaky Wheels:** If the wheels produce a squeaking sound, apply a small amount of silicone spray or light oil to the axle points where the wheels rotate. Ensure the lubricant does not get on the wheel treads.
- **Loose Handlebar/Seat:** If the handlebar or seat feels loose, check and tighten the corresponding fastening mechanisms. Refer to the assembly section for guidance.
- **Difficulty Pedaling:** Ensure no debris is caught in the pedal mechanism or around the front wheel axle. Check that the pedals are securely attached.

8. SPECIFICATIONS

Brand	Smoby
-------	-------

Model Number	7600742000
Item Weight	6.82 pounds (approximately 3.1 kg)
Manufacturer Recommended Age	3 years and up (Note: Product description states 2 years and up)
Dimensions (Approximate)	Length: 58 cm, Depth: 41 cm, Height: 50.5 cm
Material	Durable metal frame, EVA silent wheels

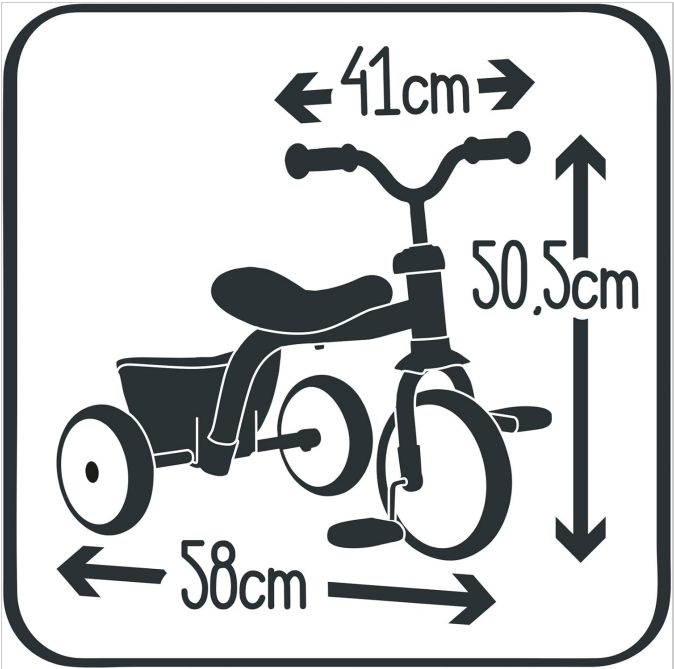 


Image 8.1: A technical diagram illustrating the key dimensions (length, width, height) of the Smoby Rookie Tricycle.

9. WARRANTY AND SUPPORT

The Smoby Rookie Tricycle comes with a **2-year warranty**, as indicated on the product packaging. This warranty covers manufacturing defects under normal use.


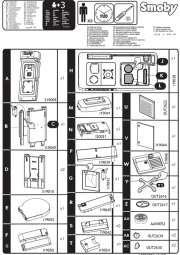 
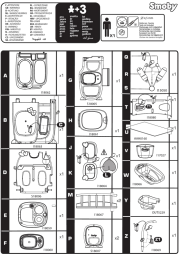 
- **Warranty Claims:** For warranty claims, please retain your proof of purchase. Contact the retailer or Smoby customer service for assistance.
- **Customer Support:** For further assistance, questions, or to report any issues not covered in this manual, please contact Smoby customer support through their official website or the contact information provided with your purchase.



Image 9.1: A collection of icons detailing product features, including the 2-year warranty symbol, adjustable age range, lightweight design, and indoor/outdoor suitability.

Related Documents - 7600742000

	<p>Smoby Bercelonnette Assembly Instructions and Safety Guide</p> <p>Detailed assembly instructions and safety information for the Smoby Bercelonnette toy. Includes part identification, step-by-step assembly guides, and important warnings for safe use.</p>
	<p>Smoby Pushchair + Pram Assembly Instructions</p> <p>Step-by-step guide for assembling the Smoby Pushchair + Pram (Model 03291X0/15). Includes important safety information, part identification, and assembly procedures.</p>
	<p>Smoby Landau Calin Baby Doll Stroller Assembly Instructions</p> <p>This document provides comprehensive assembly instructions for the Smoby Landau Calin baby doll stroller. It details the parts included, offers step-by-step guidance for assembly, and highlights crucial safety warnings for safe usage.</p>

	<p>Smoby Baby Nurse Electronic Doll Bath - Assembly Instructions and Safety Guide</p> <p>Comprehensive guide for assembling and safely using the Smoby Baby Nurse Electronic Doll Bath (Model AAP2330C), including parts list, step-by-step instructions, and important safety warnings for children.</p>
	<p>Smoby 7600312303 Chef's Kitchen 2-in-1 with Dining Area User Manual</p> <p>Comprehensive user manual for the Smoby 7600312303 Chef's Kitchen 2-in-1 with Dining Area. This guide provides detailed assembly instructions, safety warnings, and usage information for this children's play kitchen.</p>
	<p>Smoby Baby Nurse Large Doll's Play Centre Assembly Instructions</p> <p>Detailed step-by-step assembly guide for the Smoby Baby Nurse Large Doll's Play Centre, including part identification and safety warnings. This manual helps users assemble the toy safely and correctly.</p>