

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [CoComelon](#) /

› [CoComelon All Aboard Music Train \(Model 96146\) Instruction Manual](#)

CoComelon 96146

CoComelon All Aboard Music Train Instruction Manual

MODEL: 96146

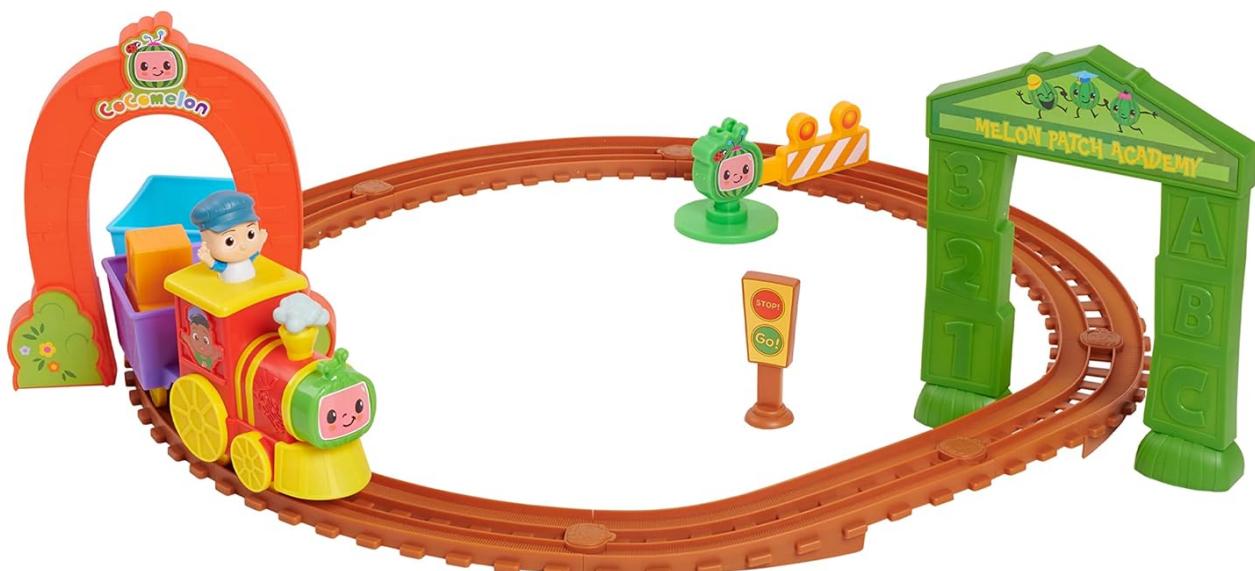


Image: The CoComelon All Aboard Music Train set, showing both the product packaging and the assembled train with its track and accessories.

Product Overview

The CoComelon All Aboard Music Train is an interactive toy set designed for toddlers and preschoolers aged 18 months and up. Inspired by the popular CoComelon series, this set features a motorized train that plays "The Train Song" and locomotive sounds. It includes characters, cargo cars, track sections, and interactive elements to enhance play and learning.

Safety Information

Warning: May contain small pieces. Adult supervision is recommended during play.

Setup

1. Unboxing and Component Check

Carefully remove all components from the packaging. Verify that all included items are present:

- 1 x Locomotive
- 2 x Cargo Cars
- 8 x Track Sections
- 1 x Crossing Gate
- 2 x Arches
- 1 x Stoplight
- 1 x ABC Cargo Block

2. Battery Installation

The locomotive requires 3 x AAA batteries (not included). Locate the battery compartment on the underside of the locomotive. Using a small screwdriver, open the compartment, insert the batteries according to the polarity indicators, and securely close the cover. Adult assembly is required for battery installation.

3. Track Assembly

Connect the 8 track sections to form a complete oval. Ensure each section clicks securely into place. The crossing gate, arches, and stoplight can be placed around the track as desired.



Image: A child happily playing with the fully assembled CoComelon All Aboard Music Train set, demonstrating the scale and interactive nature of the toy.

Operating Instructions

1. Powering On/Off

Locate the power switch on the underside of the locomotive. Slide the switch to the "ON" position to activate the train. To turn off the train, slide the switch to the "OFF" position.

2. Train Movement and Sounds

Once powered on, press the figure of JJ in the locomotive to start the train. The motorized engine will move along the track, playing CoComelon's "The Train Song" and realistic train sounds. The steam stack on the locomotive will also spin as the train moves.



Image: A close-up view of the CoComelon train's steam stack, highlighting the spinning smoke feature as the train operates.

3. Interactive Features

- **Cargo Loading:** Load the included ABC block into one of the cargo cars. The cars can be attached and detached from the locomotive.
- **Crossing Gate:** The crossing gate can be manually lifted and lowered as the train passes.



Image: A hand placing an ABC-themed block into one of the cargo cars of the CoComelon train, illustrating the cargo loading feature.

4. Official Product Video

Your browser does not support the video tag.

Video: An official product video from Just Play demonstrating the CoComelon All Aboard Music Train in action, showcasing its movement, sounds, and interactive elements.

5. Product Demonstration Video

Your browser does not support the video tag.

Video: A demonstration video showing the CoComelon train moving around its tracks, providing a visual guide to its operation.

Maintenance

1. Cleaning

Wipe the toy with a damp cloth and mild soap. Do not immerse the electronic components in water. Ensure the toy is completely dry before storing or resuming play.

2. Battery Replacement

When the train's sounds become faint or its movement slows, it's time to replace the batteries. Follow the battery installation steps outlined in the Setup section.

3. Storage

Store the train set in a cool, dry place away from direct sunlight when not in use. If storing for an extended period, remove the batteries to prevent leakage.

Troubleshooting

Issue	Possible Cause	Solution
Train not moving or no sound.	Low or incorrectly installed batteries.	Check battery polarity and replace with fresh AAA batteries. Ensure the power switch is in the "ON" position.
Train gets stuck on the track.	Track sections not properly connected or obstacles on the track.	Ensure all track sections are securely connected and form a flat, continuous loop. Remove any objects from the track.
Steam stack not spinning.	Mechanism obstruction or train not moving.	Ensure the train is moving. Check for any debris obstructing the spinning mechanism on the steam stack.

Specifications

- Product Dimensions:** 14 x 3.63 x 12.5 inches
- Item Weight:** 2.09 pounds
- Model Number:** 96146
- Manufacturer Recommended Age:** 18 months and up
- Batteries:** 3 x AAA batteries required (not included)
- Manufacturer:** Just Play

Warranty and Support

For warranty information or product support, please refer to the contact details provided on the product packaging or visit the official Just Play website. Keep your purchase receipt as proof of purchase for any warranty claims.