

[Manuals.plus](#) /

› [Ollygrin](#) /

› Ollygrin BG705S Electric Burr Coffee Grinder Instruction Manual

Ollygrin BG705S

Ollygrin BG705S Electric Burr Coffee Grinder Instruction Manual

Model: BG705S | Brand: Ollygrin

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using your Ollygrin BG705S Electric Burr Coffee Grinder. Retain this manual for future reference.

- Ensure the appliance is unplugged before cleaning or when not in use.
- Do not immerse the motor base in water or other liquids.
- Keep hands and utensils away from moving parts during operation.
- This appliance is for household use only.
- Do not operate the grinder with a damaged cord or plug.
- Always ensure the hopper lid and ground coffee container are properly engaged before operating.

2. PRODUCT OVERVIEW AND FEATURES

The Ollygrin BG705S Electric Burr Coffee Grinder is designed to provide freshly ground coffee beans with customizable precision for various brewing methods.



Figure 1: Ollygrin BG705S Electric Burr Coffee Grinder.

Key Features:

- **Capacity:** Features a 100g bean hopper and a removable ground coffee container, capable of grinding enough coffee for 14 cups.
- **Customizable Grinding:** Offers 14 grind settings, ranging from fine to coarse, suitable for espresso, drip coffee, percolator, French press, or pour-over brewing methods.
- **Automatic Operation:** Equipped with an On/Off button and an auto-stop system that automatically shuts off the grinder once the grinding process is complete.
- **Cup Selector:** A slide dial allows selection for 2 to 12 cups, grinding the precise amount of coffee beans needed.
- **Easy to Clean:** The stainless steel housing is designed for easy cleaning. A built-in brush is included for cleaning the metal burr. The removable hopper lid and ground coffee container are washable.



Figure 2: Diagram illustrating key product features including the vertical hopper, fixed position for the container, and dual safety system.

3. SETUP

Before first use, ensure all packaging materials are removed and the appliance is placed on a stable, dry, and level surface.

1. **Unpack:** Carefully remove the coffee grinder and all its components from the packaging.
2. **Clean Components:** Wash the removable bean hopper lid, ground coffee container, and the solid steel disk burr with warm, soapy water. Rinse thoroughly and dry completely before reassembling. The main unit should be wiped with a damp cloth.
3. **Assemble:** Ensure the solid steel disk burr is correctly placed. Secure the bean hopper lid and the ground coffee container into their respective positions. The dual safety system requires both to be properly engaged for operation.
4. **Power Connection:** Plug the power cord into a standard 120V electrical outlet.

4. OPERATION

Follow these steps to grind your coffee beans:

1. **Add Coffee Beans:** Pour whole coffee beans into the 100g capacity bean hopper. Ensure the hopper lid is securely closed.
2. **Select Grind Setting:** Use the grind setting dial to choose your desired fineness. The grinder offers 14 settings, from fine (for espresso) to coarse (for French press).



Figure 3: Adjusting the grind setting dial for desired fineness.

3. **Select Number of Cups:** Use the cup selector dial to choose the amount of coffee you wish to grind, from 2 to 12 cups.



Figure 4: Setting the cup selector for the desired quantity of coffee.

4. **Start Grinding:** Press the On/Off button to begin grinding. The grinder will automatically stop once the selected amount of coffee has been ground.

Grinding to Your Desired Flavor



Figure 5: Initiating the grinding process with the start button.

Grind Consistency Examples:

Four Simple Steps:



Steps 1:

Take out the solid steel disk burr.



Steps 2:

Clean the burrs with included cleaning brush.



Steps 3:

Clean the metallic flat disk burrs with included cleaning brush.



Steps 4:

The hopper lid and removable ground coffee container are removable and can be washed directly with water.

Figure 6: Visual guide to different grind consistencies for various brewing methods.

Official Product Video:

Video 1: Official demonstration of the Ollygrin Electric Adjustable Burr Coffee Grinder, showcasing its features and operation.

5. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your coffee grinder.

1. **Unplug:** Always unplug the grinder from the power outlet before cleaning.
2. **Remove Burr:** Carefully take out the solid steel disk burr from the grinder.
3. **Clean Burr:** Use the included cleaning brush to remove any residual coffee grounds from the burr.
4. **Clean Grinder Interior:** Use the cleaning brush to clean the metallic flat disk burrs inside the grinder.
5. **Wash Removable Parts:** The bean hopper lid and the ground coffee container are fully removable and can be washed directly with water and mild detergent. Rinse and dry thoroughly.
6. **Wipe Base:** Wipe the exterior of the motor base with a damp cloth. Do not immerse the motor base in water.
7. **Reassemble:** Once all parts are dry, reassemble the grinder, ensuring all components are securely in place.

Ollygrin



Figure 7: Step-by-step guide for cleaning the grinder components.

6. TROUBLESHOOTING

If you encounter issues with your grinder, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Grinder does not start.	Not plugged in, lid/container not secured, power outage.	Check power connection, ensure hopper lid and ground coffee container are correctly engaged.
Inconsistent grind.	Burr needs cleaning, incorrect grind setting.	Clean the burr and internal components. Adjust grind setting as needed.
Grinder stops unexpectedly.	Auto-stop system activated (normal), overheating.	If grinding is complete, this is normal. If not, allow the unit to cool down before restarting.

7. SPECIFICATIONS

- **Model:** BG705S
- **Brand:** Ollygrin
- **Dimensions:** 12"L x 7.4"W x 16"H
- **Voltage:** 120V
- **Bean Hopper Capacity:** 100 Grams
- **Material:** Stainless Steel
- **Item Weight:** 4.68 pounds

8. WARRANTY AND SUPPORT

Ollygrin provides a 12-month worry-free warranty for this product. Additionally, a 1-year replacement is offered for any defects caused during production. Lifetime technical support is available for all customers.

For warranty claims or technical assistance, please contact Ollygrin customer service through the retailer where the product was purchased or visit the official Ollygrin website.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

My Ollygrin BG705S coffee grinder is less than a year old and periodically beeps when I press start, even with no beans inside. It will then start working again after several days. Is there a reset button, and what is the recessed screw on the bottom?

Based on the Ollygrin BG705S manual, there is no mention of a dedicated reset button. The recessed screw you see on the bottom is likely a structural fastener and not a user-serviceable reset switch.The...

[Read full answer](#)