



[Manuals.plus](#) /

> [GE](#) /

> GE Refrigerator Main Control Board WR55X38248 Instruction Manual

GE WR55X38248

GE Refrigerator Main Control Board WR55X38248 Instruction Manual

Model: WR55X38248

INTRODUCTION

This manual provides essential information for the safe and correct installation, operation, and maintenance of the GE Refrigerator Main Control Board, model WR55X38248. This component is an original equipment manufacturer (OEM) part designed for specific GE refrigerator models. Please read all instructions carefully before proceeding with installation or any service.

SAFETY INFORMATION

WARNING: Risk of electrical shock. Disconnect power to the refrigerator before servicing. Failure to do so can result in serious injury or death.

- Always disconnect the refrigerator from the power supply before attempting any installation, repair, or maintenance.
- Wear appropriate personal protective equipment, such as gloves and safety glasses.
- If you are not comfortable performing this repair, it is recommended to seek assistance from a qualified appliance technician.
- Ensure all connections are secure and correct before restoring power.
- Handle the control board by its edges to avoid damaging electronic components due to static electricity.

SETUP AND INSTALLATION

This section outlines the general steps for replacing the main control board. Specific steps may vary slightly depending on your refrigerator model. Refer to your refrigerator's service manual for detailed instructions.

Tools Required:

- Screwdriver set (Phillips and flathead)

- Nut driver set (if applicable)
- Needle-nose pliers
- Multimeter (for testing, optional but recommended)

Pre-Installation Steps:

1. **Disconnect Power:** Unplug the refrigerator from the wall outlet or turn off the circuit breaker supplying power to the appliance.
2. **Access the Control Board:** The main control board is typically located on the back of the refrigerator, behind an access panel. Remove any screws securing this panel and carefully set it aside.
3. **Document Connections:** Before disconnecting any wires, take clear photos or make a diagram of all wire connections to the existing control board. This will aid in correct reassembly.

Installation Procedure:

4. **Disconnect Wires:** Carefully disconnect all wire harnesses and connectors from the old control board. Note that some connectors may have locking tabs that need to be pressed or squeezed.
5. **Remove Old Board:** Unscrew or unclip the old control board from its mounting brackets.
6. **Install New Board:** Position the new WR55X38248 control board in the same location and secure it with the original screws or clips.
7. **Reconnect Wires:** Using your photos or diagram, carefully reconnect all wire harnesses and connectors to the new control board. Ensure each connection is firm and correctly seated.
8. **Secure Access Panel:** Replace the access panel on the back of the refrigerator and secure it with its screws.



Image: The GE Refrigerator Main Control Board, model WR55X38248. This image shows the general appearance of the control board with various connectors and electronic components.

OPERATING (POST-INSTALLATION CHECK)

After installing the new control board, perform the following checks:

1. **Restore Power:** Plug the refrigerator back into the wall outlet or turn on the circuit breaker.
2. **Initial Startup:** The refrigerator may take a few minutes to power on and stabilize. Listen for the compressor and fans to start.
3. **Verify Display and Lights:** Check if the refrigerator's display (if applicable) is functioning correctly and if interior lights illuminate when the door is opened.
4. **Monitor Temperature:** Allow several hours for the refrigerator and freezer compartments to reach their set temperatures. Use a thermometer to verify temperatures are within the desired range (e.g., 35-38°F for the refrigerator, 0°F for the freezer).
5. **Check for Error Codes:** If your refrigerator has a diagnostic display, check for any error codes that might indicate an issue.

MAINTENANCE

The WR55X38248 Main Control Board itself requires no routine maintenance. To ensure its longevity and proper function, adhere to the following general guidelines for your refrigerator:

- Keep the area around the refrigerator's condenser coils clean to ensure proper airflow and cooling efficiency.
- Ensure the refrigerator is properly ventilated and not placed in an excessively hot or humid environment.
- Avoid exposing the control board area to moisture or extreme temperature fluctuations.

TROUBLESHOOTING

If you encounter issues after installing the new control board, consider the following troubleshooting steps:

Problem	Possible Cause	Solution
Refrigerator not powering on or no display.	Loose power connection, incorrect wiring, or defective board.	Check power cord and circuit breaker. Re-verify all wire connections to the control board. If problem persists, the board may be defective.
Refrigerator not cooling properly (e.g., too warm).	Incorrect temperature settings, faulty temperature sensor, or other component failure.	Ensure temperature settings are correct. Check for proper airflow. If the issue began immediately after board replacement, re-check connections.
Interior lights or other functions not working.	Loose or incorrect wiring to specific components.	Review your wiring diagram and ensure all connectors are fully seated.
Error codes displayed.	Indicates a specific system fault.	Consult your refrigerator's user manual or service manual for the meaning of the specific error code and recommended actions.

If troubleshooting steps do not resolve the issue, it is recommended to contact a qualified appliance technician or the seller for further assistance.

SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Model Number	WR55X38248
Manufacturer Part Number	WR55X38248
Brand	GE (OEM)
UPC	084691899440
Installation Type	Freestanding (for compatible refrigerators)
Defrost System	Automatic (controlled by board)
Cooling Method	Compressor (controlled by board)
Is Electric	Yes

WARRANTY INFORMATION

Warranty coverage for the WR55X38248 GE Refrigerator Main Control Board is typically provided by the seller or the original equipment manufacturer (GE). Please refer to your purchase documentation or contact the seller directly for specific warranty terms, conditions, and duration. Keep your proof of purchase for any warranty claims.

CUSTOMER SUPPORT

For technical assistance, installation questions, or warranty inquiries, please contact the retailer from whom you purchased this control board. You may also refer to the official GE Appliances support website or contact their customer service for general appliance-related support.