
[Manuals.plus](#) /

› [USARMT](#) /

› USARMT Universal Remote Control AKB76037603 User Manual

USARMT AKB76037603

USARMT Universal Remote Control User Manual

MODEL: AKB76037603

1. Introduction

Welcome to the user manual for your new USARMT Universal Remote Control, model AKB76037603. This remote is designed to be compatible with a wide range of LG Smart TVs, including LED, OLED, NanoCell, QNED, LCD, WebOS, 4K, 8K UHD, HDTV, and HDR models. This manual provides essential information on setting up, operating, maintaining, and troubleshooting your remote control to ensure optimal performance.

Please read this manual thoroughly before using the remote control.

2. Product Overview

The USARMT AKB76037603 remote control is a pre-programmed universal remote, eliminating the need for complex setup. It offers direct access to popular streaming services and essential TV functions.



Figure 2.1: Front view of the USARMT AKB76037603 Universal Remote Control, showing all buttons including power, number pad, volume, channel, navigation, and dedicated app keys for Netflix, Prime Video, and Disney+.

Key Features:

- **Universal Compatibility:** Works with various LG Smart TV series, including UP7000, UP7070, UP8000, UP8770, A1, B1, C1, G1, NANO75, NANO80, NANO88, and NANO90 series.

- **Pre-programmed:** No configuration or programming required. Ready to use after battery insertion.
- **Dedicated App Keys:** Features direct access buttons for Netflix, Prime Video, and Disney+.
- **Comprehensive Control:** Includes standard functions such as power, volume, channel, navigation, and quick access buttons.

3. Setup

3.1 Battery Installation

To begin using your remote control, you will need to install two AAA batteries (not included). Follow these steps:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



Figure 3.1: Back view of the remote control, highlighting the battery compartment cover. Ensure correct battery polarity when inserting batteries.

Note: This remote control is pre-programmed and does not require any additional setup or pairing with your LG TV. Simply insert the batteries, and it is ready for use.

4. Operating Instructions

The USARMT AKB76037603 remote control provides intuitive access to your LG Smart TV's functions. Point the remote directly at your TV's infrared receiver for best performance.



Figure 4.1: Angled view of the remote control, illustrating the ergonomic design and button layout for easy operation.

4.1 Button Functions

Button	Function
Power (●)	Turns the TV on or off.
Number Pad (0-9)	Direct channel selection.
Volume (+/-)	Adjusts the TV volume up or down.
Channel (▲/▼)	Changes TV channels up or down.
Navigation (▲▼◀▶)	Navigates through menus and options.
OK/Enter	Confirms selections.
Back (↶)	Returns to the previous screen or menu.
Home (△)	Accesses the TV's home screen or smart hub.
Netflix	Directly launches the Netflix application.
Prime Video	Directly launches the Prime Video application.
Disney+	Directly launches the Disney+ application.
Movies	Directly launches the Movies application or service.
Mute	Mutes or unmutes the TV sound.
Info	Displays program information.
Settings	Accesses TV settings menu.

5. Maintenance

5.1 Cleaning the Remote

To maintain the appearance and functionality of your remote control, clean it regularly:

- Use a soft, dry cloth to wipe the surface of the remote.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner.
- Avoid using harsh chemicals, solvents, or abrasive cleaning materials, as these can damage the remote's finish or internal components.

5.2 Battery Replacement

Replace the batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries. Dispose of used batteries according to local regulations.

6. Troubleshooting

If you experience issues with your USARMT Universal Remote Control, refer to the following common problems and solutions:

Problem	Possible Solution
---------	-------------------

Problem	Possible Solution
Remote is not working at all.	Check if the batteries are inserted correctly with the correct polarity. Replace the batteries with new ones. Ensure there are no obstructions between the remote and the TV's infrared sensor.
Some buttons are not responding.	Ensure the remote is pointed directly at the TV. Clean the remote's surface, especially around the unresponsive buttons, to remove any dirt or debris. Replace the batteries.
Remote range is limited.	Replace the batteries. Ensure there are no strong light sources (like direct sunlight) interfering with the TV's IR sensor.

If the problem persists after trying these solutions, please refer to the support information provided in this manual.

7. Specifications

Feature	Detail
Brand	USARMT
Model Number	AKB76037603
Compatible Devices	LG Smart TVs (LED, OLED, LCD, 4K, 8K, UHD, WebOS, NanoCell, QNED, HDR)
Special Feature	Universal, Pre-programmed
Connectivity Technology	Infrared (IR)
Power Source	2 x AAA Batteries (not included)
Product Dimensions	15.24 x 5.08 x 1.27 cm (6 x 2 x 0.5 inches)
Item Weight	85.05 g (3 ounces)

8. Warranty and Support

This product comes with a 30-day hassle-free return policy. If you encounter any issues or have questions regarding your USARMT Universal Remote Control, please refer to the retailer's return and support policies where the product was purchased.

For further assistance, you may also consult the official USARMT website or contact their customer service if available.