

[Manuals.plus](#) /

› [Uliptz](#) /

› Uliptz Wireless Bluetooth Headphones, 65H Playtime, 6 EQ Sound Modes, HiFi Stereo Over Ear Headphones with Microphone, Foldable Lightweight Bluetooth 5.3 Headphone for Travel/Office/Cellphone/PC

Uliptz

Uliptz Wireless Bluetooth Headphones

Instruction Manual

1. INTRODUCTION

Thank you for choosing Uliptz Wireless Bluetooth Headphones. These headphones are engineered to provide a superior audio experience with crystal clear sound, powerful bass, and comfortable wear for extended periods. Featuring advanced Bluetooth 5.3 technology, multiple EQ sound modes, and a long-lasting battery, they are ideal for travel, office use, and daily entertainment.



Image: The Uliptz Wireless Bluetooth Headphones in black, showcasing their sleek design.

2. PACKAGE CONTENTS

Please check the package to ensure all items are present:

- Wireless Bluetooth Headphones x 1
- USB-C Charging Cable x 1
- 3.5mm Audio Cable x 1

3. PRODUCT LAYOUT

Familiarize yourself with the various buttons and ports on your Uliptz headphones for optimal use.



Image: Detailed view of the headphone's intelligent control buttons and interfaces, including volume, multi-function, charging port, LED indicator, audio interface, microphone, and EQ button.

Volume Up/Next Track Button: Press briefly to increase volume, long press to skip to the next track.

Multi-Function Button (MFB): Power On/Off, Play/Pause, Answer/End Calls, Activate Voice Assistant.

Volume Down/Previous Track Button: Press briefly to decrease volume, long press to go to the previous track.

Type-C Charging Interface: For charging the headphones.

LED Indicator: Displays power, charging, and pairing status.

3.5mm Audio Interface: For wired connection using the included audio cable.


Microphone: For hands-free calls (works in wireless/Bluetooth mode only).

EQ Button: Cycles through 6 different equalizer sound modes.

4. GETTING STARTED

4.1. Charging the Headphones

Before first use, fully charge the headphones. Connect the USB-C charging cable to the Type-C charging interface on the headphones and the other end to a USB power adapter (not included) or a computer's USB port. The LED indicator will show charging status and turn off when fully charged. A quick 10-minute charge provides approximately 4 hours of playtime.

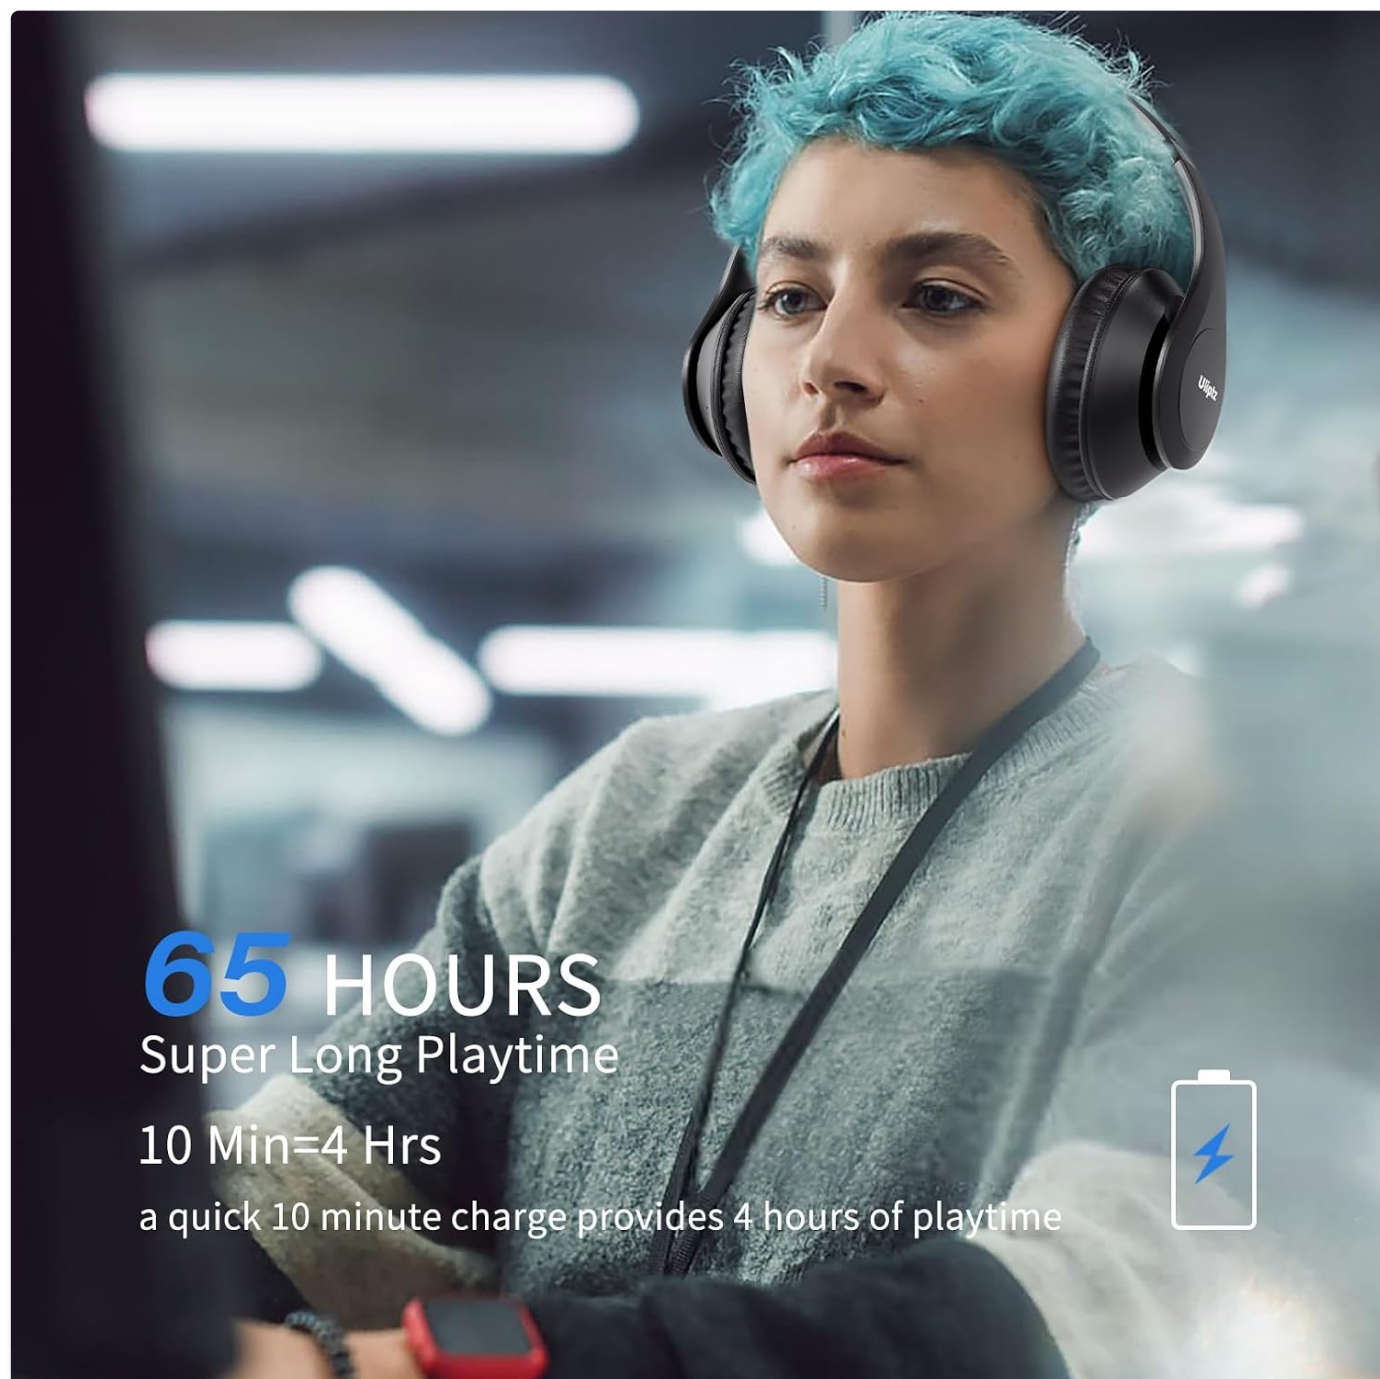

4.2. Power On/Off

- **Power On:** Press and hold the Multi-Function Button (MFB) for 3 seconds until the LED indicator flashes blue.
- **Power Off:** Press and hold the Multi-Function Button (MFB) for 3 seconds until the LED indicator turns off.

4.3. Bluetooth Pairing

1. Ensure the headphones are powered off.
2. Press and hold the MFB for 5 seconds until the LED indicator flashes red and blue alternately, indicating pairing mode.
3. On your device (smartphone, tablet, PC), enable Bluetooth and search for available devices.
4. Select "WH203A" from the list of found devices.
5. Once connected, the LED indicator will flash blue slowly.

4.4. Wired Connection (Aux Mode)

To use the headphones with non-Bluetooth devices or when the battery is depleted, connect the included 3.5mm audio cable to the 3.5mm Audio Interface on the headphones and the audio output port on your device. In wired mode, the microphone and EQ modes are not functional.

5. OPERATING INSTRUCTIONS

5.1. Music Playback

- **Play/Pause:** Press the MFB once.
- **Next Track:** Long press the Volume Up/Next Track button.
- **Previous Track:** Long press the Volume Down/Previous Track button.
- **Volume Up:** Briefly press the Volume Up/Next Track button.
- **Volume Down:** Briefly press the Volume Down/Previous Track button.

5.2. Call Management

- **Answer/End Call:** Press the MFB once.
- **Reject Call:** Long press the MFB for 2 seconds.
- **Redial Last Number:** Double-press the MFB.
- **Activate Voice Assistant:** Triple-press the MFB.

5.3. EQ Sound Modes

The headphones feature 6 EQ sound modes to optimize your listening experience for different music genres. Press the EQ button to cycle through the modes: Rock, BassUp, Pop, Vocal, Classic, and Jazz.

6EQ SOUND MODES



Image: The headphones with a graphic illustrating the 6 available EQ sound modes: Rock, BassUp, Pop, Vocal, Classic, and Jazz.

5.4. Multi-Device Connection

The headphones can be paired with two Bluetooth-enabled devices simultaneously. After connecting to the first device, put the headphones back into pairing mode and connect to the second device. The headphones will seamlessly switch between the two connected devices, allowing you to transition from music on your phone to a call on your laptop without re-pairing.

6. COMFORT AND DESIGN

Uliptz headphones are designed for extended comfort. The ear cups are made of acoustically engineered memory foam, providing a soft, pillow-like feel. The adjustable metal slider headband and rotatable earmuffs ensure a comfortable fit for various head shapes, making them suitable for long listening sessions, online classes, travel, or workouts.

Comfortable Memory Foam

Experience the ultimate comfort brought by the soft ear pads



Foldable Design



Adjustable Headband

Image: A close-up highlighting the comfortable memory foam ear pads, foldable design, and adjustable headband of the headphones.

7. MAINTENANCE

- Clean the headphones regularly with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Avoid exposing the headphones to extreme temperatures, humidity, or direct sunlight.
- Store the headphones in a cool, dry place when not in use. The foldable design allows for compact storage.
- Do not attempt to disassemble or modify the headphones, as this will void the warranty.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Headphones do not power on.	Low battery.	Charge the headphones fully.
Cannot pair with device.	Headphones not in pairing mode; Bluetooth disabled on device; too far from device.	Ensure headphones are in pairing mode (flashing red/blue). Enable Bluetooth on your device. Move headphones closer to the device (within 10 meters).
No sound or distorted sound.	Volume too low; device not connected; audio cable loose (wired mode).	Increase volume on headphones and device. Reconnect Bluetooth or 3.5mm audio cable.
Microphone not working.	Headphones in wired mode; device settings.	Microphone only works in wireless/Bluetooth mode. Check microphone settings on your connected device.

9. SPECIFICATIONS

Feature	Detail
Model Name	WH203A
Connectivity Technology	Wireless (Bluetooth)
Bluetooth Version	5.3
Bluetooth Range	10 Meters
Audio Driver Size	40 Millimeters
Battery Life	Up to 65 Hours
Charging Time	2.5 Hours
Headphones Jack	3.5 mm Jack
Item Weight	180 Grams (6.3 ounces)
Dimensions	5.7 x 4.5 x 3.1 inches
Control Type	Touch Control (Buttons)
Noise Control	Passive Noise Cancellation

10. WARRANTY AND SUPPORT

Uliptz provides a 30-day free return policy and a 12-month warranty for these headphones. If you encounter any issues or have inquiries during use, please do not hesitate to contact Uliptz customer support for assistance.

© 2025 Uliptz. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Why does my phone volume stop working every time I unplug my Uliptz Wireless Bluetooth Headphones?

If your phone's volume stops working after unplugging your Uliptz Wireless Bluetooth Headphones, it is likely that your phone still "thinks" the headphones are connected. This is a common issue with the 3.5mm audio...

[Read full answer](#)