

Manuals.plus /

- › CURECURE /
- › CURECURE Electric Heated Blanket User Manual (Model HB1613EU)

## CURECURE HB1613EU

# CURECURE Electric Heated Blanket User Manual

MODEL: HB1613EU

## Introduction

Thank you for choosing the CURECURE Electric Heated Blanket. This manual provides essential information for the safe and effective use, maintenance, and troubleshooting of your new heated blanket. Please read all instructions carefully before first use and retain this manual for future reference.



Image: The CURECURE Electric Heated Blanket provides warmth and comfort for various relaxation activities.

## Important Safety Instructions

To reduce the risk of burns, electric shock, fire, and personal injury, this product must be used in

accordance with the following instructions:

- Do not use with an infant, child, incapacitated person, or anyone insensitive to heat.
- Do not use if wet.
- Do not fold, bunch, or crease the blanket while in use.
- Do not insert pins or any other sharp objects into the blanket.
- Do not dry clean this blanket. Cleaning solvents may damage the insulation of the heating element.
- Always disconnect the controller from the blanket and unplug from the power outlet before washing.
- Inspect the blanket and power cord regularly for any signs of wear or damage. If damaged, do not use.
- Keep pets away from the blanket to prevent damage to the heating elements.
- Unplug the blanket from the power outlet when not in use.
- Do not use this blanket with a generator, power inverter, or converter.



Image: The blanket features fast and even heating with built-in overheating protection for user safety.

## Product Features

- **Adjustable Heat Settings:** Offers 6 temperature levels for personalized comfort.
- **Automatic Shut-off:** Equipped with a 6-hour auto-off timer for safety and energy efficiency.

- **Rapid and Even Heating:** Designed to heat up quickly and distribute warmth uniformly.
- **Overheating Protection:** Integrated safety system to prevent overheating.
- **Premium Material:** Constructed from a blend of soft flannel and faux wool for breathability and comfort.
- **Detachable Controller:** Allows for easy removal for cleaning and versatile use as a regular blanket.
- **Machine Washable:** Easy to clean and maintain (after detaching the controller).
- **Generous Size:** Dimensions of 180 x 130 cm (approximately 70.8 x 51.1 inches).



Image: The blanket features a soft, double-layered fabric for enhanced comfort.

## Package Contents

Please check the package contents upon receipt:

- 1 x CURECURE Electric Heated Blanket (Model HB1613EU)
- 1 x Detachable Controller
- 1 x User Manual



Image: The package includes the heated blanket and its control unit.

## Setup

Follow these steps to set up your electric heated blanket:

1. **Unpack:** Carefully remove the blanket and controller from their packaging.
2. **Lay Flat:** Lay the blanket flat on a bed, couch, or other desired surface, ensuring it is completely unfolded and not bunched.
3. **Connect Controller:** Locate the connector on the blanket and firmly plug the detachable controller into it. Ensure the connection is secure.
4. **Plug In:** Plug the power cord of the controller into a standard, easily accessible electrical outlet.

## Operating Instructions

To operate your CURECURE Electric Heated Blanket:

1. **Power On/Off:** Press the power button on the controller to turn the blanket on. The LED display will illuminate. Press the button again to turn it off.
2. **Adjust Heating Level:** Use the temperature adjustment button (or slider, depending on controller design) to cycle through the 6 available heating levels. The LED display will show the selected level (e.g., '1' for lowest, '6' for highest).

3. **Automatic Shut-off:** The blanket is designed to automatically turn off after 6 hours of continuous use. This is a safety feature and cannot be adjusted. If you wish to continue using the blanket after it has turned off, simply press the power button again.



Image: The controller features an LED display for heat settings and an auto-off timer.

## Maintenance and Cleaning

Proper care will extend the life of your heated blanket:

1. **Disconnect Power:** Always unplug the blanket from the wall outlet and detach the controller from the blanket before cleaning. Ensure the connector is dry before reattaching.
2. **Machine Wash:** The blanket is machine washable. Wash on a gentle cycle with cold water (maximum 40°C / 104°F). Do not use bleach or harsh detergents.
3. **Drying:** Tumble dry on low heat or line dry. Ensure the blanket is completely dry before reconnecting the controller and using it. Do not iron.
4. **Storage:** When not in use, store the blanket neatly folded in a cool, dry place. Avoid placing heavy objects on top of the blanket to prevent damage to the heating wires.

# Machine Washable



Removable  
controller

Image: The detachable controller allows for easy machine washing of the blanket.

## Troubleshooting

If you encounter issues with your heated blanket, refer to the following table:

Problem	Possible Cause	Solution
Blanket not heating	Not plugged in; Controller not connected; Power button off; Overheating protection activated	Ensure power cord is securely plugged in. Check controller connection. Press power button. Unplug, let cool for 30 mins, then replug.
Controller display not working	No power; Loose connection	Check power cord and controller connection.
Uneven heating	Blanket is folded or bunched	Lay the blanket completely flat and unfolded during use.

If the problem persists after trying these solutions, please contact CURECURE customer support.

## Specifications

<b>Brand</b>	CURECURE
<b>Model Number</b>	HB1613EU
<b>Color</b>	Grey
<b>Dimensions (L x W)</b>	180 x 130 cm (approx. 70.8 x 51.1 inches)
<b>Material</b>	Flannel, Faux Wool
<b>Heating Levels</b>	6
<b>Auto Shut-off</b>	6 Hours
<b>Item Weight</b>	2.09 Kilograms (approx. 4.6 lbs)
<b>Special Features</b>	Breathable, Detachable Controller, Machine Washable

# Soft And Cozy Flannel

Size :180\*130 cm

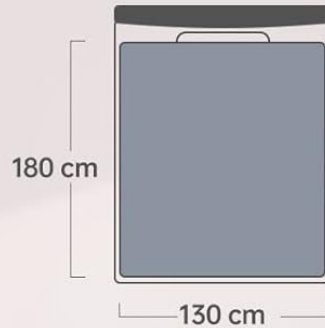


Image: The blanket measures 180x130 cm, suitable for various uses.

## Warranty and Support

For warranty information, please refer to the warranty card included with your product. Specific warranty terms and conditions may vary.

For technical support, product inquiries, or assistance with any issues not covered in this manual, please visit the official CURECURE website or contact their customer service department. Contact details can typically be found on the product packaging or the brand's official website.

