

[Manuals.plus](#) /

› [Zing](#) /

› Zing Go Go Bird RC140R Remote Control Flying Toy Instruction Manual

Zing RC140R

Zing Go Go Bird RC140R Remote Control Flying Toy Instruction Manual

1. INTRODUCTION

Welcome to the world of the Zing Go Go Bird RC140R, a remote-controlled flying toy designed to mimic the flight of a real bird. This manual provides essential information for the safe and enjoyable operation of your new toy. Please read all instructions carefully before use.

2. WHAT'S IN THE BOX

- Zing Go Go Bird Flying Toy
- Remote Controller
- Rechargeable Lithium Ion Battery (for bird)
- USB Charging Cable
- Display Stand
- Mini Screwdriver



Figure 2.1: All components included with the Zing Go Go Bird.

The image above displays the Go Go Bird, its remote controller, charging cable, display stand, and a small screwdriver. Please ensure all items are present.

3. SETUP

3.1. Remote Controller Battery Installation

1. Locate the battery compartment on the back of the remote controller.
2. Use the included mini screwdriver to open the battery compartment.
3. Insert 2 AAA batteries (not included) into the compartment, ensuring correct polarity (+/-).
4. Close the battery compartment and secure it with the screw.

3.2. Go Go Bird Battery Charging

The Go Go Bird is powered by an internal rechargeable Lithium Ion battery. It is recommended to fully charge the bird before its first flight.

1. Connect the USB charging cable to the charging port on the Go Go Bird.
2. Plug the other end of the USB cable into a compatible USB power source (e.g., computer, USB wall adapter).
3. The indicator light on the bird will show charging status (refer to the Quick Start Guide image for details).
4. Once fully charged, disconnect the charging cable.

3.3. Power On and Pairing

1. Push the power button on the bottom of the Go Go Bird. A green indicator light will turn on.
2. Push the power button on the remote controller. A green indicator light on the remote will turn on.
3. The bird and remote should automatically pair. If not, turn both off and on again.

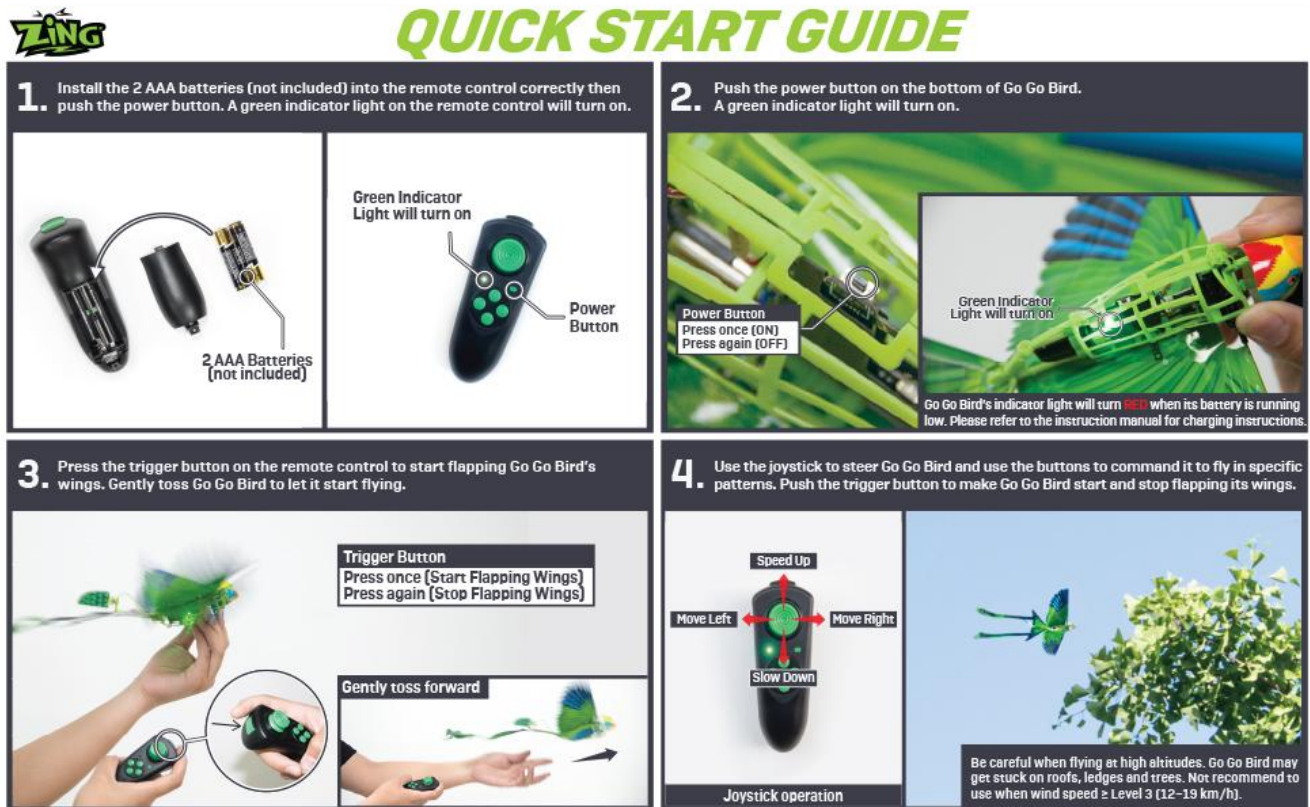


Figure 3.1: Quick Start Guide for initial setup and power on.

The Quick Start Guide image illustrates the steps for installing batteries in the remote and powering on the Go Go Bird, including indicator light information.

4. OPERATING INSTRUCTIONS

4.1. First Flight

1. Ensure the Go Go Bird and remote are powered on and paired.
2. Gently toss the flying toy bird upwards to initiate flight. The wings will begin flapping automatically.
3. Use the joystick on the remote controller to steer the bird:
 - Move the joystick forward to increase speed and ascend.
 - Move the joystick backward to decrease speed and descend.
 - Move the joystick left or right to steer the bird in the desired direction.
4. The Go Go Bird features an obstacle avoidance system, allowing it to fly in the opposite direction when an obstacle is too close.



Figure 4.1: Operating the Go Go Bird with the remote controller.

This image shows a child actively controlling the Go Go Bird, demonstrating the ease of use of the remote controller during flight.

4.2. Landing

To land the Go Go Bird, gently toss it downwards. The bird will automatically stop when it detects contact with the ground.

4.3. LED Lights

The Go Go Bird is equipped with bright 7-color changing LED lights, enhancing visibility and enjoyment during evening flights.

5. FEATURES

- **Realistic Flight:** Flapping wings create an authentic bird-like flying experience.
- **Easy Control:** Simple remote controller design, similar to a video game controller, for quick learning and manual flight.

- **Obstacle Avoidance:** Automatically changes direction when an obstacle is detected nearby, preventing collisions.
- **LED Illumination:** Features 7-color changing LED lights for enhanced fun and visibility, especially during night flights.
- **Durable Design:** Lightweight body construction for resilience during play.



Figure 5.1: The Go Go Bird's smart obstacle avoidance in action.

This image illustrates the Go Go Bird's ability to detect and avoid obstacles, showcasing its intelligent flight capabilities.

6. MAINTENANCE

To ensure the longevity and optimal performance of your Zing Go Go Bird, follow these maintenance guidelines:

- **Cleaning:** Gently wipe the bird with a soft, dry cloth to remove dust or debris. Avoid using water or cleaning solutions directly on the electronics.
- **Storage:** Store the Go Go Bird and its remote in a cool, dry place away from direct sunlight and extreme

temperatures. Use the provided display stand for safe storage.

- **Battery Care:** Fully charge the bird's battery before long-term storage. If not used for extended periods, periodically charge the battery to maintain its health. Remove AAA batteries from the remote if not in use for a long time.
- **Inspection:** Regularly inspect the wings and body for any signs of damage. Do not operate if parts are broken or bent.

7. TROUBLESHOOTING

If you encounter issues with your Zing Go Go Bird, please refer to the following common solutions:

- **Bird not flying:**
 - Ensure the bird's internal battery is fully charged.
 - Check if the remote controller has fresh AAA batteries and is powered on.
 - Verify that the bird and remote are properly paired (turn both off and on again).
 - Confirm that the wings are not obstructed or damaged.
- **Poor control or erratic flight:**
 - Ensure you are within the recommended operating range of the remote controller.
 - Avoid flying in windy conditions (recommended for wind speed Level 1-2, 3-19 km/h).
 - Check for any physical damage to the bird's body or wings that might affect aerodynamics.
- **LED lights not working:**
 - Ensure the bird is powered on and its battery is charged.
 - If the issue persists, contact customer support.

8. SPECIFICATIONS

Brand	Zing
Model Number	RC140R
Product Dimensions	11.81 x 7.95 x 3.07 inches
Item Weight	8.3 ounces
Batteries (Bird)	2 Lithium Ion batteries (included)
Batteries (Remote)	2 AAA batteries (not included)
Manufacturer Recommended Age	0 - 12 years

9. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided on the product packaging or visit the official Zing website. Keep your purchase receipt as proof of purchase.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09NNRQ7BZ>

More documents and user manuals: **<https://manuals.plus/>**