

[Manuals.plus](#) /

› [DC Comics](#) /

› DC Comics Black Manta 12-inch Action Figure Instruction Manual (Model 6065753)

DC Comics 6065753

DC Comics Black Manta 12-inch Action Figure

Model: 6065753

INTRODUCTION

Thank you for purchasing the DC Comics Black Manta 12-inch Action Figure. This figure is inspired by the *Aquaman and the Lost Kingdom* movie and features detailed sculpting and 11 points of articulation for dynamic posing. This manual provides essential information for the proper handling, operation, and care of your action figure.

SETUP

Unboxing

1. Carefully remove the action figure from its packaging. Ensure all plastic ties and protective materials are detached.
2. Inspect the figure for any visible damage or missing parts.
3. Retain packaging for future storage or reference if desired.





Image: Black Manta 12-inch action figure displayed within its retail packaging.

OPERATING THE ACTION FIGURE

Posing and Articulation

The Black Manta action figure features 11 points of articulation, allowing for a wide range of poses. These articulation points are located at the neck, shoulders, elbows, wrists, hips, and knees.

- **Head:** Rotate the head left and right, and tilt slightly up and down.
- **Shoulders:** Move arms up, down, forward, and backward.
- **Elbows:** Bend arms at the elbow joint.
- **Wrists:** Rotate hands at the wrist.
- **Hips:** Move legs forward, backward, and slightly outwards.
- **Knees:** Bend legs at the knee joint.

When posing, apply gentle, even pressure to avoid stressing the joints. Do not force joints beyond their natural range of motion.



Image: The 12-inch Black Manta action figure standing upright, illustrating its scale.



FUN AND EASY TO POSE

11 POINTS OF ARTICULATION

Image: A child interacting with the Black Manta figure, showcasing its posability through its 11 points of articulation.

MAINTENANCE

Cleaning Instructions

To maintain the appearance of your Black Manta action figure, follow these cleaning guidelines:

- Use a soft, dry cloth to gently wipe away dust and surface dirt.
- For more stubborn marks, lightly dampen a cloth with water and a mild soap solution. Wipe the affected area carefully, then immediately dry with a clean, soft cloth.
- Avoid using harsh chemicals, abrasive cleaners, or excessive water, as these can damage the paint finish or plastic material.
- Do not submerge the figure in water.

Storage

Store the action figure in a cool, dry place away from direct sunlight and extreme temperatures to prevent material degradation or discoloration.

TROUBLESHOOTING

Stiff Joints

If a joint feels stiff, gently manipulate it back and forth within its range of motion. Avoid excessive force. In some cases, a small amount of silicone-based lubricant (not petroleum-based) can be applied to the joint, but this should be done sparingly and with caution to avoid damaging the plastic.

Loose Joints

Over time, joints may become slightly loose. This is generally part of normal wear and tear. If a joint becomes too loose, it may affect the figure's ability to hold certain poses. There are advanced methods for tightening joints, but these often involve disassembling the figure and are not recommended for general users.

SPECIFICATIONS

| Feature | Detail |
|------------------------------|----------------------|
| Product Dimensions | 4 x 2.25 x 12 inches |
| Item Weight | 9 ounces |
| Model Number | 6065753 |
| Manufacturer Recommended Age | 5 - 16 years |
| Articulation Points | 11 |

WARRANTY AND SUPPORT

This product is covered by the Spin Master Care Commitment. For detailed warranty information, product support, or to contact customer service, please refer to the official Spin Master website or the contact information provided on the product packaging. Please have your model number (6065753) available when contacting support.