

iDance Blaster (d99051c9-aec6-4745-9ed7-e5ce94fdc19f)

iDance Blaster Bluetooth Party Box Speaker Sound System User Manual

Model: Blaster (d99051c9-aec6-4745-9ed7-e5ce94fdc19f)

Brand: iDance

1. INTRODUCTION

Welcome to the user manual for your iDance Blaster Bluetooth Party Box Speaker Sound System. This manual provides essential information for the safe and efficient operation of your device. Please read it thoroughly before use and retain it for future reference.

The iDance Blaster B2X is a portable audio system designed to deliver powerful sound and dynamic light effects. It features 100 watts of output with extra bass, a rechargeable battery offering 4-8 hours of playtime, and versatile connectivity options including Bluetooth, MP3 playback, and an FM tuner. Its integrated disco LED lighting enhances any gathering, making it ideal for parties and entertainment.

2. PACKAGE CONTENTS

Please ensure all items listed below are present in your package:

- iDance Blaster Bluetooth Party Box Speaker
- USB Charging Cable
- User Manual (this document)

3. KEY FEATURES

- **Powerful Audio:** 100 Watts output with Extra Bass for crystal clear sound.
- **Long Battery Life:** Rechargeable LI-ON battery provides 4-8 hours of playtime.
- **Dynamic Light Show:** In-built dual disco LED lighting within the woofer.
- **Wireless Connectivity:** Bluetooth® streaming from smartphones, tablets, or laptops.
- **Versatile Playback:** MP3 Playback, FM tuner, USB, and 3.5mm Line-In Inputs.
- **Karaoke Ready:** Microphone input with Echo Effect, compatible with YouTube, Spotify, and most karaoke apps.

- **Portability:** Compact design with a carry handle and dock for smart devices.

4. PRODUCT OVERVIEW

Familiarize yourself with the different parts of your iDance Blaster speaker.



Figure 4.1: Front View

Shows the speaker's front grille with two illuminated woofers displaying multi-color LED light effects.



Figure 4.2: Top Control Panel

Details the top panel with buttons for LED control, sharing mode, play/pause, track navigation, mode selection, and a dock for a smartphone/tablet.



Figure 4.3: Rear Panel

Illustrates the rear panel with the power switch, DC 5V charging port, TF card slot, USB port, AUX input, and Microphone input.



Figure 4.4: Dimensions

Shows the speaker's height (28cm), width (13cm), and depth (13.5cm).

5. SETUP

5.1 Charging the Speaker

Before first use, fully charge the iDance Blaster speaker. Connect the supplied USB charging cable to the DC 5V port on the rear of the speaker and the other end to a compatible USB power adapter (not included) or a computer's USB port. The charging indicator light will illuminate during charging and turn off when fully charged.

5.2 Powering On/Off

To power on the speaker, slide the power switch located on the rear panel to the "ON" position. To power off, slide the switch to the "OFF" position.

6. OPERATING INSTRUCTIONS

6.1 Bluetooth Pairing

1. Ensure the speaker is powered on.
2. The speaker will automatically enter Bluetooth pairing mode, indicated by a flashing LED.
3. On your smartphone, tablet, or laptop, enable Bluetooth and search for available devices.
4. Select "iDance Blaster" from the list of devices.
5. Once paired, the speaker will emit a confirmation sound, and the LED will stop flashing.

You can now stream audio wirelessly from your device to the iDance Blaster.

6.2 Using the FM Tuner

1. Press the "M" (Mode) button on the top panel until you hear the FM radio mode announcement.
2. Press the Play/Pause button to automatically scan and save available FM stations.
3. Use the "Previous Track" and "Next Track" buttons to navigate between saved stations.

6.3 USB/TF Card Playback

Insert a USB flash drive or TF (microSD) card containing MP3 audio files into the respective port on the rear panel. The speaker will automatically switch to USB/TF card mode and begin playing music. Use the control buttons on the top panel for playback control (play/pause, next/previous track).

6.4 AUX Input

Connect an external audio device (e.g., MP3 player, computer) to the AUX input port on the rear panel using a 3.5mm audio cable (not included). The speaker will automatically switch to AUX mode. Control playback from your connected device.

6.5 Microphone Input and Echo Effect

Connect a microphone (not included) to the MIC input port on the rear panel. Adjust the microphone volume and echo effect using the dedicated controls on the speaker (if available, otherwise through the connected device or app).

6.6 LED Light Control

Press the "LED" button on the top panel to cycle through different light modes or to turn the LED lights on/off.

6.7 Sharing Mode (TWS - True Wireless Stereo)

The iDance Blaster supports Sharing Mode, allowing you to connect two iDance Blaster speakers wirelessly for a stereo sound experience. Refer to the specific instructions for TWS pairing, usually involving pressing and holding the "SHARING" button on both speakers simultaneously until they pair.

7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the speaker's exterior. Do not use abrasive cleaners, waxes, or solvents.
- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place away from direct sunlight and

extreme temperatures.

- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in use.
- **Water Exposure:** This product is not waterproof. Avoid exposing it to water or excessive moisture.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Battery is depleted.	Charge the speaker using the supplied USB cable.
No sound	Volume is too low; Incorrect input mode; Device not paired (Bluetooth).	Increase volume on speaker and source device; Select correct input mode (Bluetooth, FM, USB, AUX); Re-pair Bluetooth device.
Bluetooth connection unstable	Device is too far from speaker; Interference from other devices.	Move device closer to speaker (within 10 meters); Avoid placing speaker near other wireless devices.
FM radio static	Weak signal.	Relocate the speaker to an area with better reception.

9. SPECIFICATIONS

Feature	Detail
Model Name	Blaster
Item Model Number	d99051c9-aec6-4745-9ed7-e5ce94fdc19f
Brand	iDance
Power Output	100 Watts
Connectivity	Bluetooth, USB, 3.5mm AUX, TF Card, FM Radio
Battery Life	4-8 Hours (rechargeable LI-ON)
Product Dimensions (H x W x D)	28 cm x 13 cm x 13.5 cm
Color	Black
Material	Plastic
Included Components	USB charging cable

10. WARRANTY AND SUPPORT

The iDance Blaster Bluetooth Party Box Speaker comes with a limited warranty. Please refer to the warranty card included in your original packaging for specific terms and conditions. For technical support, service, or warranty claims, please contact your local retailer or visit the official iDance website for contact information.

Manufacturer: iDance

Website: www.idanceaudio.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question