

Fotopro Q10S

Fotopro Q10S Selfie Stick Tripod User Manual

Model: Q10S | Brand: Fotopro

1. INTRODUCTION

Thank you for choosing the Fotopro Q10S Selfie Stick Tripod. This versatile 4-in-1 device combines a selfie stick, a tripod, a detachable Bluetooth remote, and an integrated fill light, designed to enhance your mobile photography and videography experience. This manual provides detailed instructions on how to set up, operate, and maintain your device to ensure optimal performance.

2. PRODUCT FEATURES

- **Detachable Bluetooth Remote Control:** Enjoy stable Bluetooth connectivity with a range of up to 10 meters, perfect for capturing selfies, videos, FaceTime calls, or live streams. The remote can be used handheld or when the device is in tripod mode for group photos.
- **Compact and Highly Compatible:** This selfie stick extends up to 670mm and is compatible with most smartphones ranging from 4.7 to 6.5 inches, running iOS 5.1 or Android 4.4 and above. Weighing only 130g and folding down to a mini size of 15.2cm, it's incredibly lightweight and portable, fitting easily into your pocket or bag.
- **Integrated Fill Light:** Long press to activate the fill light. Short press to cycle through 6 brightness levels and three color temperatures, providing clearer images even in low-light conditions.
- **Integrated Tripod and 360° Rotation:** A perfect combination of a portable selfie stick, desktop tripod, and floor stand. It frees your hands for various activities like taking selfies, recording family videos, online learning, live streaming, video calls, and cooking. Instantly switch between horizontal and vertical camera modes and adjust to different angles.

3. SETUP GUIDE

3.1 Unpacking and Initial Inspection

Carefully remove all components from the packaging. Ensure all parts are present and undamaged: the selfie stick tripod unit and the detachable Bluetooth remote.

3.2 Inserting the Remote Control Battery

The Bluetooth remote control requires one CR2032 battery. Locate the battery compartment on the side or back of the remote, open it, and insert the CR2032 battery with the positive (+) side facing up. Close the compartment securely.

3.3 Bluetooth Pairing

1. Ensure the remote control has a battery and is powered on (if it has a power switch).
2. On your smartphone, go to Settings > Bluetooth and turn Bluetooth on.
3. The remote control will appear in the list of available devices (e.g., "Fotopro Remote" or similar). Tap on it to pair.
4. Once paired, the remote's indicator light will typically stop blinking or turn solid, indicating a successful connection.

3.4 Attaching Your Smartphone

Gently pull open the phone holder clamp. Place your smartphone securely within the clamp, ensuring it is centered and stable. The holder is designed to accommodate phones between 4.7 and 6.5 inches.



Image: The Fotopro Q10S Selfie Stick Tripod shown in its extended selfie stick mode, compact folded mode, and tripod mode with a

phone attached. A detached wireless remote is also visible.

4. OPERATING INSTRUCTIONS

4.1 Extending the Selfie Stick

Hold the base of the unit and gently pull the phone holder upwards to extend the telescopic pole. Extend it to your desired length, up to 670mm (approximately 2.2 feet).

4.2 Deploying the Tripod Legs

At the base of the selfie stick, gently push down on the bottom section to unfold the integrated tripod legs. Spread the legs wide enough to ensure stability on a flat surface.

4.3 Using the Fill Light

- **Power On/Off:** Long press the power button on the fill light unit to turn it on or off.
- **Adjust Brightness/Color Temperature:** Once the light is on, short press the power button to cycle through 6 levels of brightness and 3 different color temperatures (warm, natural, cool).

3 Color Temperature Options 6 Brightness Levels

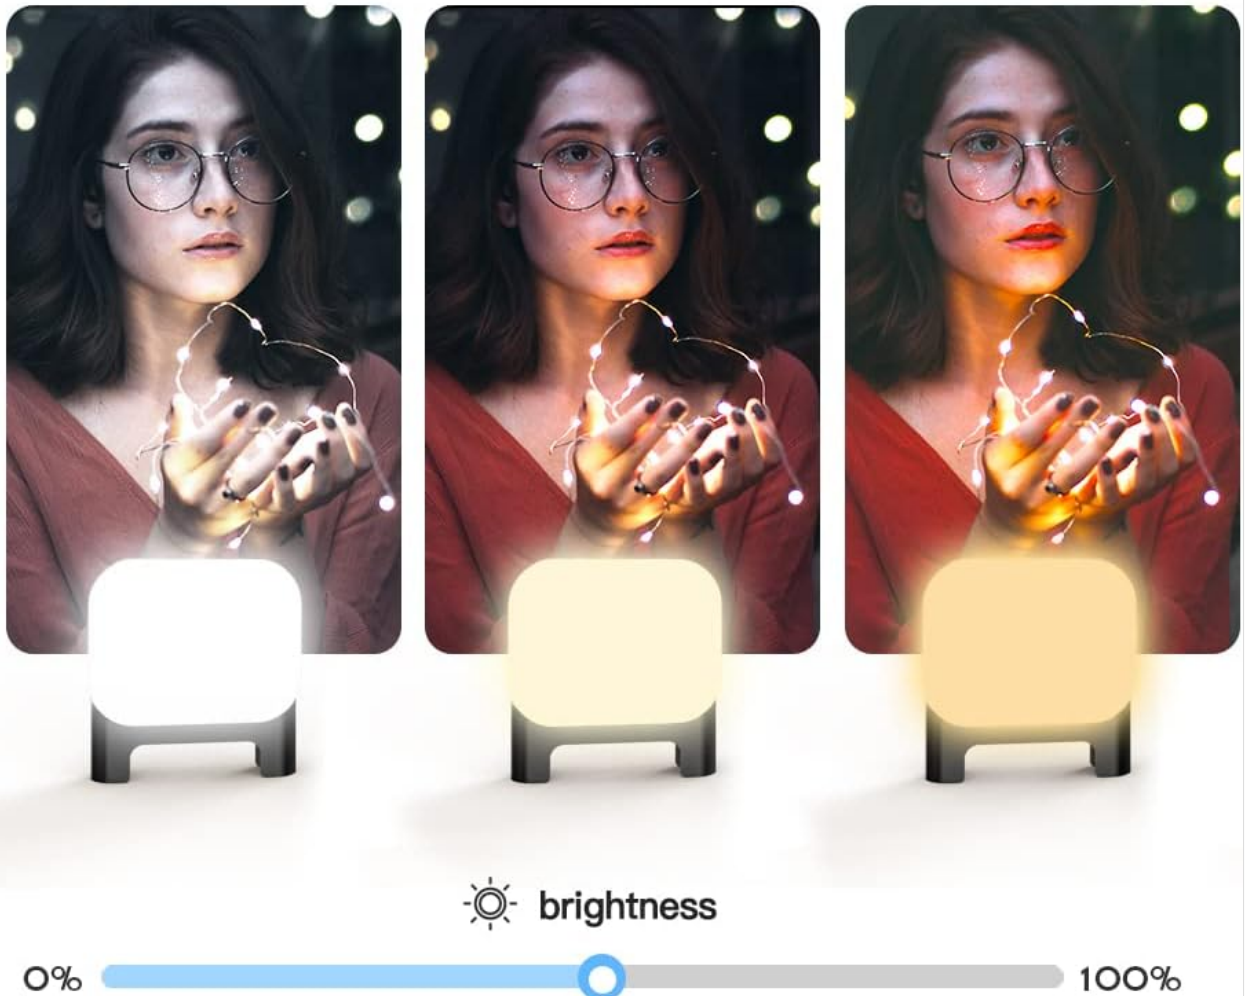


Image: Illustration showing the fill light's three color temperature options (cool white, warm white, mixed) and a brightness slider indicating 6 levels of adjustment.

4.4 Rotating the Phone Holder

The phone holder features a 360° rotatable design. You can manually rotate your phone to switch between horizontal (landscape) and vertical (portrait) modes without removing it from the clamp. This allows for flexible shooting angles.

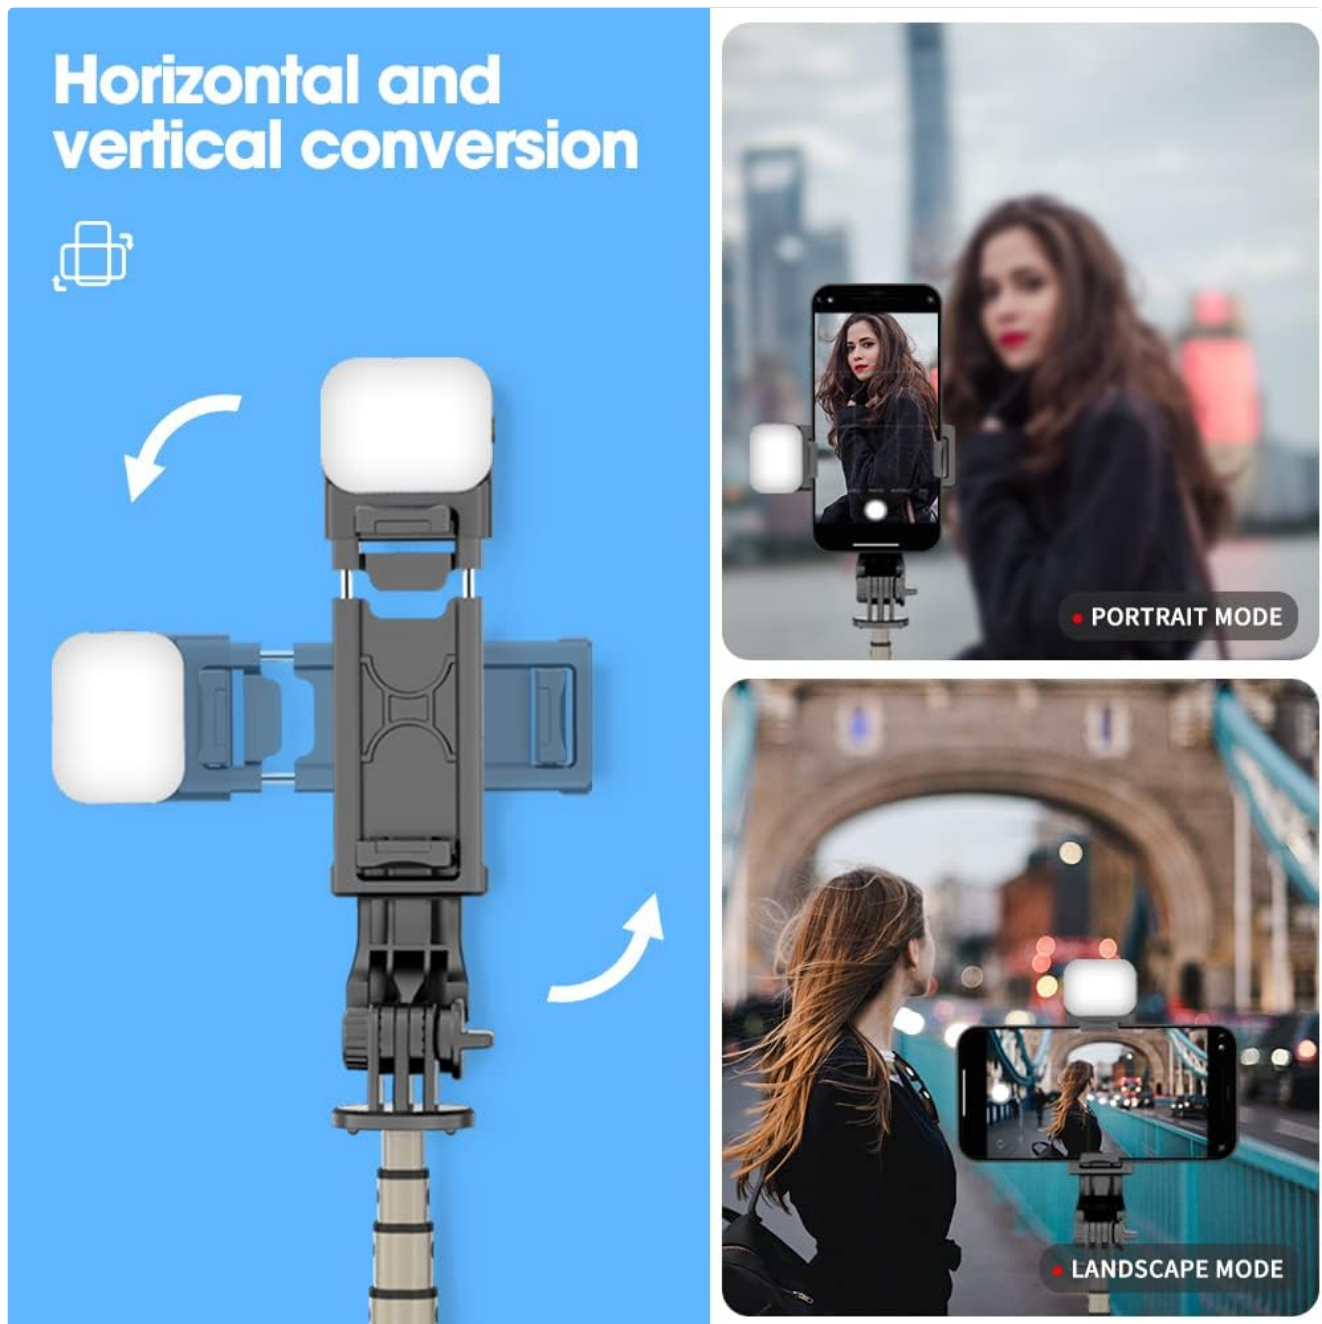


Image: A diagram illustrating the mechanism for horizontal and vertical conversion of the phone holder, with examples of a phone in portrait and landscape mode.

4.5 Using the Bluetooth Remote

Once paired, open your smartphone's camera app. Press the button on the Bluetooth remote control to trigger the shutter and capture photos or start/stop video recording. The remote can be detached from the selfie stick for remote operation.



Image: The Fotopro Q10S selfie stick tripod with a phone attached, and the wireless remote control shown detached from its storage slot on the stick.

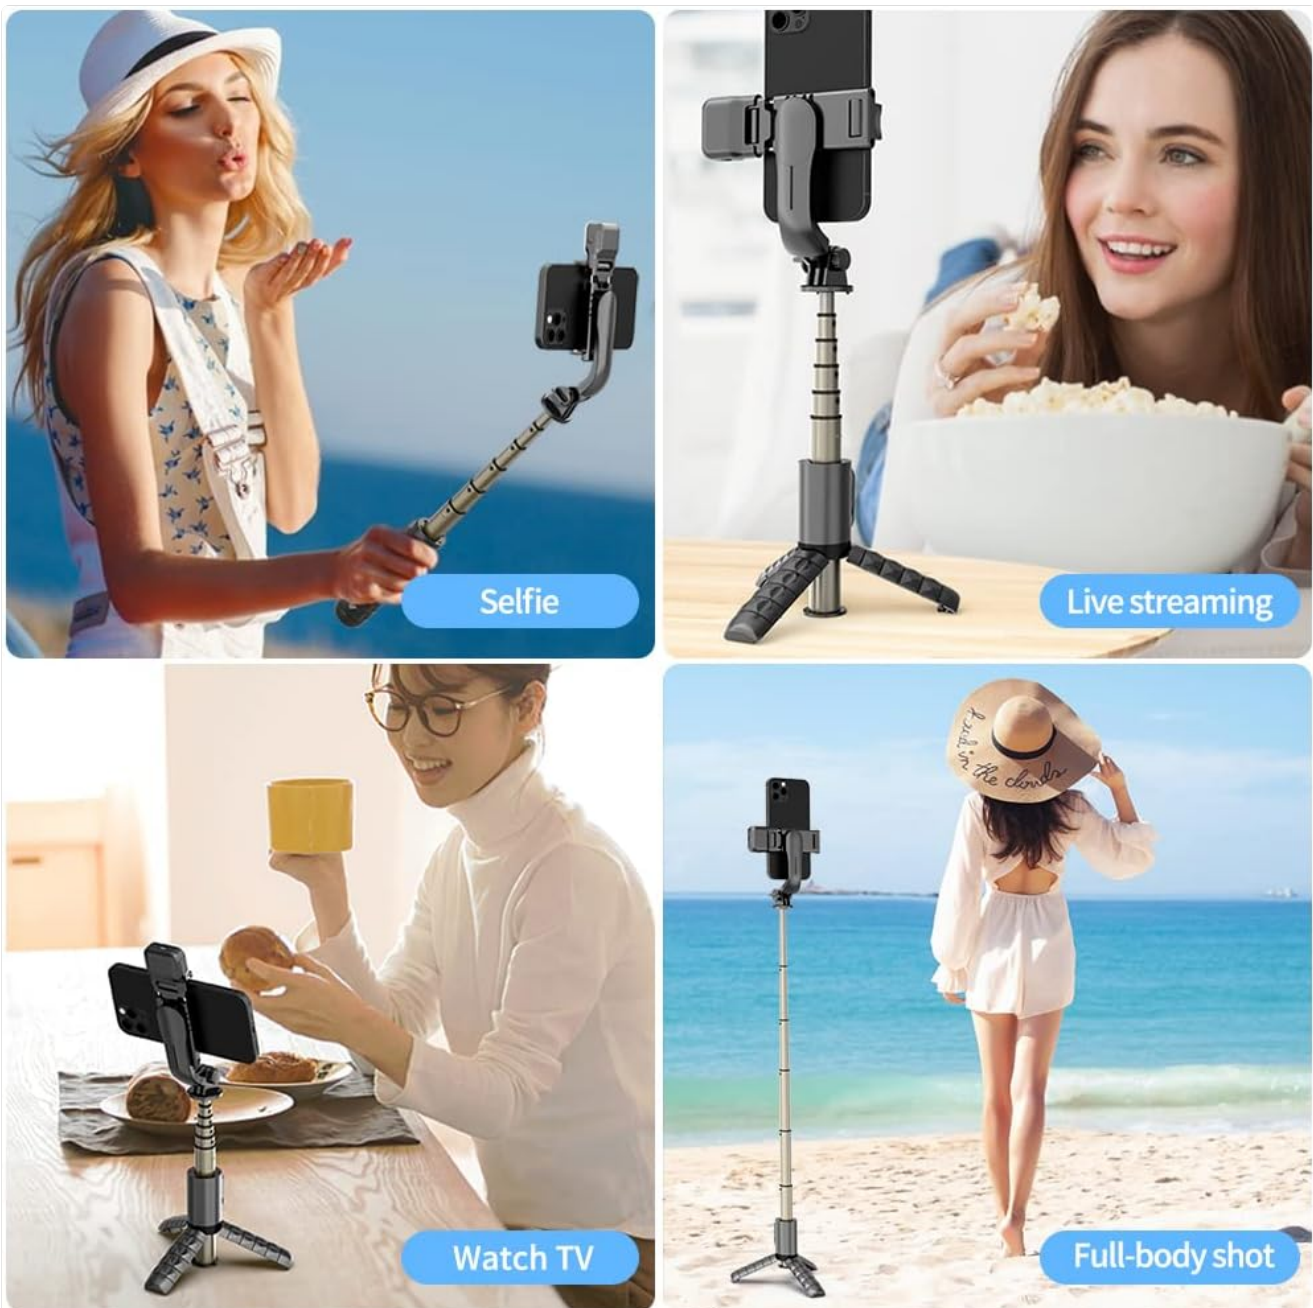 


Image: Four panels depicting different usage scenarios: taking a selfie, live streaming, watching TV with the tripod, and taking a full-body shot.

5. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to wipe down the device. Avoid using harsh chemicals or abrasive cleaners.
- **Storage:** When not in use, fold the selfie stick tripod to its compact size and store it in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Replacement:** If the Bluetooth remote's performance degrades or it stops connecting, replace the CR2032 battery as described in Section 3.2.

6. TROUBLESHOOTING

- **Remote Not Connecting:**
 - Ensure the remote battery is inserted correctly and has sufficient charge.
 - Make sure Bluetooth is enabled on your phone.

- Forget the device in your phone's Bluetooth settings and try pairing again.
- Ensure the remote is within the 10-meter operating range.
- **Fill Light Not Working:**
 - Ensure you are long-pressing the power button to turn it on.
 - Check if the light unit has its own internal battery and if it needs charging (if applicable, though not specified for this model).
- **Tripod Instability:**
 - Ensure the tripod legs are fully extended and spread on a flat, stable surface.
 - Do not overload the tripod with accessories not intended for use with this device.

7. SPECIFICATIONS

Brand	Fotopro
Model	Q10S
Color	Black
Compatible Devices	Smartphone (4.7 - 6.5 inches)
Material	Aluminum
Maximum Height	100 Centimeters (approx. 3.28 feet)
Minimum Height	5.98 Inches (approx. 15.2 cm)
Folded Dimensions	15.2 cm (approx. 5.98 inches)
Net Weight	130 grams (approx. 0.29 lbs)
Remote Battery Type	1 x CR2032 (required)
UPC	732781386607



Image: Visual representation of the Fotopro Q10S's dimensions (extended heights of 2.3 feet/70cm and 2.5 feet/76cm), net weight (130g), and compact folded size (152mm), highlighting its lightweight and portable design.

8. WARRANTY AND SUPPORT

Fotopro provides an 18-month quality guarantee for this product. If you encounter any quality issues with your Fotopro Q10S Selfie Stick Tripod, please contact our customer service for assistance. We are committed to responding to your inquiries and resolving your problems within 24 hours.

For further support or inquiries, please refer to the contact information provided with your purchase or visit the official Fotopro website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question