

## LOMCA HTZ9F

# LOMCA Replacement Remote Control Instruction Manual

For Sony Soundbar Models: HT-Z9F, SA-WZF9, HT-X9000F, SA-XF9000

## INTRODUCTION

---

This manual provides instructions for the LOMCA replacement remote control, designed for use with specific Sony Soundbar models including HT-Z9F, SA-WZF9, HT-X9000F, and SA-X9000F. This remote offers a direct replacement solution, requiring no complex programming for immediate use.

## SETUP

---

### 1. Battery Installation

The remote control requires two (2) AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery cover off.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

**Requires two 1.5V AAA  
Batteries**  
(Batteries are not included)



**Figure 1:** Battery compartment with two AAA battery slots.

## 2. Initial Use

This replacement remote control is designed for immediate use with compatible Sony Soundbar models. No programming or setup is required. Once batteries are installed, the remote is ready to operate your soundbar.

## OPERATING INSTRUCTIONS

---

The LOMCA replacement remote control provides full functionality for your Sony Soundbar. Familiarize yourself with the button layout and their respective functions:



Figure 2: LOMCA Replacement Remote Control Layout.

- **Power Button** (): Turns the soundbar on or off.

- **Input Selection (TV, HDMI1, HDMI2, ANALOG, USB):** Selects the audio input source.
- **Sound Modes (AUTO SOUND, CINEMA, MUSIC, GAME, NEWS, SPORTS, STANDARD, NIGHT):** Changes the sound processing mode for different content types.
- **Volume Control (+/-):** Adjusts the main volume level.
- **Mute Button (M):** Mutes or unmutes the sound.
- **Navigation Pad (Up, Down, Left, Right, Enter):** Used for menu navigation and selection.
- **HOME:** Accesses the soundbar's home menu.
- **BACK:** Returns to the previous screen or menu.
- **OPTIONS:** Displays additional options for the current function.
- **REAR (+/-):** Adjusts the volume of rear speakers (if applicable).
- **SW (+/-):** Adjusts the subwoofer volume level.
- **AUDIO:** Cycles through audio settings or tracks.
- **DISPLAY:** Changes the information displayed on the soundbar.
- **Playback Controls (|<, ||, >|):** Controls media playback (e.g., skip back, play/pause, skip forward).

Ensure the remote control is pointed directly at the soundbar's infrared receiver for optimal performance.

## MAINTENANCE

---

### Battery Replacement

Replace the batteries when the remote control's response becomes sluggish or stops working. Refer to the "Battery Installation" section for detailed steps. Always replace both batteries simultaneously with new AAA batteries.

### Cleaning

To clean the remote control, wipe it gently with a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these can damage the remote's surface or internal components.

## TROUBLESHOOTING

---

- **Remote not responding:**
  - Check if the batteries are inserted correctly with the correct polarity.
  - Replace old batteries with new ones.
  - Ensure there are no obstructions between the remote control and the soundbar's infrared receiver.
  - Point the remote directly at the soundbar.
- **Intermittent response:**
  - This often indicates low battery power. Replace the batteries.
  - Ensure you are within the effective range of the soundbar.

## SPECIFICATIONS

---

Feature	Detail
---------	--------

Feature	Detail
Brand	LOMCA
Compatible Devices	Sony Soundbars (HT-Z9F, SA-WZF9, HT-X9000F, SA-XF9000)
Model Number	HTZ9F (replacement model)
Special Feature	No Programming Required
Color	Black
Max Number of Supported Devices	1
Item Weight	2.29 ounces
Package Dimensions	7.8 x 3.62 x 0.98 inches

## WARRANTY AND SUPPORT

---

### Warranty Information

This LOMCA replacement remote control comes with a **90-day warranty** from the date of purchase. This warranty covers manufacturing defects and ensures the product functions as intended under normal use. Please retain your proof of purchase for warranty claims.

### Customer Support

For any questions, troubleshooting assistance, or warranty inquiries, please contact the manufacturer, LOMCA, through your original point of purchase or their official support channels. Refer to the product packaging or seller information for specific contact details.