

[Manuals.plus](#) /

› [PayLessHere](#) /

› PayLessHere Garden Bench Outdoor Metal Park Bench Instruction Manual

PayLessHere GB-545-Black-G

PayLessHere Garden Bench Instruction Manual

Model: GB-545-Black-G

INTRODUCTION

Thank you for choosing the PayLessHere Garden Bench. This manual provides essential information for the safe assembly, operation, and maintenance of your new outdoor bench. Please read these instructions carefully before assembly and retain them for future reference.

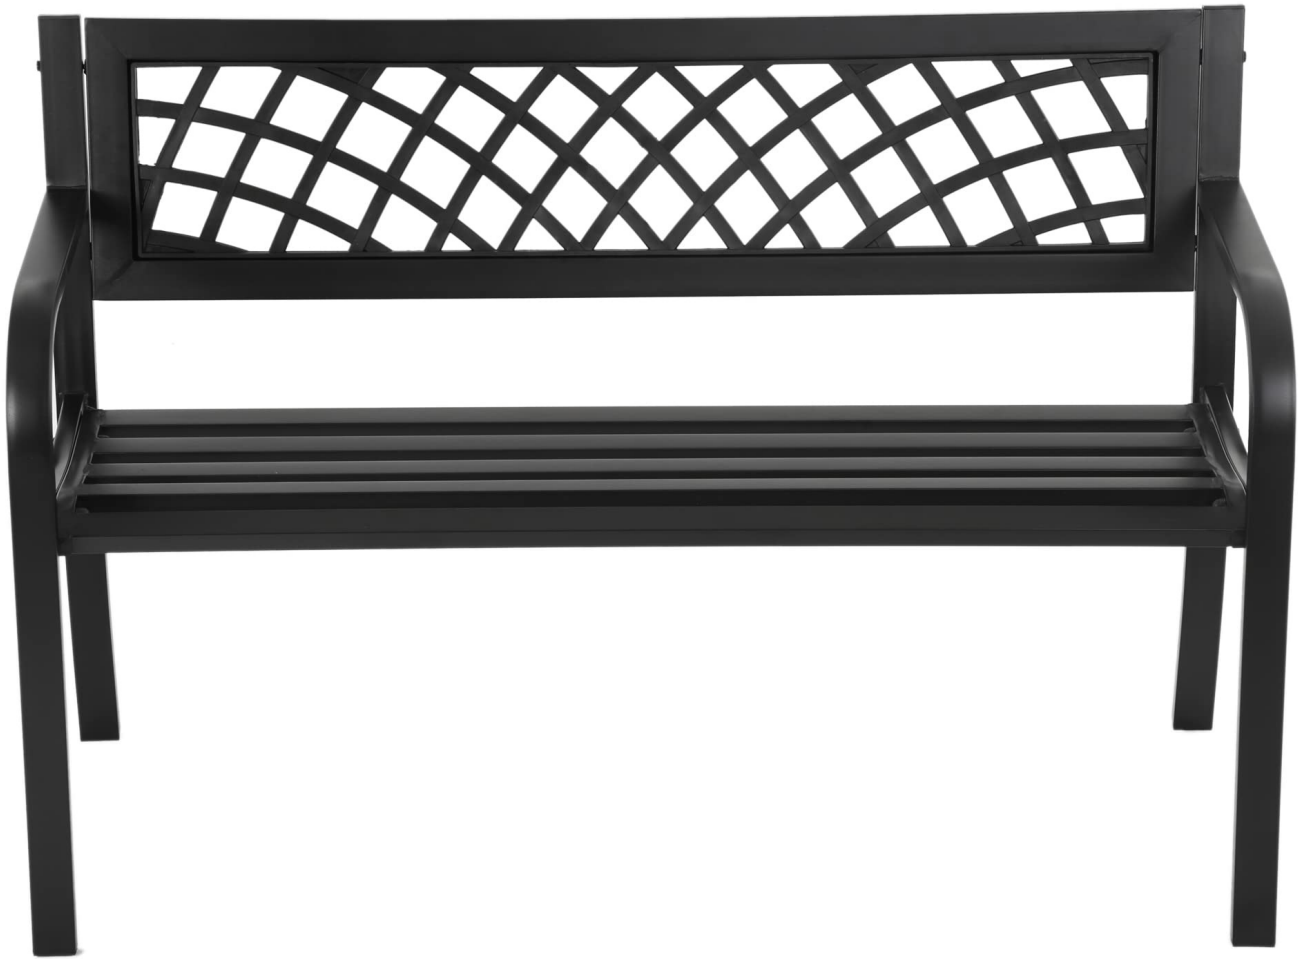 


Image: The PayLessHere Garden Bench, a black metal bench with a mesh pattern backrest, situated in a vibrant green lawn under a clear sky.

SAFETY INFORMATION

- Ensure all parts are present and undamaged before assembly. Do not use if any parts are missing or broken.
- Assemble the bench on a soft, non-abrasive surface to prevent scratches.
- Tighten all bolts and screws securely. Periodically check and re-tighten fasteners to ensure stability.
- Do not exceed the maximum weight capacity of 400 pounds (approximately 2 adults).
- Keep children and pets away from the assembly area.
- This bench is designed for outdoor use.

PACKAGE CONTENTS

Verify that all components listed below are included in your package:

- 1 x Garden Bench (disassembled components)
- 1 x Hardware Package (screws, bolts, wrench)
- 1 x Instruction Manual (this document)

ASSEMBLY INSTRUCTIONS

Follow these steps carefully to assemble your PayLessHere Garden Bench. It is recommended to have two people for easier assembly.

1. Unpack all components and lay them out on a clean, flat surface. Identify each part using the provided diagrams (if any, not included in this text).
2. Attach the backrest to the side frames using the appropriate screws and bolts from the hardware package. Ensure the mesh pattern faces outwards.
3. Connect the seat slats to the side frames. Make sure all connections are aligned before tightening.
4. Secure all connections with the provided wrench. Do not overtighten, but ensure they are firm and stable.
5. Once assembled, gently place the bench upright and test its stability before use.



Image: A close-up view demonstrating the ease of installation, showing a hand using a wrench to tighten a screw on the bench frame.

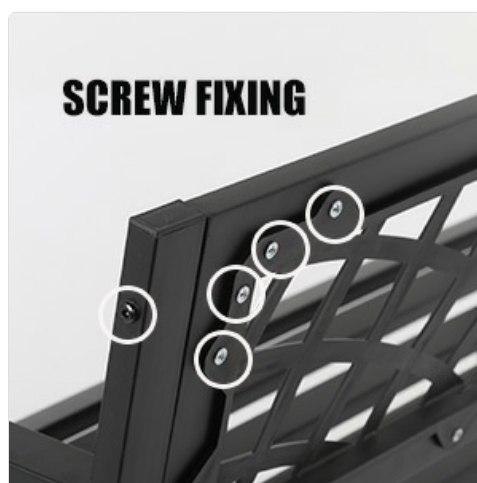 


Image: Detail of the screw fixing points, highlighting how the backrest is securely attached to the bench frame.

Your browser does not support the video tag.

Video: An official assembly guide demonstrating the steps to connect the bench components, including the backrest and seat, using the provided hardware.

OPERATING GUIDELINES

The PayLessHere Garden Bench is designed for comfortable outdoor seating for up to two individuals.

- Place the bench on a level, stable surface to prevent tipping.
- Ensure the area around the bench is clear of obstructions.
- The bench is suitable for various outdoor environments such as gardens, parks, patios, decks, and backyards.



Image: The garden bench positioned in a well-maintained residential garden, showcasing its aesthetic integration into an outdoor living space.

APPLICABLE TO VARIOUS SCENARIOS



Park grassland



Outdoor leisure



Community property



Campus playground

Image: A collage illustrating diverse applications for the bench, including park grasslands, outdoor leisure areas, community properties, and campus playgrounds.

CARE AND MAINTENANCE

Proper care will extend the life and appearance of your garden bench.

- **Cleaning:** Wipe the bench with a dry cloth to remove dust and debris. For more stubborn dirt, use a damp cloth with mild soap and water, then dry thoroughly.
- **Rust Prevention:** The bench features a powder-coated, anti-rust surface. To maintain this protection, avoid harsh chemicals or abrasive cleaners that could damage the finish.
- **Seasonal Care:** While designed for outdoor use, storing the bench indoors or covering it during extreme weather conditions (heavy snow, prolonged rain) can help preserve its condition.
- **Inspection:** Periodically check all bolts and screws for tightness and re-tighten as necessary to ensure structural integrity.

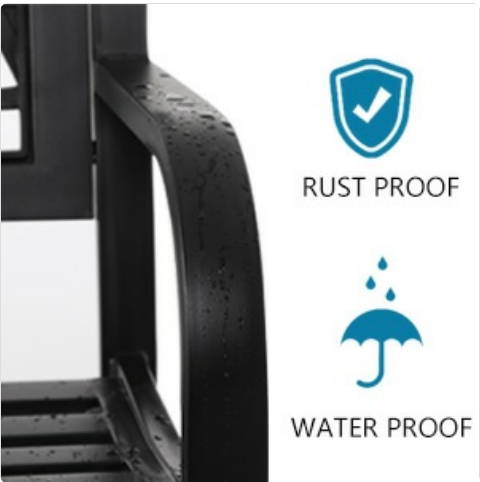 


Image: Visual representation of the bench's rust-proof and waterproof properties, indicating its durability against outdoor elements.

TROUBLESHOOTING

If you encounter any issues with your garden bench, refer to these common solutions:

- **Bench feels wobbly:** Check all assembly bolts and screws. Ensure they are fully tightened. Make sure the bench is placed on a flat, even surface.
- **Scratches on the surface:** Minor scratches can sometimes be touched up with outdoor-grade black paint suitable for metal. For deeper damage, contact customer support.
- **Difficulty assembling:** Review the assembly instructions carefully. Ensure all parts are correctly oriented and that you are using the correct hardware for each step. Refer to the assembly video if available.

SPECIFICATIONS

Detailed product specifications for the PayLessHere Garden Bench:

Feature	Detail
Model Number	GB-545-Black-G
Product Dimensions (D x W x H)	18" x 45" x 29"
Seat Height	16.5"
Seat Size (W x L)	45.5" x 13.4"
Armrest Height	24"
Material	Cast Iron (Frame), Plastic (Backrest)
Color	Black
Weight Capacity	400 pounds
Item Weight	19 pounds
Seating Capacity	2 people

PRODUCT PARAMETERS

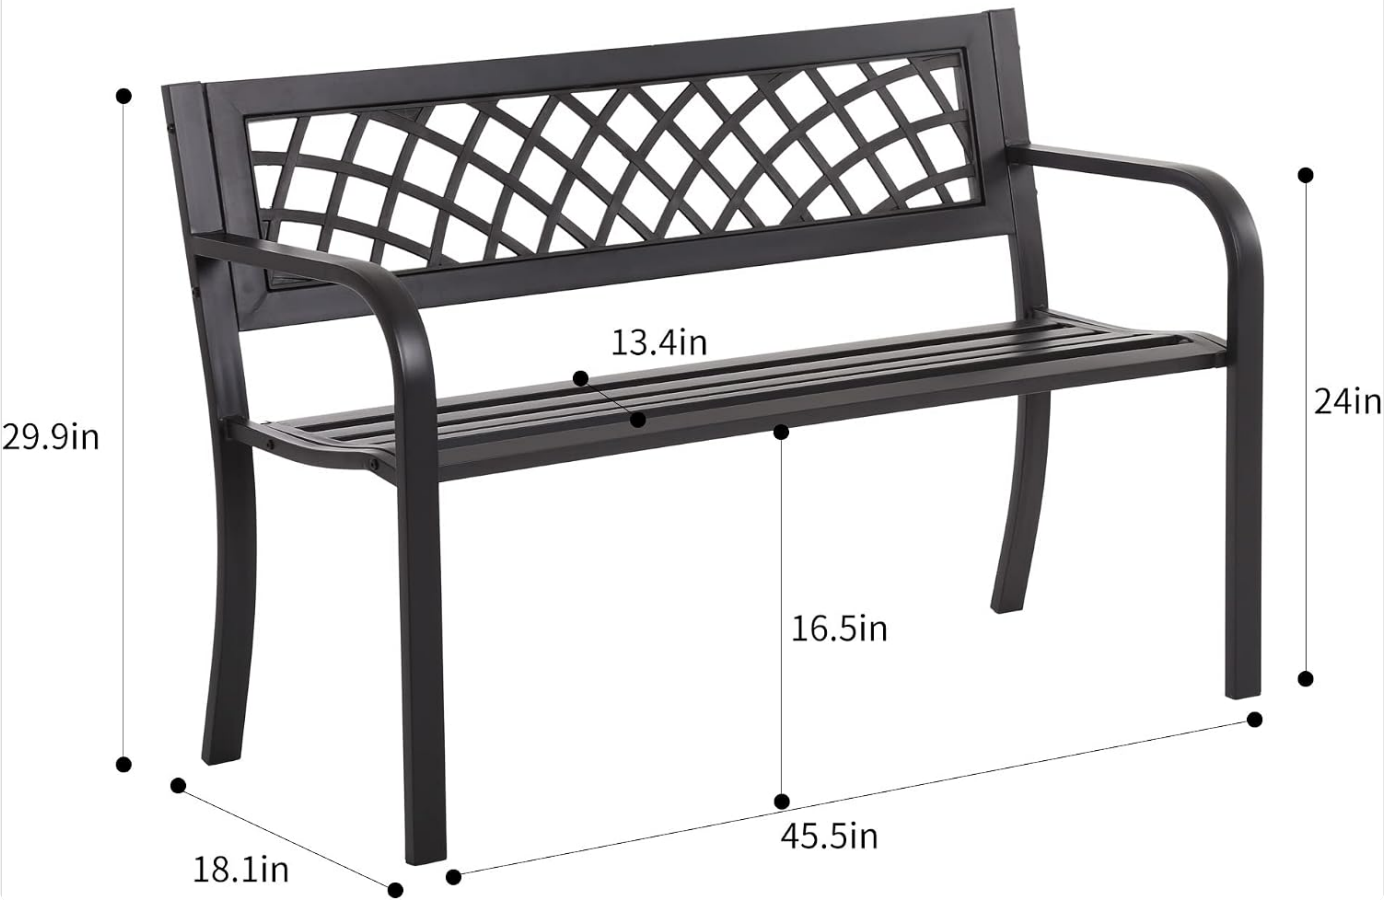 


Image: A detailed diagram illustrating the key dimensions of the garden bench, including height, width, depth, and seat measurements.



**MADE OF
REINFORCED STEEL**

**MADE OF
REINFORCED STEEL**



**POWDER COATED
ANTIRUST SURFACE**

Image: Close-up views highlighting the reinforced steel construction and the smooth, powder-coated anti-rust surface of the bench components.

HIGH QUALITY PLASTIC

THE SEAT BACK IS
MADE OF ELASTIC PLASTIC
WHICH FITS THE BACK



Image: A detailed shot of the high-quality plastic mesh backrest, emphasizing its design and material.



Image: A close-up demonstrating the thickness of the chair foot, indicating robust construction.



Image: A close-up of a bench leg featuring a protective cap, designed to prevent scratches on surfaces.



Image: A detailed view of the solid plastic mesh design integrated into the bench's backrest.

WARRANTY AND SUPPORT

This PayLessHere Garden Bench comes with a manufacturer's warranty of 90 days from the date of purchase.

- The warranty covers defects in materials and workmanship under normal use.
- It does not cover damage caused by misuse, accidents, unauthorized repairs, or normal wear and tear.
- For warranty claims or product support, please contact the seller, Cavalier Store, through your purchase platform.

Please retain your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question