

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Generisch](#) /

› [Generisch Kitchen Hood Switch Symbol Decals \(Rt97/2\) - 5mm Instruction Manual](#)

Generisch Rt97/2

Generisch Kitchen Hood Switch Symbol Decals (Rt97/2) - 5mm Instruction Manual

Model: Rt97/2 | Size: 5mm

[Introduction](#) [Safety Information](#) [Installation](#) [Care & Support](#)
[Maintenance](#) [Troubleshooting](#) [Specifications](#)

1. INTRODUCTION

Thank you for choosing Generisch Kitchen Hood Switch Symbol Decals. These transparent adhesive symbols are designed to replace worn or faded markings on your kitchen hood control panel, restoring clarity and functionality. They are machine-printed with eco-solvent ink on a durable film, ensuring excellent adhesion and residue-free removal when applied correctly.

2. SAFETY INFORMATION

- Keep out of reach of small children to prevent accidental ingestion.
- Do not apply to heated surfaces or near open flames.
- Ensure the application surface is clean and dry to prevent poor adhesion.

3. INSTALLATION GUIDE

Follow these steps for optimal application of your new symbol decals:

1. **Prepare the Surface:** Clean the area where the decal will be applied thoroughly. Use a mild cleaner and ensure the surface is completely dry and free of grease, dust, or old adhesive residues.
2. **Identify Symbols:** Carefully identify the corresponding symbols on your kitchen hood control panel and match them with the decals on the sheet.
3. **Peel the Decal:** Gently peel the desired symbol decal from its backing sheet. Avoid touching the adhesive side with your fingers.
4. **Apply the Decal:** Position the decal precisely over the intended area on the control panel. Once aligned, press it down firmly from the center outwards to remove any air bubbles.

5. **Smooth Out:** Use a soft cloth or a plastic card (like a credit card) to smooth out the decal, ensuring full contact with the surface and eliminating any remaining air bubbles.



Figure 1: Sheet of Generisch Kitchen Hood Switch Symbol Decals (Rt97/2). This image displays the transparent sheet containing various symbols designed for kitchen hood switches. The symbols are clearly visible and ready for application.

4. CARE & MAINTENANCE

To ensure the longevity and appearance of your decals:

- Clean the decals gently with a soft, damp cloth.
- Avoid using abrasive cleaners, harsh chemicals, or scrubbing pads, as these can damage the decal's print or adhesive.
- Do not expose to extreme heat or direct, prolonged sunlight, which may cause fading or peeling over time.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Decal not sticking properly.	Surface was not clean or dry; oil/grease residue.	Ensure surface is thoroughly cleaned with alcohol or a degreaser and completely dry before application.
Air bubbles under the decal.	Improper application technique.	Apply from the center outwards, using a soft cloth or card to smooth. For small bubbles, gently prick with a fine needle and smooth.

Problem	Possible Cause	Solution
Decal peeling at edges.	Edges not pressed firmly enough; exposure to moisture.	Re-press edges firmly. Ensure the area is dry after cleaning.

6. SPECIFICATIONS

Model: Rt97/2

Brand: Generisch

Symbol Size: 5 mm (available in other sizes: 7mm, 9mm, 11mm, 13mm, 15mm, 17mm, 19mm)

Material: Transparent adhesive film

Printing: Eco-solvent ink

Adhesion: Excellent, removable without residue

Color: Transparent (symbols printed in black/white as per design)

Recommended Use: Kitchen hood control panels

7. CUSTOMER SUPPORT

For further assistance or inquiries regarding your Generisch Kitchen Hood Switch Symbol Decals, please contact your retailer or visit the manufacturer's website. Please have your model number (Rt97/2) ready when contacting support.

Note: Warranty information is not provided with this product. Please refer to your purchase documentation for any applicable return or exchange policies.

