

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Outsunny](#) /

› [Outsunny Foldable Sun Lounger \(Model 84B-206WR\) Instruction Manual](#)

Outsunny 84B-206WR

Outsunny Foldable Sun Lounger

MODEL: 84B-206WR

Instruction Manual

1. Introduction

Thank you for choosing the Outsunny Foldable Sun Lounger. This product is designed for comfort and convenience, suitable for various outdoor and indoor settings. Please read this manual carefully before use to ensure proper setup, operation, and maintenance. Keep these instructions for future reference.



Figure 1: Outsunny Foldable Sun Lounger (Red)

2. Safety Instructions

- **Maximum Load Capacity:** Do not exceed the recommended maximum load of 120 kg (264 lbs).
- **Stable Surface:** Always place the lounger on a flat, stable, and hard surface to prevent tipping.
- **Children and Pets:** Keep children and pets away from the lounger during unfolding and folding to prevent injury.
- **Inspection:** Before each use, inspect the lounger for any signs of damage, loose parts, or wear. Do not use if damaged.
- **Pinch Points:** Be aware of pinch points when adjusting the backrest or folding the lounger.
- **Weather Conditions:** While the textilene fabric is UV and moisture resistant, it is recommended to store the lounger indoors or cover it during harsh weather conditions to prolong its lifespan.

3. Package Contents

The Outsunny Foldable Sun Lounger is designed for minimal assembly. Please verify that all components are present and undamaged upon opening the package.

- 1 x Foldable Sun Lounger (Model 84B-206WR)
- 1 x Detachable Headrest

4. Setup and Unfolding

The sun lounger comes pre-assembled and only requires unfolding for use.

1. Place the folded lounger on a flat, open surface.
2. Gently pull the frame apart until the lounger fully extends. Ensure all legs are securely locked into position.
3. Attach the detachable headrest to the top of the backrest for added comfort.

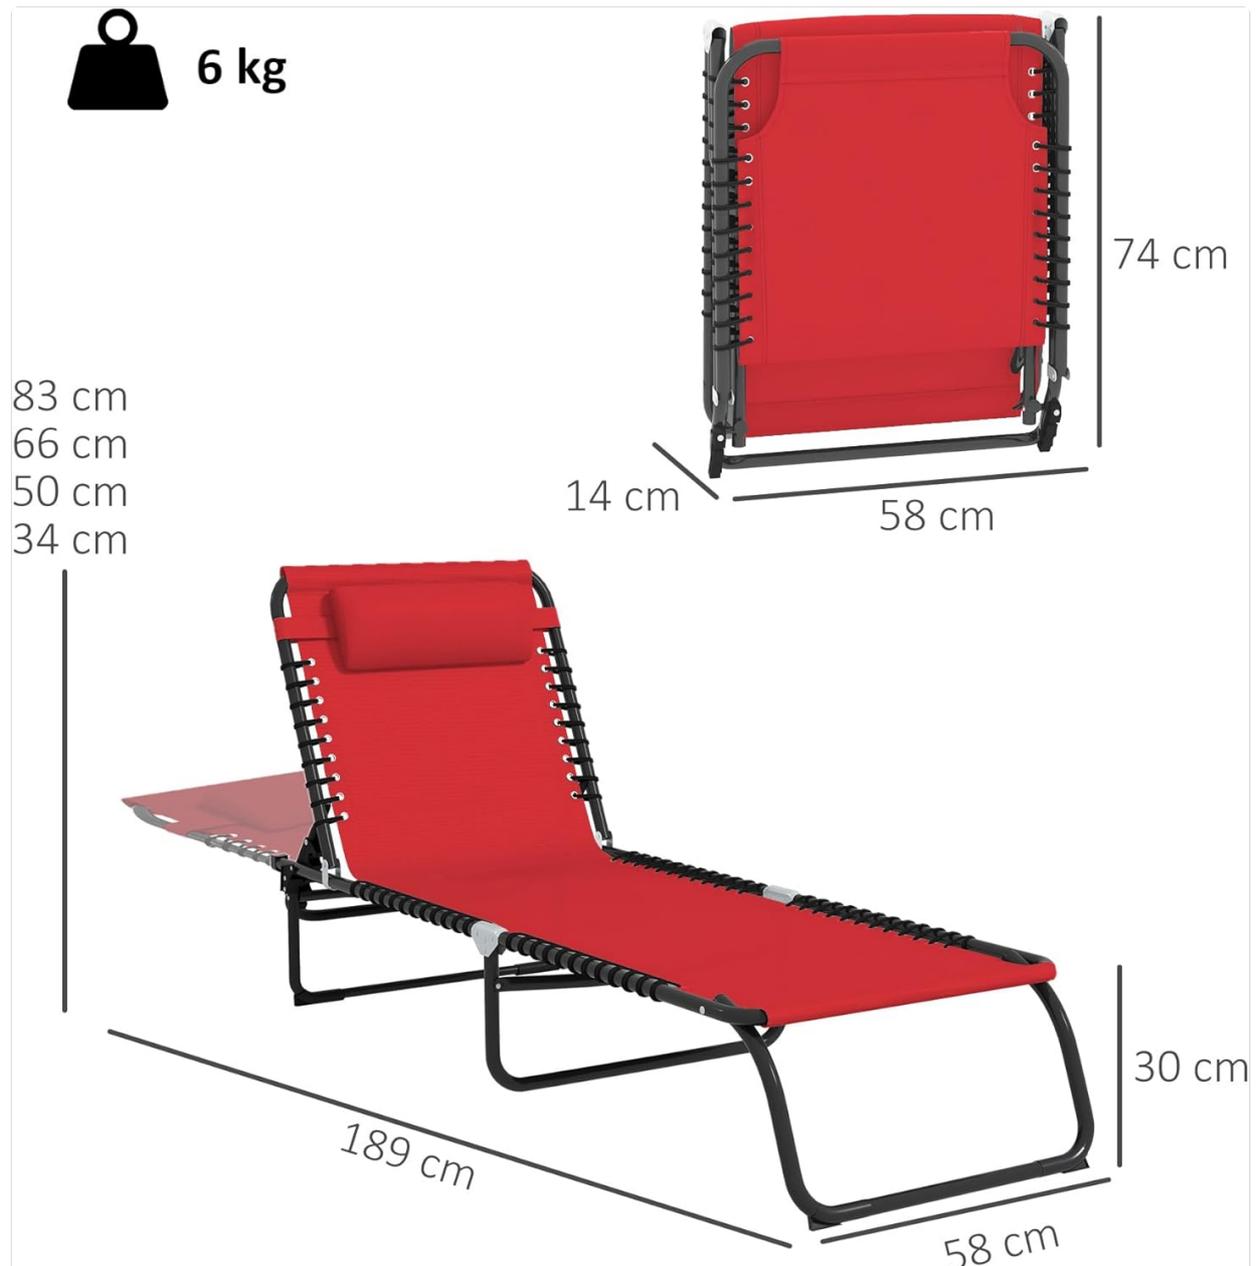


Figure 2: Lounger Dimensions and Folded View

5. Operating Instructions

5.1 Adjusting the Backrest

The lounger features a multi-position adjustable backrest for personalized comfort.

1. To adjust, slightly lift the backrest to disengage the locking mechanism.
2. Move the backrest to one of the four available positions (e.g., for reading, napping, or sunbathing).
3. Ensure the backrest is securely locked into your desired position before use.

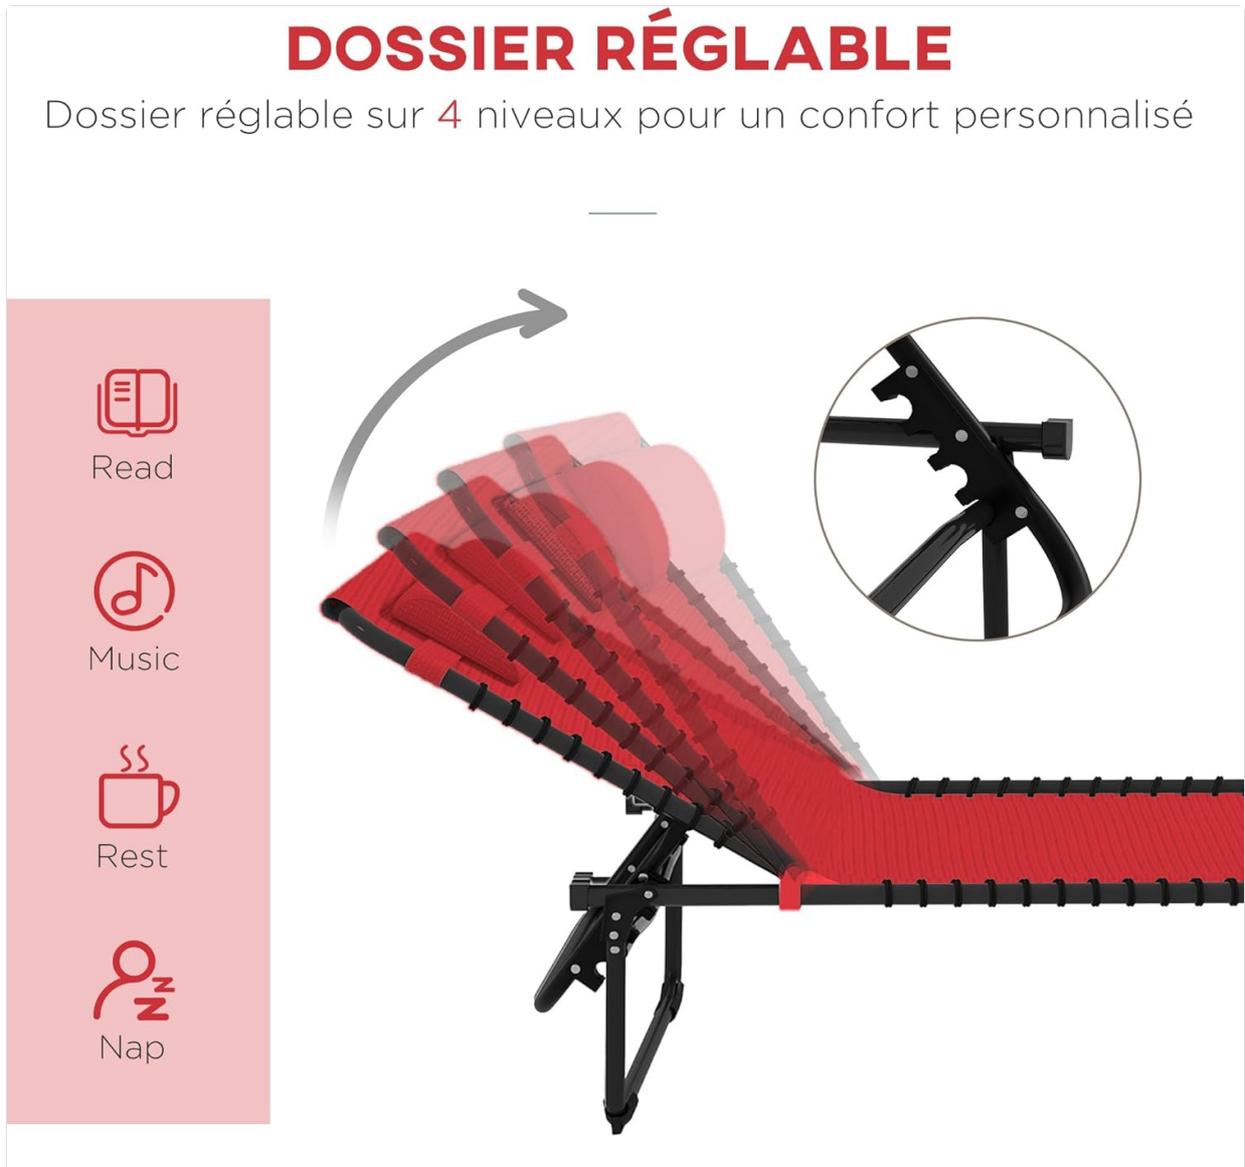


Figure 3: Adjustable Backrest Positions

5.2 Folding for Storage and Transport

The lounge can be easily folded for compact storage and convenient transport.

1. Ensure the backrest is in its lowest, flat position.
2. Gently push the frame inwards from both ends until the lounge folds completely.
3. Secure any locking mechanisms if present to keep it folded.

PLIABLE ET LÉGER

Facile à transporter



Figure 4: Folded Lounger for Transport

6. Maintenance


Regular maintenance will help extend the life of your sun lounger.

- **Cleaning:** Clean the textilene fabric with a mild soap solution and a soft cloth. Rinse thoroughly with water and allow to air dry completely. Do not use harsh chemicals or abrasive cleaners.
- **Frame Care:** The steel frame has a powder coating for corrosion resistance. Wipe clean with a damp cloth. Avoid scratching the coating.
- **Storage:** When not in use for extended periods, especially during off-season or inclement weather, store the lounger in a dry, protected area.
- **Elastic Laces:** Periodically check the elastic lacing for tension and wear. Replace if necessary to maintain proper support.



**Cadre en acier robuste
avec revêtement
en poudre**

**Matériau en tissu
maillé à séchage rapide**

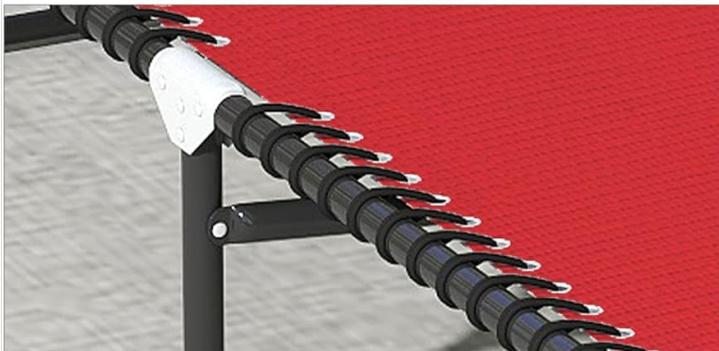

**L'élastique à double
brin garantit un
soutien solide**

Figure 5: Material Details

7. Troubleshooting

If you encounter any issues with your sun lounger, please refer to the following common solutions:

- **Lounger feels unstable:** Ensure the lounger is placed on a flat, even surface. Check that all legs are fully extended and locked.
- **Backrest not locking:** Make sure the backrest mechanism is free of obstructions. Lift and re-engage the backrest into the desired position firmly.
- **Difficulty folding/unfolding:** Check for any obstructions in the folding mechanism. Apply gentle, even pressure. Do not force the frame.

If problems persist, please contact customer support.

8. Specifications

Feature	Detail
Model Number	84B-206WR
Brand	Outsunny
Color	Red
Overall Dimensions (L x W x H)	189 x 58 x 30 cm (74.4 x 22.8 x 11.8 inches)
Folded Dimensions (L x W x H)	74 x 14 x 60 cm (29.1 x 5.5 x 23.6 inches)
Seat Height	30 cm (11.8 inches)
Adjustable Backrest Heights	34 / 50 / 66 / 83 cm (13.4 / 19.7 / 26 / 32.7 inches)
Item Weight	6.5 kg (14.3 lbs)
Maximum Load Capacity	120 kg (264 lbs)
Frame Material	Alloy Steel with Powder Coating
Seat Material	Textilene Fabric
Special Features	Foldable, Adjustable Backrest (4 positions), Detachable Headrest, UV Resistant, Moisture Resistant, Lightweight
Assembly Required	No

9. Warranty and Support

Outsunny products are manufactured to high-quality standards. For warranty information, technical support, or replacement parts, please contact your retailer or visit the official Outsunny website. Please have your model number (84B-206WR) and purchase date available when contacting support.