

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Polly Pocket](#) /

› [Polly Pocket Pollyville Pet Adventure Treehouse Playset Instruction Manual \(Model HHJ06\)](#)

Polly Pocket HHJ06

Polly Pocket Pollyville Pet Adventure Treehouse Playset Instruction Manual

MODEL: HHJ06

Brand: Polly Pocket

Introduction

The Polly Pocket Pollyville Pet Adventure Treehouse playset offers an engaging and interactive experience with numerous activities for pets and micro dolls. This playset features five distinct floors for imaginative play and includes a unique expansion mechanism to create a larger play area. It comes with micro dolls, animal figures, and various accessories to enhance the adventure.

What's in the Box

- Pollyville Pet Adventure Treehouse Playset
- 2 Micro Dolls (Polly and Shani)
- 4 Adorable Animal Figures
- 9 Pet Party Accessories
- 1 Swan Vehicle

Setup Instructions

1. **Unpack the Playset:** Carefully remove all components from the packaging. Ensure all micro dolls, animal figures, accessories, and the swan vehicle are accounted for.
2. **Expand the Playset:** The treehouse playset has an expandable feature. Locate the speed bump on the base of the playset. Drive the swan vehicle over this speed bump to expand the playset, which will also trigger the zipline to extend.
3. **Activate Waterfall Slide:** Drive the swan vehicle over a second speed bump to expand the waterfall slide, adding another dynamic play area.
4. **Place Accessories:** The playset includes over 15 accessories. Utilize the small holes and pegs located throughout the treehouse to securely place these accessories in various play spaces.



Drive over speed bump to expand treehouse!

Image: The Polly Pocket Pet Adventure Treehouse Playset in its expanded state, showing the swan vehicle triggering the expansion mechanism.

Operating Instructions

The Pollyville Pet Adventure Treehouse offers multiple interactive features across its five floors. Follow these instructions to maximize play:

- **Zipline Adventure:** Once the playset is expanded, place a micro doll into the zipline carrier. Attach the carrier to the zipline and let the doll slide down for an exciting ride.
- **Waterfall Slide Fun:** Position the swan vehicle with micro dolls at the top of the expanded waterfall slide. Release the vehicle to send it gliding down the slide.
- **Hidden Doghouse Slide:** Discover the hidden escape slide located within the doghouse. Place a micro doll inside to send them down to a lower level.
- **Bunny Hot Air Balloon:** Place micro dolls into the basket of the bunny hot air balloon. Manually lift and lower the balloon to simulate a ride above the treehouse.
- **Pet Play Areas:** Engage the animal figures in various pet-themed areas, including a hamster wheel for exercise, a cat area, and a doghouse.
- **Rooftop Picnic:** Utilize the rooftop area for a picnic with the micro dolls and accessories.
- **Secret Storage:** The treetop roof features a hidden storage compartment. Lift the roof panel to store small accessories and micro dolls for easy cleanup and safekeeping.



Ride the zipline!

Image: A micro doll is shown actively riding the zipline, demonstrating one of the playset's interactive features.

Lift for balloon ride!



Image: A micro doll is positioned within the bunny-themed hot air balloon, ready for a simulated ride.

Video: An official demonstration of the Polly Pocket Pet Adventure Treehouse, showcasing its various interactive features and play possibilities.

Video: A detailed overview of the Polly Pocket Pollyville Pet Adventure Treehouse, highlighting its design and play elements.

Maintenance

- **Cleaning:** Wipe the playset and accessories with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, as these may damage the plastic.
- **Storage:** For convenient storage and to prevent loss of small pieces, utilize the secret storage compartment in the treetop roof. The playset can also be collapsed to its non-expanded state for a more compact form.
- **Inspection:** Periodically inspect the playset for any signs of wear or damage. Discontinue use if any parts are broken or compromised.

Troubleshooting

- **Playset Not Expanding/Collapsing:** Ensure no accessories or micro dolls are obstructing the

expansion mechanism. Gently press the speed bumps or push the sides of the playset to engage the movement.

- **Accessories Not Staying in Place:** Verify that accessories are correctly inserted into the designated holes or attached to the pegs. Some accessories may be designed for specific locations.
- **Zipline/Slide Obstruction:** Check the zipline and slide paths for any foreign objects or misaligned parts that might be preventing smooth operation.

Specifications

Product Dimensions	5 x 15.75 x 12.75 inches
Item Weight	3.3 pounds
Item Model Number	HHJ06
Manufacturer Recommended Age	4 years and up
Manufacturer	Mattel

Warranty and Support

For warranty information, product support, or to inquire about replacement parts, please contact the manufacturer, Mattel, directly through their official customer service channels. Retain your proof of purchase for any warranty claims.