

Kazeila WT-05

Kazeila Water Timer WT-05 Instruction Manual

Programmable Sprinkler Timer for Garden Irrigation

1. INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your Kazeila Water Timer Model WT-05. Please read this manual thoroughly before using the device to ensure proper function and longevity.

2. PACKAGE CONTENTS

Upon opening the package, verify that all components are present:

- 1 x Kazeila Water Timer (Model WT-05)
- 1 x 3 mm O-Ring
- 1 x User Manual

Your browser does not support the video tag.

Video: Unboxing and Package Contents of the Kazeila Water Timer.

3. SETUP

3.1 Battery Installation

The Kazeila Water Timer requires 2 AA alkaline batteries (not included). To install:

1. Locate the battery compartment on the back of the timer.
2. Open the battery compartment cover.
3. Insert two new AA alkaline batteries, ensuring correct polarity (+/-).
4. Securely close the battery compartment cover.

3.2 Connecting to Faucet

Follow these steps to connect the water timer to your outdoor faucet:

1. Ensure the 3mm O-ring is properly seated inside the timer's connector. This prevents leaks.
2. Screw the timer onto your standard outdoor faucet. Hand-tighten only. Do not use tools, as this may damage the unit.
3. Ensure the timer is installed vertically. Horizontal or inverted installation is prohibited to prevent water ingress and damage.



Image: Kazeila Water Timer securely connected to an outdoor faucet.

 
PROGRAMMABLE & EASY TO OPERATE

HOW LONG



1 second 99 minutes

HOW OFTEN



1 hour 15 days

A LARGER RANGE OF RUN TIMES AND INTERVALS

Image: Close-up view of the Kazeila Water Timer's digital display.

4. OPERATING THE WATER TIMER

The Kazeila Water Timer offers automatic and manual watering modes, along with a rain delay function and child lock.

4.1 Setting Automatic Irrigation Program

To set up an automatic watering schedule:

1. **Set Current Time:** Press the 'Gear/OK' button to enter programming. Use the '-' and '+' buttons to adjust the current time. Press 'Gear/OK' to save and proceed.
2. **Set Start Time:** The 'Start Time' will flash. Use '-' and '+' to set your desired watering start time. Press 'Gear/OK' to confirm.
3. **Set Watering Duration:** The 'How Long' (duration) setting will flash. Use '-' and '+' to set the watering duration from 1 second to 99 minutes. Press 'Gear/OK' to confirm.
4. **Set Watering Frequency:** The 'How Often' (frequency) setting will flash. Use '-' and '+' to set the watering frequency from 1 hour to 15 days. Press 'Gear/OK' to confirm and exit programming.

LARGE SIZE LCD DISPLAY EASY TO READ & USE



Image: The timer's display showing options for setting watering duration and frequency.

4.2 Manual Watering

To initiate manual watering:

1. Press the 'Water Faucet' button. The 'How Long' setting will flash.
2. Use the '-' and '+' buttons to set the desired manual watering duration.
3. Press the 'Gear/OK' button to start manual watering. The timer will count down the set duration.

4.3 Rain Delay Function

To temporarily pause your watering schedule due to rain:

1. Hold the '+/DELAY' button for 3 seconds. The 'DELAY' icon will appear on the display.
2. Use the '-' and '+' buttons to set the desired delay period (e.g., 24, 48, 72 hours).
3. Press 'Gear/OK' to confirm. The timer will resume its schedule after the delay period.
4. To cancel rain delay, hold the '+/DELAY' button for 3 seconds again.

4.4 Child Lock Function

To prevent accidental changes to your settings:

1. Hold the '-' and '+' buttons together for 3 seconds. A 'Lock' icon will appear on the display, indicating the child lock is active.

2. To deactivate, hold the '-' and '+' buttons together for 3 seconds again. The 'Lock' icon will disappear.

4.5 Off Mode

To turn off all watering functions:

1. Hold the 'ESC/OFF' button for 3 seconds. 'OFF' will appear on the display.
2. To resume normal operation, hold the 'ESC/OFF' button for 3 seconds again.

Your browser does not support the video tag.

Video: Detailed guide on installing and setting up the Kazeila Water Timer, including programming, manual watering, rain delay, child lock, and off mode.

5. KEY FEATURES

- **Programmable:** Set precise watering schedules with adjustable duration (1 second to 99 minutes) and frequency (1 hour to 15 days).
- **Manual Watering:** Instant watering for immediate needs without interrupting programmed schedules.
- **Rain Delay:** Pause watering for 24, 48, or 72 hours to conserve water during rainfall.
- **Child Lock:** Prevents accidental changes to settings.
- **IPX5 Waterproof:** Designed for outdoor use, resistant to water splashes and light rain.
- **UV-Proof & Corrosion Resistant:** Durable construction for long-term outdoor exposure.
- **Large LCD Display:** Easy-to-read screen for clear visibility of settings and current status.

MORE USER-FRIENDLY FEATURES

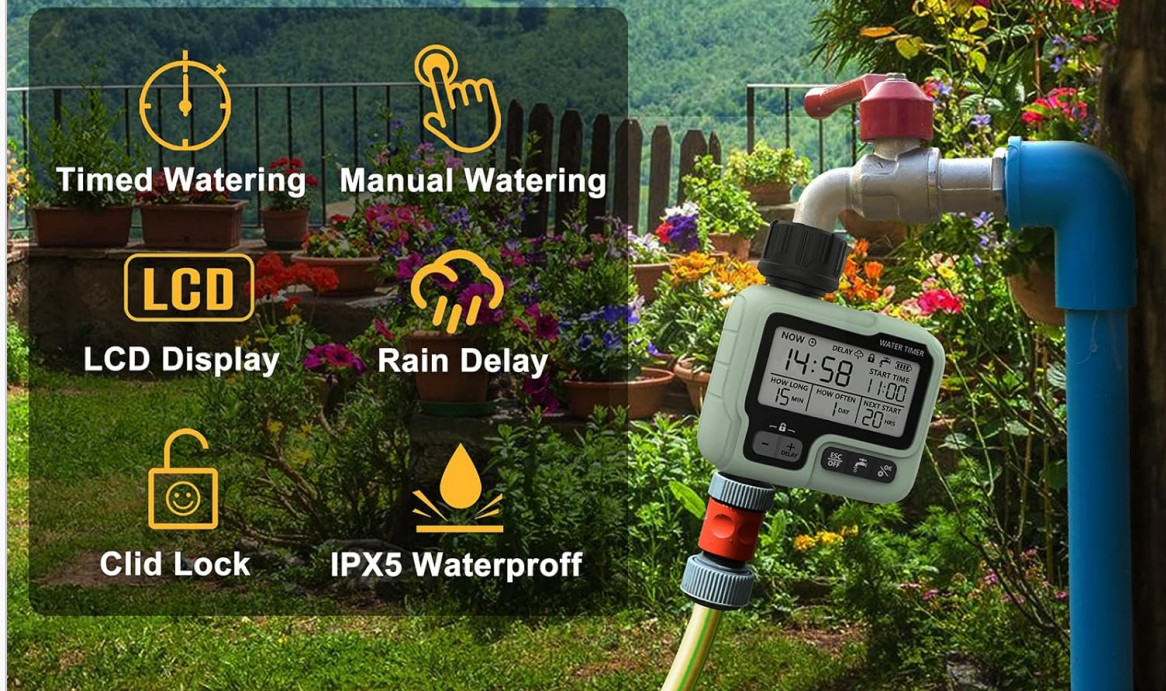


Image: Overview of the Kazela Water Timer's user-friendly features.

STABLE AND DURABLE IDEAL FOR OUTDOOR USE



Image: The timer's stable and durable design, emphasizing its corrosion, UV, and waterproof properties.

6. MAINTENANCE

6.1 Cleaning

Regularly clean the timer's exterior with a soft, damp cloth. Do not use abrasive cleaners or solvents.

6.2 Battery Replacement

Replace batteries when the low battery indicator appears on the display to ensure continuous operation. Always use new AA alkaline batteries.

6.3 Winterization

Before the first frost, disconnect the water timer from the faucet. Remove the batteries and store the timer indoors in a dry, frost-free location. This prevents damage from freezing water.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Timer not watering / No water flow	Low battery; Faucet turned off; Incorrect program settings; Water pressure too low.	Replace batteries; Turn on faucet; Verify program settings; Ensure adequate water pressure (e.g., use a pressure regulator for drip systems).
Water leaking from connection	O-ring missing or damaged; Connection not tight enough; Cross-threaded connection.	Check and replace O-ring if necessary; Hand-tighten connection securely; Re-thread carefully to avoid cross-threading.
Display is blank or dim	Dead or low batteries.	Replace batteries with new AA alkaline batteries.
Timer stops keeping schedule	Low battery; Internal malfunction.	Replace batteries. If problem persists, contact customer support.

8. SPECIFICATIONS

- **Model:** WT-05
- **Brand:** Kazeila
- **Material:** Nylon
- **Color:** Black, Gray, Green
- **Product Dimensions:** 2.9"D x 4.9"W x 3.8"H
- **Item Weight:** 9.5 Ounces
- **Water Pressure Range:** Typically 0.05 MPa to 0.8 MPa (7.25 psi to 116 psi)
- **Power Source:** 2 x AA Alkaline Batteries (not included)
- **Waterproof Rating:** IPX5

9. WARRANTY AND SUPPORT

Kazeila is committed to providing high-quality products. While specific warranty details are not provided in this manual, please retain your proof of purchase. For any product inquiries, technical support, or warranty claims, please contact Kazeila customer service through the retailer where the product was purchased or visit the official Kazeila website for contact information.