Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- > PERLESMITH /
- > PERLESMITH Universal TV Stand PSTVS04 & PSTVS02: User Instruction Manual

PERLESMITH PSTVS04, PSTVS02

PERLESMITH Universal TV Stand PSTVS04 & PSTVS02 User Instruction Manual

Models: PSTVS04, PSTVS02

1. SAFETY INFORMATION

Please read this entire instruction manual before installation. If you have any questions, please contact customer service.

- Weight Capacity: Do not exceed the maximum weight capacity specified for your TV stand model.
 PSTVS04 supports up to 88 lbs (40 kg) for TVs 32"-60". PSTVS02 supports up to 88 lbs (40 kg) for TVs 37"-75".
- **VESA Compatibility:** Ensure your TV's VESA mounting pattern is compatible with the stand. Refer to the specifications section for details.
- **Proper Installation:** Incorrect installation may result in property damage or personal injury. Follow all assembly steps carefully.
- Children and Pets: Keep children and pets away during installation. Small parts may be a choking hazard.
- Check Connections: Periodically check that all screws and connections are secure.
- Avoid Over-tightening: Do not over-tighten screws, as this may cause damage.

2. PACKAGE CONTENTS

Verify that all components are present and undamaged before beginning assembly. If any parts are missing or defective, contact PERLESMITH customer service.



This image displays both the PSTVS04 (left) and PSTVS02 (right) universal TV stands, providing a visual overview of the product. The PSTVS04 features a more compact base, while the PSTVS02 has a wider, rectangular tempered glass base for enhanced stability.

The package typically includes:

- TV Stand Base (Tempered Glass)
- Support Column
- TV Mounting Plate
- TV Brackets (Left and Right)
- Hardware Kit (various screws, washers, spacers, and Allen keys)
- Instruction Manual

3. SETUP INSTRUCTIONS

3.1. Verify TV Compatibility

Before assembly, confirm your TV meets the stand's specifications:

- PSTVS04: Fits most 32"-60" LCD/LED/OLED Flat/Curved screens up to 88 lbs. VESA compatibility: 100x100mm, 200x100mm, 200x200mm, 300x200mm, 300x300mm, 400x300mm, 400x400mm. Note: This model only works if the mounting hole is 16" or less and does not fit VESA 600x200mm or 600x400mm.
- PSTVS02: Fits most 37"-75" TVs up to 88 lbs. VESA compatibility: 200x100mm to 600x400mm.




This image illustrates the compatibility specifications for the PSTVS04 model, including supported TV sizes (32"-60"), maximum weight capacity (88 lbs), and various VESA mounting patterns up to 400x400mm.



This image outlines the compatibility specifications for the PSTVS02 model, indicating supported TV sizes (37"-75"), maximum weight capacity (88 lbs), and a broader range of VESA mounting patterns up to 600x400mm.

3.2. Assemble the Base and Support Column

- 1. Carefully place the tempered glass base on a soft, clean surface to prevent scratches.
- 2. Attach the support column to the base using the provided screws and Allen key. Ensure the column is securely fastened and aligned.
- 3. For PSTVS02, note the larger base design for enhanced stability.

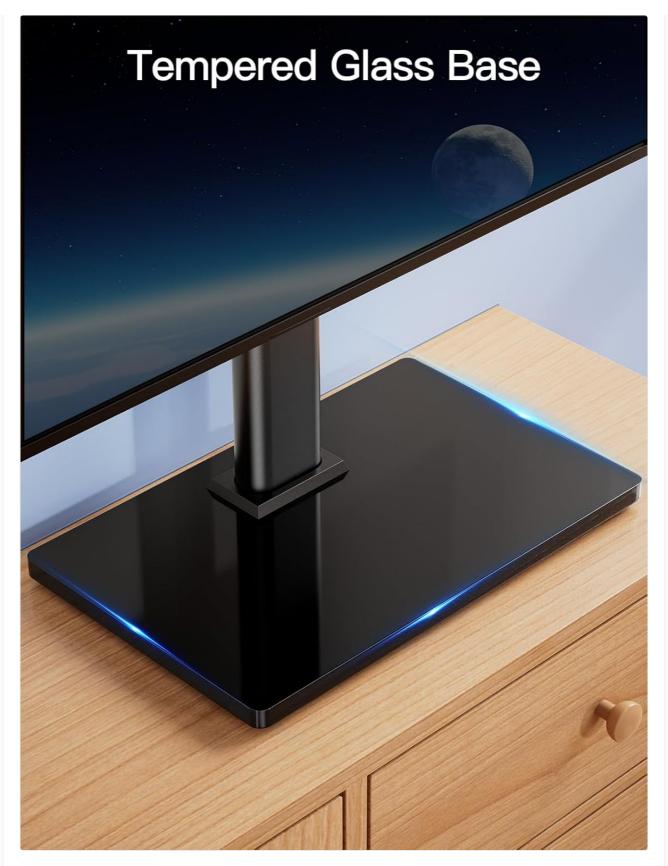

This image highlights the tempered glass base of the PSTVS04 stand, emphasizing its sleek design and sturdy foundation for supporting a television.



This image demonstrates the PSTVS02's larger tempered glass base, comparing its dimensions to a standard base to show its increased width and enhanced stability for larger televisions.

3.3. Attach TV Brackets to Your TV

- 1. Identify the correct screws (M4, M6, M8) and spacers for your TV's mounting holes. Refer to your TV's manual if unsure
- 2. Attach the left and right TV brackets to the back of your TV using the chosen screws and washers. Ensure the brackets are level and securely tightened.

3.4. Mount TV to Stand

- 1. With assistance, carefully lift your TV and hook the attached TV brackets onto the mounting plate of the stand.
- 2. Ensure the TV is centered and level.
- 3. Secure the TV to the mounting plate using the safety screws or locking mechanisms provided. This prevents accidental dislodgement.

3.5. Adjust Height

Both PSTVS04 and PSTVS02 offer multiple height adjustment options to achieve your desired viewing level.

- **PSTVS04:** Features 2 options for TV hook placement on the brackets and 3 sets of height adjustment on the main column, offering a total of 6 height configurations.
- PSTVS02: Offers 9 height settings through adjustments on both the TV brackets and the main column.



This image demonstrates the 6 available height configurations for the PSTVS04 model, achieved by adjusting the TV hooks and the mounting plate on the stand's column.



This image details the 9 height settings available for the PSTVS02 model, showcasing how adjustments can be made on both the TV brackets and the stand's central column to customize viewing height.

4. OPERATING INSTRUCTIONS

Once assembled, your PERLESMITH TV stand provides a stable platform for your television.

- Placement: Position the stand on a flat, stable surface to prevent tipping.
- **Swivel Function (PSTVS02):** The PSTVS02 model may offer a swivel function for optimal viewing angles. Gently rotate the TV to the desired position. Avoid forcing the swivel beyond its intended range.
- Cable Management: Utilize any integrated cable management features (if present) to keep cables tidy and prevent tripping hazards.

5. MAINTENANCE

Regular maintenance ensures the longevity and safety of your TV stand.

• **Cleaning:** Wipe the stand with a soft, dry cloth. For the tempered glass base, use a glass cleaner sparingly and wipe with a lint-free cloth. Avoid harsh chemicals or abrasive cleaners.

- **Hardware Check:** Periodically (e.g., every 6 months) check all screws and bolts to ensure they remain tight. Re-tighten if necessary, but do not over-tighten.
- Stability Check: Ensure the stand remains stable and level on its surface.

6. TROUBLESHOOTING

If you encounter issues during or after installation, refer to the following common solutions:

- TV Not Level: Ensure the TV brackets are installed evenly on the back of the TV. Check that the stand's base is on a flat surface.
- **Stand Wobbles:** Verify all screws are securely tightened. Ensure the stand is placed on a firm, level surface. Check for any unevenness in the floor or furniture.
- **Missing Parts:** Review the package contents list. If parts are missing, contact PERLESMITH customer support for replacements.
- **Difficulty Attaching TV:** Double-check your TV's VESA pattern against the stand's compatibility. Ensure you are using the correct screws and spacers for your TV model.

7. Specifications

Feature	PSTVS04	PSTVS02
Compatible TV Size	32" - 60"	37" - 75"
Maximum Load Capacity	88 lbs (40 kg)	88 lbs (40 kg)
VESA Compatibility	100x100mm to 400x400mm (max 16" horizontal)	200x100mm to 600x400mm
Height Adjustment	6 levels	9 levels
Base Material	Tempered Glass	Tempered Glass
Stand Material	Alloy Steel	Alloy Steel
Color	Black	Black
Movement Type	Fixed	Fixed, Swivel

8. WARRANTY AND SUPPORT

PERLESMITH products are designed for durability and performance. For warranty information or technical assistance, please contact PERLESMITH customer service.

You can typically find support contact details on the PERLESMITH official website or through your purchase platform.



PERLESMITH PSTVS17 Universal Swivel Tabletop TV Stand - Instruction Manual

Comprehensive instruction manual for the PERLESMITH PSTVS17 universal swivel tabletop TV stand. Learn how to safely assemble and install your TV stand with detailed steps, parts lists, and compatibility checks.



PERLESMITH PSTVS33 Tabletop TV Stand Instruction Manual

This instruction manual provides detailed steps for assembling and installing the PERLESMITH PSTVS33 Tabletop TV Stand. It covers compatibility checks for VESA patterns and weight limits, lists all included parts and hardware, and guides users through each installation step, including attaching brackets, assembling the base, mounting the TV plate, securing the TV, and managing cables. Safety warnings and contact information are also provided.



PERLESMITH PSTVS02 Table Top TV Stand Instruction Manual

Comprehensive instruction manual for the PERLESMITH PSTVS02 Table Top TV Stand, detailing assembly, safety instructions, and compatibility checks for various TV sizes and VESA patterns.



 
PERLESMITH PSTVS13 Table Top TV Stand Instruction Manual

This instruction manual provides detailed assembly steps, safety guidelines, and compatibility checks for the PERLESMITH PSTVS13 table top TV stand, designed for TVs up to 88 lbs. It covers VESA compatibility, parts identification, and step-by-step assembly for various TV back types.



PERLESMITH PSTVS04 Table Top TV Stand Instruction Manual

This manual provides step-by-step instructions for assembling and installing the PERLESMITH PSTVS04 Table Top TV Stand. It includes safety information, weight restrictions, VESA pattern compatibility, tools needed, and a list of supplied parts and hardware. The manual also offers video guides for installation and safety lock attachment.



PERLESMITH PSTM1 TV Tripod Stand Installation Guide

Detailed installation instructions for the PERLESMITH PSTM1 TV Tripod Stand, a portable and height-adjustable floor stand for 23-55 inch LED, LCD, and OLED flat-screen TVs with VESA 400x400mm compatibility and an 88 lbs weight capacity.