

KitchenAid KFP0719QG

KitchenAid 7 Cup Food Processor Plus KFP0719QG User Manual

Model: KFP0719QG

INTRODUCTION

Thank you for choosing the KitchenAid 7 Cup Food Processor Plus. This manual provides essential instructions for safe operation, assembly, use, care, and maintenance of your appliance. Please read all instructions carefully before first use and retain for future reference.

This product is a renewed, certified refurbished unit. It has been inspected and tested to ensure it meets original performance standards.

IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not immerse the motor base in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by KitchenAid may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter.
- Keep hands and utensils away from moving blades or discs while processing food to prevent the risk of severe injury to persons or damage to the food processor. A scraper may be used but only when the food processor is not running.
- Blades are sharp. Handle carefully.
- To reduce the risk of injury, never place cutting blade or discs on base without first putting the work bowl properly in

place.

- Be certain lid is securely locked in place before operating appliance.
- Do not attempt to defeat the lid interlock mechanism.
- Do not process hot liquids.
- This appliance is intended for household use only.

PARTS AND FEATURES

Familiarize yourself with the components of your KitchenAid 7 Cup Food Processor Plus.

- Motor Base with Controls (Low, High, Off/Pulse)
- 7 Cup Work Bowl
- Work Bowl Lid with Feed Tube
- Food Pusher
- Multi-purpose Blade (for chopping, pureeing, kneading)
- Reversible Medium Slicing/Shredding Disc
- Thick Slicing Disc
- Dough Blade



Image 1: Assembled KitchenAid 7 Cup Food Processor Plus, showing the motor base, work bowl, lid, and controls.



Image 2: KitchenAid 7 Cup Food Processor Plus with its included accessories: multi-purpose blade, dough blade, reversible medium slicing/shredding disc, and thick slicing disc.

SETUP AND ASSEMBLY

1. Before first use, wash all parts except the motor base in warm, soapy water. Rinse and dry thoroughly. The work bowl, lid, and blades are top-rack dishwasher safe.
2. Place the motor base on a clean, dry, level surface.
3. Place the 7-cup work bowl onto the motor base, aligning the handle with the right side of the base. Twist clockwise until it locks into place.

4. Insert the desired blade or disc onto the drive adapter in the work bowl. Ensure it is seated properly.
5. Place the work bowl lid onto the work bowl, aligning the lid tab with the work bowl handle. Twist clockwise until it locks into place. The processor will not operate unless the lid is securely locked.
6. Ensure the food pusher is in place in the feed tube if not immediately adding ingredients.
7. Plug the power cord into a grounded electrical outlet.

OPERATING INSTRUCTIONS

Using the Multi-purpose Blade (Chop, Puree, Knead)

1. Assemble the food processor with the multi-purpose blade.
2. Add ingredients to the work bowl. Do not overfill.
3. Secure the lid.
4. Select the desired speed: **Low** for chopping, **High** for pureeing, or use **Off/Pulse** for controlled processing.
5. Process until desired consistency is reached. For best results when chopping, use the **Pulse** function.
6. To knead dough, use the dough blade and select the **Low** speed.
7. When finished, switch to **Off** and unplug the appliance before removing the lid and work bowl.

Using Slicing/Shredding Discs

1. Assemble the food processor with the desired slicing or shredding disc. Ensure the disc is placed correctly on the drive adapter.
2. Secure the lid.
3. Turn the food processor to **High** speed.
4. Place ingredients into the feed tube. Use the food pusher to guide ingredients through the feed tube. Apply even, gentle pressure.
5. Do not force ingredients through the feed tube.
6. When finished, switch to **Off** and unplug the appliance before removing the lid and work bowl.

*Note: For optimal performance, process firm ingredients like carrots or potatoes on **High** speed. Softer ingredients like tomatoes may yield better results with a lighter touch on the food pusher.*

CARE AND CLEANING

Proper care ensures the longevity and performance of your food processor.

- Always unplug the food processor before cleaning.
- The motor base should be wiped clean with a damp cloth. Do not immerse the motor base in water or other liquids.
- The work bowl, lid, multi-purpose blade, dough blade, and slicing/shredding discs are top-rack dishwasher safe. Alternatively, they can be hand washed in warm, soapy water.
- Handle blades and discs with extreme care as they are very sharp.
- For stubborn food residue, soak parts in warm, soapy water before cleaning.
- Ensure all parts are completely dry before storing.
- All accessories nest easily inside the 7 cup work bowl for compact storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Food processor does not start.	<ul style="list-style-type: none"> ◦ Not plugged in. ◦ Lid or work bowl not properly locked. ◦ Power outage. 	<ul style="list-style-type: none"> ◦ Ensure the power cord is securely plugged into a grounded outlet. ◦ Check that the work bowl and lid are twisted and locked into their correct positions. ◦ Check household circuit breaker.
Motor stops during operation.	<ul style="list-style-type: none"> ◦ Overload protection activated. ◦ Lid or work bowl became unlocked. 	<ul style="list-style-type: none"> ◦ Turn off, unplug, remove some ingredients, and wait 10-15 minutes for the motor to cool before restarting. ◦ Ensure the work bowl and lid are securely locked.
Uneven chopping/processing.	<ul style="list-style-type: none"> ◦ Too many ingredients. ◦ Ingredients not cut to uniform size. ◦ Incorrect speed or technique. 	<ul style="list-style-type: none"> ◦ Process smaller batches. ◦ Cut ingredients into approximately 1-inch pieces before processing. ◦ Use the Pulse function for better control when chopping.

SPECIFICATIONS

- **Model:** KFP0719QG
- **Capacity:** 7 Cups
- **Speeds:** 3 (Low, High, Off/Pulse)
- **Weight:** Approximately 10 pounds
- **Included Components:** 7-cup work bowl, lid, multi-purpose blade, reversible medium slicing/shredding disc, thick slicing disc, dough blade.
- **Care:** Hand wash recommended for blades/discs, top-rack dishwasher safe for work bowl and lid. Motor base wipe clean.

WARRANTY AND SUPPORT




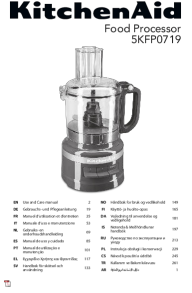
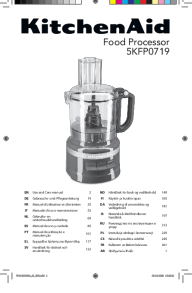
As this is a renewed, certified refurbished product, specific warranty details may vary. Please refer to the documentation provided with your purchase or contact the seller for information regarding the warranty period and support options for your renewed KitchenAid KFP0719QG Food Processor.

For general product information or to locate authorized service centers, you may visit the official [KitchenAid website](#).



© 2023 KitchenAid. All rights reserved. This manual is for informational purposes only.

Related Documents - KFP0719QG

	<p>KitchenAid 7 Cup Food Processor 5KFP0719 User Manual</p> <p>User manual for the KitchenAid 7 Cup Food Processor, model 5KFP0719. Includes safety instructions, parts and features, product assembly, usage, care and cleaning, troubleshooting, and warranty information.</p>
	<p>KitchenAid Food Processor 5KFP0921E/5KFP0921B Use and Care Manual</p> <p>User manual for KitchenAid Food Processor models 5KFP0921E and 5KFP0921B. Covers safety, parts, assembly, operation, cleaning, troubleshooting, and warranty. Find instructions for preparing various foods with this versatile kitchen appliance.</p>
	<p>KitchenAid KFC3516 Mini Food Processor User Manual and Safety Guide</p> <p>Comprehensive user manual for the KitchenAid KFC3516 Mini Food Processor, covering parts, features, safety instructions, assembly, operation, care, cleaning, troubleshooting, and warranty information.</p>
	<p>KitchenAid 5KFP0719 Food Processor User Manual</p> <p>Comprehensive user manual for the KitchenAid 5KFP0719 Food Processor, covering safety, parts, assembly, operation, cleaning, troubleshooting, and warranty information.</p>
	<p>KitchenAid 5KFP0719 Food Processor: User Manual, Safety, and Operation Guide</p> <p>Find detailed instructions for your KitchenAid 5KFP0719 Food Processor, including safety precautions, assembly, usage, cleaning, troubleshooting, and warranty information.</p>

KitchenAid
FOOD PROCESSOR
5KFP0719
OWNER'S MANUAL

25	Owner's Manual	2
26	Product Registration	10
27	La manual del propietario	10
28	Manuale del proprietario	10
29	Guía para el propietario	10
30	Il manuale del proprietario	10
31	Manual do proprietário	10
32	Руководство пользователя	10
33	Handbook for users	10
34	Handbook for users	10
35	Handbook for users	10
36	Handbook for users	10
37	Handbook for users	10
38	Handbook for users	10
39	Handbook for users	10
40	Handbook for users	10
41	Handbook for users	10
42	Handbook for users	10
43	Handbook for users	10
44	Handbook for users	10
45	Handbook for users	10
46	Handbook for users	10
47	Handbook for users	10
48	Handbook for users	10
49	Handbook for users	10
50	Handbook for users	10
51	Handbook for users	10
52	Handbook for users	10
53	Handbook for users	10
54	Handbook for users	10
55	Handbook for users	10
56	Handbook for users	10
57	Handbook for users	10
58	Handbook for users	10
59	Handbook for users	10
60	Handbook for users	10
61	Handbook for users	10
62	Handbook for users	10
63	Handbook for users	10
64	Handbook for users	10
65	Handbook for users	10
66	Handbook for users	10
67	Handbook for users	10
68	Handbook for users	10
69	Handbook for users	10
70	Handbook for users	10
71	Handbook for users	10
72	Handbook for users	10
73	Handbook for users	10
74	Handbook for users	10
75	Handbook for users	10
76	Handbook for users	10
77	Handbook for users	10
78	Handbook for users	10
79	Handbook for users	10
80	Handbook for users	10
81	Handbook for users	10
82	Handbook for users	10
83	Handbook for users	10
84	Handbook for users	10
85	Handbook for users	10
86	Handbook for users	10
87	Handbook for users	10
88	Handbook for users	10
89	Handbook for users	10
90	Handbook for users	10
91	Handbook for users	10
92	Handbook for users	10
93	Handbook for users	10
94	Handbook for users	10
95	Handbook for users	10
96	Handbook for users	10
97	Handbook for users	10
98	Handbook for users	10
99	Handbook for users	10
100	Handbook for users	10

W12042244

[KitchenAid 5KFP0719 Food Processor Owner's Manual](#)

Comprehensive owner's manual for the KitchenAid 5KFP0719 Food Processor, covering safety instructions, assembly, usage, cleaning, and warranty information. Learn how to operate your KitchenAid food processor safely and effectively.