

Ninja FT102CO

Ninja FT102CO Foodi 9-in-1 Digital Air Fry Oven Instruction Manual

Model: FT102CO

1. INTRODUCTION

Thank you for choosing the Ninja FT102CO Foodi 9-in-1 Digital Air Fry Oven. This versatile appliance is designed to simplify your cooking experience by combining multiple functions into one compact unit. This manual provides essential information for safe operation, optimal performance, and proper maintenance of your oven.

Please read all instructions thoroughly before using the appliance to ensure safe and efficient use.

2. IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before use.
- Do not touch hot surfaces. Always use oven mitts or similar protection.
- To protect against electrical shock, do not immerse cord, plugs, or main unit housing in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors. For household use only.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.

3. PRODUCT OVERVIEW

The Ninja FT102CO Foodi 9-in-1 Digital Air Fry Oven is a versatile countertop appliance designed to handle a wide range of cooking tasks. Its compact design and flip-away functionality make it ideal for kitchens with limited counter space.

Key Features:

- **9-in-1 Functionality:** Air Fry, Air Roast, Air Broil, Bake, Bagel, Toast, Dehydrate, Keep Warm, and Reheat.
- **Digital Crisp Control Technology:** Precisely controlled fan speed and temperature for perfectly cooked and crispy results.
- **XL Family-Sized Capacity:** Accommodates a 13-inch pizza, up to 4 lbs of air-fried food, or a 2-lb roast.
- **Flip-Away Functionality:** Reclaims up to 45% of your counter space when flipped up and stored vertically.
- **Easy Cleaning:** Features a removable crumb tray and an accessible back panel for thorough cleaning.

Included Accessories:

- Air Fry Basket
- 13" x 13" Sheet Pan
- 15-Recipe Inspiration Guide



Figure 3.1: Front view of the Ninja FT102CO Foodi 9-in-1 Digital Air Fry Oven.

NINJA FOODI 9-IN-1 DIGITAL AIR FRY OVEN FT102A

FT102A

NINJA®
Foodi™
DIGITAL
AIR FRY OVEN

- ✓ **9 functions**
- ✓ **Fits up to a 13" x 13" sheet pan**
- ✓ **2 accessories included**
- ✓ **15 Inspiration Recipe Guide included**

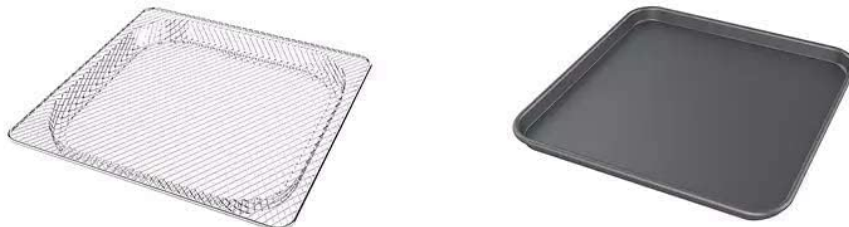


Figure 3.2: Key features and included accessories of the Ninja Foodi Digital Air Fry Oven.

9 functions to elevate your cooking

- Air Fry
- Air Roast
- Air Broil
- Bake
- Toast
- Bagel
- Dehydrate
- Keep Warm
- Reheat



Figure 3.3: Detailed list of the 9 cooking functions available.



EASY TO CLEAN

A removable bottom panel allows you to easily access the interior for deep cleaning.

Figure 3.4: The Air Fry Basket and 13" x 13" Sheet Pan included with the oven.

4. SETUP

Unpacking and Initial Cleaning:


1. Remove all packaging materials and promotional labels from the appliance.
2. Wash the Air Fry Basket and 13" x 13" Sheet Pan in warm, soapy water. Rinse thoroughly and dry completely.
3. Wipe the interior and exterior of the main unit with a damp cloth.
4. Ensure all parts are completely dry before use.

Placement:

- Place the oven on a clean, dry, and level surface.
- Ensure there is adequate space (at least 6 inches) between the back of the oven and the wall, and 12 inches above the oven for proper ventilation.

- Do not place the oven on a surface that is heat-sensitive.

With the Ninja® Foodi™ 9-in-1 Digital Air Fry Oven, you also get:

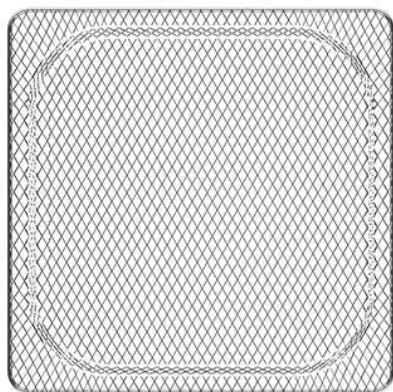

Air Fry Basket

Air fry and roast up to 4 lbs.



13" x 13" Sheet Pan

Bake a 13" pizza or
toast up to 9 slices of bread.

Figure 4.1: The oven's design allows for easy cleaning and space-saving storage.

5. OPERATING INSTRUCTIONS

Control Panel Overview:

The digital control panel features a clear display and intuitive buttons for selecting functions, adjusting time and temperature, and starting/stopping cooking cycles.

- **Function Dial:** Rotate to select desired cooking function (Air Fry, Air Roast, Air Broil, Bake, Bagel, Toast, Dehydrate, Keep Warm, Reheat).
- **Temperature/Shade Buttons:** Use +/- buttons to adjust cooking temperature or toast shade.
- **Time/Slices Buttons:** Use +/- buttons to adjust cooking time or number of toast slices.
- **Start/Stop Button:** Press to begin or end a cooking cycle.
- **Light Button:** Activates the interior oven light.

Using Cooking Functions:

1. Plug the oven into a grounded electrical outlet.
2. Turn the Function Dial to select your desired cooking mode. The default time and temperature for that function will appear on the display.
3. Adjust the temperature/shade and time/slices using the +/- buttons as needed.
4. Place your food in the appropriate accessory (Air Fry Basket or Sheet Pan) and insert it into the oven.
5. Press the Start/Stop button to begin cooking. The oven will preheat if necessary, and then the timer will begin counting down.
6. To pause or stop cooking, press the Start/Stop button again.

Get to know this Ninja® Foodi™ Digital Air Fry Oven



Flip-away functionality

Easily clean surfaces beneath and around the oven.



Removable crumb tray

Slides out so you can easily clean up crumbs and small spills.



Accessible back panel

Easily access the oven's interior for deeper cleaning.

FT102A

Figure 5.1: The control panel and display during operation, showing a pizza being cooked.



FAST, FAMILY-SIZED MEALS

60-second preheat for family-sized sheet pan meals
in as little as 20 minutes.

Figure 5.2: Digital Crisp Control Technology ensures even cooking and crisping for foods like fries.



Figure 5.3: Safely removing cooked food from the oven.

6. MAINTENANCE AND CLEANING

Daily Cleaning:

- Always unplug the oven and allow it to cool completely before cleaning.
- Wipe the interior and exterior surfaces with a damp cloth and mild dish soap.
- The Air Fry Basket and Sheet Pan are dishwasher safe or can be hand-washed with warm, soapy water.

Deep Cleaning:

- **Removable Crumb Tray:** Slide out the crumb tray from the bottom of the oven and empty any crumbs. Wash with warm, soapy water and dry thoroughly.
- **Accessible Back Panel:** For deeper cleaning of the oven interior, the back panel can be accessed. Refer to the detailed instructions in the included owner's guide for specific steps.

Recipe book with 15 recipes to inspire you



Figure 6.1: The oven's design allows for easy access to the interior for deep cleaning.

7. TROUBLESHOOTING

If your Ninja Foodi Digital Air Fry Oven is not functioning as expected, please refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Appliance not turning on	Not plugged in; Power outage; Unit not fully closed.	Ensure power cord is securely plugged in; Check household circuit breaker; Ensure oven door is fully closed and latched.
Food not cooking evenly	Overcrowding; Incorrect temperature/time; Food not flipped.	Avoid overcrowding the basket/pan; Adjust temperature/time settings; Flip or toss food halfway through cooking.

Problem	Possible Cause	Solution
White smoke coming from unit	Grease buildup; Fatty foods.	Clean the crumb tray and interior thoroughly; Use a small amount of oil; Ensure crumb tray is in place.

If the problem persists, please contact customer support.

8. SPECIFICATIONS

- **Model Number:** FT102CO
- **Brand:** Ninja
- **Power/Wattage:** 1800 watts
- **Voltage:** 120 Volts
- **Capacity:** 4 Pounds (Air Fry), 13" Pizza, 2-lb Roast
- **Material:** Stainless Steel
- **Product Dimensions:** 50.09 x 19.2 x 38 cm (19.72 x 7.56 x 14.96 inches)
- **Item Weight:** 10.34 kg (22.79 lbs)

9. WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the official Ninja website or the documentation included with your original purchase. As this is a renewed product, specific warranty terms may vary. Please consult the Amazon Renewed Guarantee for details regarding your purchase.

© 2026 Ninja. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question