

UBay AKB75675304

UBay AKB75675304 Universal Remote Control for LG Smart TVs User Manual

Model: AKB75675304

1. INTRODUCTION AND OVERVIEW

The UBay AKB75675304 is a universal replacement remote control designed for a wide range of LG LCD, LED, and HDTV Smart TVs. This remote offers immediate functionality without the need for complex programming or pairing processes. Simply insert batteries, and it is ready for use.

It features dedicated shortcut buttons for popular streaming services like Netflix and Prime Video, enhancing user convenience. The remote is built for quick response times, ensuring a seamless control experience for your television.



Universal Remote Control for All LG Smart TV LCD LED OLED UHD HDTV Plasma Magic 3D



Compatible with LG TV Remote:

AKB75095307/ AKB75375604/ AKB75675304/ AKB74915305
AKB76037601/ AKB75675313/ AKB75855501

Figure 1: UBay AKB75675304 Universal Remote Control

This image displays the UBay AKB75675304 remote control alongside an LG Smart TV, illustrating its intended use. The remote features a standard button layout with dedicated streaming service buttons.

2. SETUP INSTRUCTIONS

This remote control requires no programming or pairing. Follow these simple steps to begin using your remote:

1. **Open the Battery Compartment:** Locate the battery cover on the back of the remote control. Slide or press the latch to open it.
2. **Insert Batteries:** Insert two (2) new 1.5V AAA alkaline batteries into the compartment. Ensure the positive (+) and negative (-) terminals are aligned correctly according to the indicators inside the compartment.
3. **Close the Battery Compartment:** Replace the battery cover, ensuring it clicks securely into place.
4. **Begin Use:** The remote control is now ready to operate your compatible LG Smart TV. Point the remote directly at your TV's infrared sensor.





Figure 2: Front and Back View of the Remote Control

This image shows both the front and back of the UBay AKB75675304 remote control, highlighting the battery compartment on the rear for easy access during setup.

3. OPERATING INSTRUCTIONS

The UBay AKB75675304 remote control provides intuitive access to your LG Smart TV's functions. Below is a guide to the primary buttons and their uses:



Figure 3: Remote Control Button Functions

This image illustrates the UBay AKB75675304 remote control with labels indicating the function of each button, such as power, volume, channel, and navigation controls.

- **Power Button (⏻):** Turns the TV on or off.
- **Number Buttons (0-9):** Directly select channels.
- **-/LIST Button:** Accesses the saved channels list.
- **Quick Access / FAV Button:** Access your favorite channels list.
- **VOL +/-:** Adjusts the volume level.
- **CH +/-:** Changes television channels.
- **Mute Button (🔇):** Mutes or unmutes the TV audio.
- **Netflix Button:** Direct access to the Netflix application.
- **Prime Video Button:** Direct access to the Prime Video application.
- **Home Button (🏠):** Returns to the TV's home screen or main menu.
- **Back Button:** Returns to the previous step or menu.
- **Exit Button:** Exits the current menu or application.
- **Navigation Pad (Up, Down, Left, Right, OK):** Navigates through menus and confirms selections.

- **INFO Button:** Displays information about the current program or content.
- **SAP Button:** Selects Secondary Audio Program (if available).
- **Movies Button:** Direct access to movie content or a movie streaming application.
- **REC Button:** Initiates recording (if supported by your TV and connected device).
- **Playback Controls (Rewind, Play/Pause, Fast Forward, Stop):** Controls media playback.
- **Color Buttons (Red, Green, Yellow, Blue):** Used for interactive functions or specific menu options as indicated on screen.



Figure 4: Shortcut Buttons for Streaming Services

This image focuses on the UBay AKB75675304 remote control, specifically highlighting the dedicated Netflix, Prime Video, and Movies shortcut buttons for quick access to streaming content.

4. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your remote control.

- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both AAA batteries simultaneously with new ones. Do not mix old and new batteries, or different types of batteries.
- **Cleaning:** To clean the remote, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or excessive moisture, as these can damage the remote's electronics.
- **Storage:** Store the remote in a dry place, away from direct sunlight, extreme temperatures, and high humidity.

5. TROUBLESHOOTING

If you encounter issues with your UBay AKB75675304 remote control, refer to the following troubleshooting steps:

- **Remote Not Responding:**
 - **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity (+/-). Replace old batteries with two new AAA alkaline batteries.
 - **Line of Sight:** Make sure there are no obstructions between the remote control and the TV's infrared sensor. The remote requires a clear line of sight to the TV.
 - **Remote Sensor:** Confirm that the TV's remote sensor is not obstructed or covered. Some TV setups might inadvertently block the sensor.
- **Buttons Not Functioning Correctly:**
 - **Clean Buttons:** If specific buttons are sticky or unresponsive, gently clean around them with a soft, slightly damp cloth.
 - **Test Other Functions:** Check if other buttons on the remote work. If only a few buttons are affected, it might indicate a localized issue.
- **Intermittent Operation:**
 - **Battery Power:** Weak batteries can cause intermittent operation. Replace them.
 - **Environmental Interference:** Strong light sources (like direct sunlight or certain types of lighting) can sometimes interfere with infrared signals. Try operating the remote in different lighting conditions.

6. SPECIFICATIONS

Feature	Detail
Brand	UBay
Model Name	AKB75675304
Model Number	UBay-LG-AKB75675304
Connectivity Technology	Infrared (IR)
Compatible Devices	Television (LG LCD, LED, HDTV Smart TVs)
Battery Type	2 x AAA (not included)
Maximum Range	10 Meters

Button Quantity	25
Color	Black

Compatible LG TV Models (Partial List):

- 32LM5620BPUA, 32LM570BPUA, 32LM620BPUA, 32LM630BPUB, 32LM6350PUA, 32LM639BPUB
- 43LM5700PUA, 43LM6300PUB, 43UM6900PUA, 43UM7100PUA, 43UM7300AUE, 43UM7300PUA, 43UM7310PUA
- 49UM6900PUA, 49UM7100PUA, 49UM7300AUE, 49UM7300PUA
- 50UM7300AUE, 50UM7300PUA, 50UM7310PUA, 50UM7400PUA
- 55UM6900PUA, 55UM7100PUA, 55UM7200PUA, 55UM7300AUE, 55UM7300PUA, 55UM7400PUA, 55UM7650PUB
- 60UM7100DUA, 60UM7200PUA, 60UM6900PUA, 60UM6950DUB
- 65UM6900PUA, 65UM7100PUA, 65UM7300AUE, 65UM7300PUA, 65UM7400PUA, 65UM7650PUB
- 70UM7170DUA, 70UM7350PUA, 70UM7370AUB, 70UM7370PUA, 70UM6970PUA
- 75UM7100PUA, 75UM7570AUE, 75UM7570PUB, 75UM7570PUD, 75UM6970PUB
- 82UM7570PUB, 82UM8070PUA
- 86UM7570PUB, 86UM8070AUB, 86UM8070PUA
- And many more LG Smart TV models.

7. WARRANTY AND SUPPORT

Specific warranty details for the UBay AKB75675304 Universal Remote Control are not provided within this manual. For warranty information, technical support, or customer service inquiries, please contact the manufacturer, UBay Factory, or refer to the product packaging and purchase documentation.

Please retain your proof of purchase for any warranty claims.

