

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [iJoy](#) /

› [iJoy Disney Mickey Mouse Bluetooth Headphones \(Model DHP2103\) User Manual](#)

iJoy DHP2103

iJoy Disney Mickey Mouse Bluetooth Headphones (Model DHP2103) User Manual

Model: DHP2103 | Brand: iJoy

INTRODUCTION

Thank you for choosing the iJoy Disney Mickey Mouse Bluetooth Headphones. These over-ear headphones offer both wireless Bluetooth and wired connectivity, featuring a built-in microphone for hands-free calling, a micro SD card slot for direct music playback, and an integrated radio receiver. Designed for comfort and portability, they feature a foldable design and ear cups that help isolate audio. This manual provides detailed instructions for setup, operation, and maintenance to ensure optimal performance.

WHAT'S IN THE BOX

Disney

Bluetooth®

WIRELESS HEADSET

Foldable Headset with 5 Button Controls and Built-In Mic

Bring these Disney-themed foldable wireless headset with you anywhere! With a 5-button control and built-in mic, these headphones are perfect for phone calls, multitasking, and just relaxing. It is compatible with memory cards for versatile playback and has a radio receiver so you can discover new music.

UP TO
15
HOURS
PLAY TIME

UP TO
2
HOURS
CHARGE
TIME

NOISE
CANCELING

FOLDABLE
HEADSET



CONTENTS:
1 FOLDABLE HEADPHONE, 1 CHARGING CABLE,
1 AUX-IN CABLE, 1 MANUAL

©Disney
www.disney.com 

The retail box for the iJoy Disney Mickey Mouse Bluetooth Headphones, detailing contents and features.

- 1 x Foldable Headphone
- 1 x Charging Cable
- 1 x AUX-in Cable
- 1 x User Manual

PRODUCT OVERVIEW

The iJoy Disney Mickey Mouse Bluetooth Headphones are designed for ease of use and comfort. Below are key features and controls.



Front view of the iJoy Disney Mickey Mouse Bluetooth Headphones, showcasing the over-ear design and Mickey Mouse pattern on the headband.





Side view of the headphone showing the control panel on the ear cup, featuring the Mickey Mouse icon at the center.

Control Buttons:

- **Play/Pause/Answer/Hang-up:** Central button on the ear cup.
- **Equalizer (EQ):** Adjusts sound profiles.
- **Next Track/Volume Up:** Forward button.
- **Previous Track/Volume Down:** Backward button.
- **Mode (M):** Switches between Bluetooth, FM Radio, and Micro SD modes.

The headphones also feature a Micro SD card slot, a 3.5mm audio jack for wired connection, and a charging port.

SETUP

1. Charging the Headphones

Before first use, fully charge your headphones. Connect the provided charging cable to the headphone's charging port and the other end to a USB power source. The LED indicator will show charging status. A full charge takes approximately 2 hours and provides up to 15 hours of play time.

2. Bluetooth Pairing

1. Ensure the headphones are turned off.
2. Press and hold the Play/Pause button until the LED indicator flashes blue and red, indicating pairing mode.
3. On your device (smartphone, tablet, computer), enable Bluetooth and search for available devices.
4. Select "DHP2103" or "iJoy Mickey Mouse Headphones" from the list.
5. Once paired, the LED indicator will turn solid blue or flash blue slowly. The headphones have a Bluetooth range of up to 10 meters (33 feet).

3. Wired Connection

For a wired connection, use the provided 3.5mm AUX-in cable. Plug one end into the headphone's 3.5mm jack and the other end into your audio device's headphone jack. The headphones will automatically switch to wired mode.

OPERATING INSTRUCTIONS

Basic Controls:

- **Power On/Off:** Press and hold the Play/Pause button.
- **Play/Pause Music:** Short press the Play/Pause button.
- **Volume Up/Down:** Short press the '+' or '-' buttons.
- **Next/Previous Track:** Long press the '+' or '-' buttons.
- **Answer/End Call:** Short press the Play/Pause button during an incoming call.
- **Reject Call:** Long press the Play/Pause button during an incoming call.
- **Redial Last Number:** Double-press the Play/Pause button.
- **Change Mode (M):** Short press the 'M' button to cycle through Bluetooth, FM Radio, and Micro SD modes.
- **Equalizer (EQ):** Short press the 'EQ' button to cycle through different sound equalization presets.

Micro SD Card Playback:

Insert a Micro SD card with MP3 audio files into the designated slot. Switch to Micro SD mode using the 'M' button. The headphones will automatically begin playing music from the card.

FM Radio:

Switch to FM Radio mode using the 'M' button. Long press the Play/Pause button to auto-scan and save available radio stations. Use the '+' and '-' buttons to navigate between saved stations.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the headphones. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use, store the headphones in a cool, dry place. The foldable design allows for compact storage.
- **Battery Care:** To prolong battery life, avoid fully discharging the headphones frequently. Charge them regularly, even if not in constant use.
- **Water Resistance:** These headphones are water-resistant, but not waterproof. Avoid submerging them in water or exposing them to heavy rain.

TROUBLESHOOTING

Problem	Solution
Headphones won't turn on.	Ensure the headphones are charged. Connect to a power source using the charging cable.
Cannot pair via Bluetooth.	Make sure headphones are in pairing mode (flashing blue/red LED). Ensure Bluetooth is enabled on your device and it's within 10 meters. Forget previous pairings on your device and try again.
No sound in wired mode.	Check if the 3.5mm AUX cable is fully inserted into both the headphones and the audio device. Ensure the audio device's volume is not muted or too low.
Poor sound quality.	For Bluetooth, ensure you are within range and there are no obstructions. Try adjusting the EQ settings. For wired, check the cable for damage.
Micro SD card not playing.	Ensure the card is inserted correctly and contains compatible audio files (e.g., MP3). Switch to Micro SD mode using the 'M' button.

SPECIFICATIONS

Feature	Detail
Model Name	DHP2103
Connectivity Technology	Wired, Wireless (Bluetooth)
Bluetooth Version	4.0
Bluetooth Range	10 Meters
Headphones Jack	3.5 mm Jack
Battery Life	Up to 15 Hours
Charging Time	2 Hours

Feature	Detail
Special Features	Built-in Radio Receiver, Foldable and Adjustable headband, Micro SD Card Plug-in, Microphone Included
Noise Control	Sound Isolation
Water Resistance Level	Water Resistant
Item Weight	9.1 ounces
Manufacturer	iJoy

WARRANTY AND SUPPORT

iJoy provides a 6-month exchange warranty for these headphones. If your headset breaks or is damaged for any reason within this period, iJoy will provide a free replacement. For further support or warranty claims, please contact iJoy customer service through their official channels or the retailer where the product was purchased.

OFFICIAL PRODUCT VIDEOS

Below is an official product video from the seller demonstrating features and usage of the iJoy Disney Mickey Mouse Bluetooth Headphones.

Disney Bluetooth Headphones Over Ear Wireless Headphones

Your browser does not support the video tag.

This video provides an overview of the Disney Bluetooth Headphones, highlighting their wireless capabilities and over-ear design.

