

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [HONITURE](#) /

› [HONITURE Cordless Handheld Vacuum Cleaner EV-CJD106-ESBS1 User Manual](#)

HONITURE EV-CJD106-ESBS1

HONITURE Cordless Handheld Vacuum Cleaner

Model: EV-CJD106-ESBS1

1. INTRODUCTION

Thank you for purchasing the HONITURE Cordless Handheld Vacuum Cleaner. This manual provides important information regarding the safe operation, maintenance, and troubleshooting of your device. Please read this manual thoroughly before use and retain it for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electric shock, or injury, read all instructions before using this appliance.

- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material, such as chlorine bleach, ammonia, or drain cleaner.
- Do not use without dust bag and/or filters in place.
- Prevent unintentional starting. Ensure the switch is in the OFF-position before connecting to battery pack, picking up or carrying the appliance.
- Recharge only with the charger specified by the manufacturer.
- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush

with water. If liquid contacts eyes, additionally seek medical help.

3. PACKAGE CONTENTS

Please check the package contents to ensure all items are present and undamaged:

- HONITURE Cordless Handheld Vacuum Cleaner
- Crevice Tool
- Brush Nozzle
- Extension Tube
- Charging Adapter
- User Manual (This document)



Image: The HONITURE handheld vacuum cleaner shown with its various attachments and charging adapter.

4. PRODUCT OVERVIEW

Familiarize yourself with the components of your vacuum cleaner:



Image: A detailed view of the vacuum cleaner, highlighting its main body, dust cup, filter, power button, and charging port.

Attachments:

- **Crevice Tool:** Ideal for reaching narrow gaps and corners, such as between car seats or sofa cushions.
- **Brush Nozzle:** Suitable for cleaning delicate surfaces, upholstery, and removing pet hair from fabrics.
- **Extension Tube:** Extends the reach of the vacuum, useful for cleaning under furniture or high areas.

Différents embouts pour répondre aux fins divers de nettoyage quotidien



Rallonge

convient aux endroits difficiles à atteindre



Suceur plat

pour les débris dans les espaces étroits



Brosse ronde

pour les miettes et les cheveux sur le tissu



Image: The crevice tool, brush nozzle, and extension tube are displayed, demonstrating their shapes and intended uses.

5. SETUP AND CHARGING

Initial Charge:

1. Before first use, fully charge the vacuum cleaner.
2. Connect the charging adapter to the vacuum cleaner's charging port.
3. Plug the adapter into a standard wall outlet.
4. The charging indicator light will illuminate. A full charge typically takes 4 to 5 hours.
5. Once fully charged, disconnect the adapter.

Note: The vacuum features battery overvoltage and temperature protection to extend battery life.



Image: An exploded view of the vacuum cleaner's internal components, illustrating the battery and its protective features during charging.

6. OPERATING INSTRUCTIONS

Turning On/Off:

- Press the power button once to turn on the vacuum cleaner.
- Press the power button again to turn off the vacuum cleaner.

Using Attachments:

Select the appropriate attachment for your cleaning task and firmly attach it to the vacuum's nozzle.

- **Crevice Tool:** Use for tight spaces like car interiors or keyboard crevices.

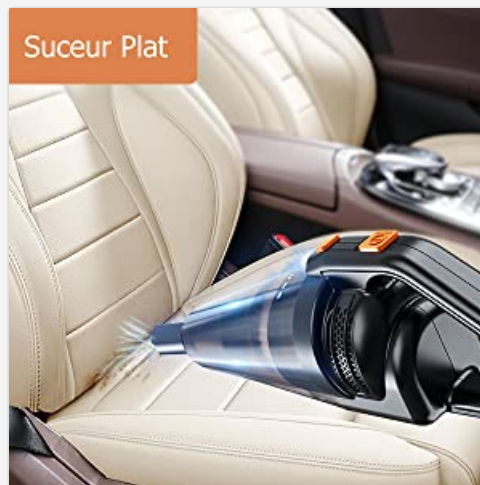


Image: The crevice tool is shown effectively cleaning debris from between car seats.

- **Brush Nozzle:** Ideal for dusting surfaces or vacuuming pet hair from upholstery.



Image: The brush nozzle is used to clean pet hair from a tiled floor, with a dog lying nearby.

- **Extension Tube:** Connect the extension tube to reach under beds, sofas, or high shelves.



Image: The vacuum with the extension tube attached is shown cleaning dust from a bookshelf.

LED Light Function:

The vacuum cleaner is equipped with an LED light to illuminate dark areas, making dust and debris more visible. This is particularly useful for cleaning under furniture, car seats, or in dimly lit compartments.



Image: The vacuum's LED light is shown illuminating dirt and debris on a car's floor mat, enhancing visibility during cleaning.

Applications:

This versatile handheld vacuum is suitable for various cleaning tasks:

- **Car:** Clean crumbs, dust, and pet hair from car seats, floor mats, and crevices.
- **Office:** Keep your desk, keyboard, and office space free from dust and small debris.
- **Home:** Quickly clean up spills, pet hair, and dust in the kitchen, living room, or bedroom.

Applications Larges



Voiture



Bureau



Maison

Image: A collage showing the handheld vacuum being used to clean a car interior, an office desk with a keyboard, and under a bed in a home setting.

7. MAINTENANCE AND CLEANING

Regular cleaning of the dust cup and filter is essential to maintain optimal suction performance.

Cleaning the Dust Cup and Filter:

1. **Step 1: Detach the Dust Cup.** Hold the vacuum cleaner and twist the dust cup counter-clockwise to detach it from the main body.

COMMENT NETTOYER



Image: Step 1 shows a hand holding the vacuum, ready to detach the dust cup.

- Step 2: Remove the Filter.** Carefully pull out the stainless steel filter from the dust cup.

COMMENT NETTOYER



Image: Step 2 shows a hand removing the filter assembly from the dust cup.

- Step 3: Empty the Dust Cup.** Dispose of the collected debris from the dust cup into a trash bin.

COMMENT NETTOYER



Image: Step 3 shows the dust cup being emptied into a waste bin.

- Step 4: Wash the Filter.** Rinse the stainless steel filter under running water until clean. Ensure it is completely dry before reassembling.

COMMENT NETTOYER



Image: Step 4 shows the stainless steel filter being rinsed under a faucet.

The HONITURE vacuum uses a durable stainless steel filter, which can be washed and reused. This filter provides 11 levels of filtration, capturing 99.99% of dust particles as small as 3 microns.

Filtre en Acier Inoxydable Réutilisable



Type humide et sec

Facile d'entretien



Filtre en Papier
Filtre Jetable



Filtre en tissu non tissé
Difficile de nettoyer absolument

Image: A hand is shown rinsing the stainless steel filter under running water, demonstrating its reusability and ease of cleaning.

8. TROUBLESHOOTING

If you encounter issues with your vacuum cleaner, please refer to the following common problems and solutions:


| Problem | Possible Cause | Solution |
|--------------------------|----------------------|----------------------------------|
| Vacuum does not turn on. | Battery is depleted. | Charge the vacuum cleaner fully. |

| Problem | Possible Cause | Solution |
|---------------------------------|--|--|
| Reduced suction power. | Dust cup is full. Filter is clogged. Nozzle/attachment is blocked. | Empty the dust cup. Clean or wash the filter. Ensure it is dry before reinserting. Remove any obstructions from the nozzle or attachment. |
| Vacuum stops during operation. | Battery is low. Overheating protection activated. | Recharge the battery. Turn off the vacuum and allow it to cool down for at least 30 minutes before resuming use. |
| Charging indicator not working. | Charger not properly connected. Faulty charger or outlet. | Ensure the charger is securely plugged into both the vacuum and the wall outlet. Try a different outlet or contact customer support if the charger is suspected to be faulty. |

If the problem persists after trying these solutions, please contact HONITURE customer support for assistance.

9. SPECIFICATIONS

| Feature | Detail |
|------------------|---|
| Model Number | EV-CJD106-ESBS1 |
| Power | 130 Watts |
| Suction Power | 9000 Pa |
| Battery Capacity | 2600 mAh |
| Voltage | 12 Volts |
| Run Time | Up to 30 minutes |
| Charging Time | 4-5 hours |
| Noise Level | ≤70 dB |
| Filter Type | Stainless Steel HEPA Filter (Washable) |
| Weight | 0.86 kg (approximately 1.9 lbs) |
| Special Features | LED Light, Overvoltage Protection, Overheating Protection |

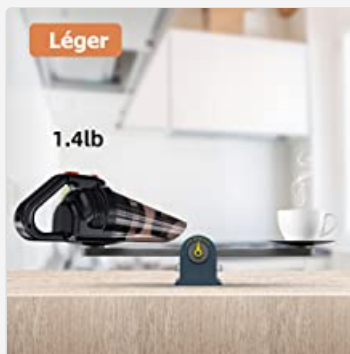

Images: Visual representations of the vacuum's 9000Pa suction, lightweight design (1.4 lbs), and quiet operation (≤ 70 dB).

10. WARRANTY AND SUPPORT

HONITURE provides a **3-year warranty** for this product. We also offer professional technical support for the lifetime of the product.

If you have any questions, concerns, or require technical assistance regarding your HONITURE Cordless Handheld Vacuum Cleaner, please do not hesitate to contact our customer support team. We are committed to ensuring your satisfaction and will provide solutions and repairs as needed.

Contact Information:

- Please refer to the contact details provided on the HONITURE official website or your purchase documentation.