

[Manuals.plus](#) /

› [Tefal](#) /

› TEFAL CY7541 Turbo Cuisine Multicooker Instruction Manual

Tefal CY7541

TEFAL CY7541 Turbo Cuisine Multicooker Instruction Manual

Model: CY7541

1. INTRODUCTION

Thank you for choosing the TEFAL CY7541 Turbo Cuisine Multicooker. This versatile appliance is designed to simplify your cooking process, offering a wide range of functions from pressure cooking to slow cooking, steaming, and baking. With its intuitive controls and spherical bowl technology, you can prepare delicious meals efficiently. Please read this manual carefully before first use to ensure safe and optimal operation of your appliance.



Image 1.1: The TEFAL CY7541 Turbo Cuisine Multicooker.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.

- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance cooks under pressure. Improper use may result in scalding injury. Make certain unit is properly closed before operating. See "Operating" section.
- Do not fill the unit over 2/3 full. When cooking foods that expand during cooking, such as rice or dehydrated vegetables, do not fill the unit over 1/2 full. Overfilling may cause a risk of clogging the vent pipe and developing excess pressure. See "Operating" section.
- Be aware that certain foods, such as applesauce, cranberries, pearl barley, oatmeal or other cereals, split peas, noodles, macaroni, rhubarb, or spaghetti can foam, froth, and sputter, and clog the pressure release device. These foods should not be cooked in a pressure cooker.
- Always check the pressure release device for clogging before use.
- Do not open the pressure cooker until the unit has cooled and internal pressure has been released. If the handles are difficult to push apart, this indicates that the cooker is still pressurized. Do not force it open. Any pressure in the cooker can be dangerous. See "Operating" section.

3. PRODUCT COMPONENTS

Your TEFAL CY7541 Turbo Cuisine Multicooker comes with several key components designed for optimal performance and ease of use. Familiarize yourself with each part before operation.





Image 3.1: Exploded view showing the multicooker's main parts.

1. **Main Unit:** The outer housing containing the heating element and control panel.
2. **Spherical Cooking Bowl:** The non-stick inner pot where food is cooked. Its spherical shape ensures even heat distribution.
3. **Lid:** The cover for the cooking bowl, featuring a pressure release valve and sealing gasket.
4. **Steaming Basket:** Used for steaming vegetables, fish, and other foods.
5. **Measuring Cup:** For precise measurement of ingredients.
6. **Spatula and Spoon:** Non-scratch utensils for stirring and serving.



Image 3.2: The multicooker displayed with its steaming basket, measuring cup, spatula, and spoon.

4. SETUP AND FIRST USE

Before using your multicooker for the first time, follow these steps:

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for future storage or transport if needed.
2. **Initial Cleaning:** Wash the spherical cooking bowl, steaming basket, measuring cup, spatula, and spoon with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
3. **Assembly:** Place the clean, dry spherical cooking bowl into the main unit. Ensure it sits correctly and is stable.
4. **Lid Placement:** Place the lid onto the main unit, aligning it properly. Rotate the lid clockwise until it locks into place. Ensure the pressure release valve is clear and correctly positioned.
5. **Power Connection:** Plug the power cord into a grounded electrical outlet. The display will illuminate.

5. OPERATING INSTRUCTIONS

The TEFAL CY7541 Turbo Cuisine Multicooker features an intuitive control panel and a versatile set of programs.

5.1 Control Panel Overview



Image 5.1: The control panel with display and buttons.

- **Display:** Shows cooking time, temperature, and program indicators.
- **Dial:** Used to navigate through programs, adjust time, and temperature settings.
- **Start/Stop Button:** Initiates or cancels a cooking program.
- **Delayed Start Button:** Sets a timer for cooking to begin at a later time.
- **Temperature Button:** Allows manual adjustment of cooking temperature for certain programs.

5.2 Selecting a Cooking Program

The multicooker offers 10 automatic programs and a manual mode:

1. Add your ingredients to the spherical cooking bowl.
2. Close and lock the lid securely.
3. Turn the dial to select your desired program. The available programs include: *Stews, Soups, Stir-fries, Steaming, Baking, Sous-vide, Slow cooking, Oatmeal, Yogurt, and Fermentation.*
4. Once a program is selected, the default time and temperature settings will appear on the display.
5. To adjust the time or temperature (if applicable for the selected program), use the dial or the dedicated temperature button.

6. Press the Start/Stop button to begin cooking.



Image 5.2: A hand adjusting the settings using the control dial.

5.3 Pressure Cooking

The multicooker's pressure cooking function allows for faster cooking times. Ensure the lid is properly sealed and the pressure release valve is in the closed position for pressure to build. Do not attempt to open the lid until all internal pressure has been safely released.

5.4 Keep Warm Function

After cooking is complete, the appliance will automatically switch to a 'Keep Warm' mode, maintaining the food's temperature for up to 24 hours. This function can be manually deactivated by pressing the Start/Stop button.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and optimal performance of your multicooker.

1. **Unplug and Cool:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Cooking Bowl and Accessories:** The spherical cooking bowl, steaming basket, measuring cup, spatula, and spoon are dishwasher safe. Alternatively, wash them with warm, soapy water and rinse thoroughly. Ensure they are completely dry before storage.
3. **Lid:** Remove the lid and wash it with warm, soapy water. Pay attention to the sealing gasket and pressure release valve, ensuring they are free from food debris. Rinse and dry thoroughly.
4. **Main Unit:** Wipe the exterior of the main unit with a damp cloth. Do not use abrasive cleaners or scourers. Never immerse the main unit in water or any other liquid.
5. **Storage:** Store the multicooker in a dry place, away from direct sunlight and moisture.

7. TROUBLESHOOTING

If you encounter issues with your TEFAL CY7541 Multicooker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outage; faulty outlet.	Check power cord connection; verify power supply; try a different outlet.
Pressure not building during cooking.	Lid not properly sealed; pressure release valve open; sealing gasket damaged.	Ensure lid is locked correctly; check pressure release valve position; inspect and replace gasket if damaged.
Food not cooking properly.	Incorrect program or settings selected; insufficient liquid; overfilling.	Verify program and adjust time/temperature; ensure adequate liquid for pressure cooking; do not overfill the bowl.
Steam leaking from lid.	Lid not sealed; sealing gasket dirty or damaged.	Ensure lid is properly closed and locked; clean or replace the sealing gasket.

If the problem persists after attempting these solutions, please contact customer support.

8. TECHNICAL SPECIFICATIONS

- **Model:** TEFAL CY7541
- **Power:** 1090 W
- **Capacity:** 5 Liters
- **Dimensions (L x W x H):** Approximately 36.5 x 35.7 x 35 cm
- **Weight:** Approximately 7.8 kg
- **Color:** White
- **Manufacturer:** Groupe SEB Polska

9. WARRANTY INFORMATION

Your TEFAL CY7541 Turbo Cuisine Multicooker is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details. Keep your proof of purchase for any warranty claims.

10. CUSTOMER SUPPORT

For further assistance, product information, or to inquire about repairs, please visit the official Tefal website or contact your local customer service center. Contact details can typically be found on the manufacturer's website or in the documentation provided with your appliance.

You can also visit the [Tefal Store on Amazon](#) for more information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09NW9J36J>

More documents and user manuals: <https://manuals.plus/>