

NEDIS KAMC200CBK

Nedis KAMC200CBK Food Chopper Instruction Manual

Model: KAMC200CBK

1. INTRODUCTION

Thank you for purchasing the Nedis KAMC200CBK Food Chopper. This appliance is designed to simplify your food preparation tasks by efficiently chopping and cutting various ingredients. Please read this instruction manual carefully before using the product to ensure safe and optimal performance. Keep this manual for future reference.

Key Features:

- 260 W motor for efficient chopping
- 0.5 L (500 ml) plastic chopping bowl
- Durable stainless steel blades
- Two speed settings with Turbo function
- Dishwasher-safe removable parts for easy cleaning

2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions when using electrical appliances:

- Read all instructions before using the appliance.
- This appliance is intended for household use only. Do not use it for commercial purposes.
- **DANGER:** Blades are very sharp. Handle with extreme care when assembling, disassembling, or cleaning.
- Always unplug the appliance from the power outlet before assembling, disassembling, cleaning, or when not in use.
- Do not immerse the motor unit, cord, or plug in water or any other liquid. Wipe with a damp cloth only.
- Keep hands and utensils away from the moving blades during operation to prevent injury. Use a spatula only when the appliance is stopped.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact qualified service personnel for examination, repair, or adjustment.

- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Ensure the lid is securely locked in place before operating the chopper.
- Do not process extremely hot liquids or hard, frozen foods.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your Nedis KAMC200CBK Food Chopper:

- **A. Motor Unit:** Contains the motor and control buttons.
- **B. Lid:** Secures the chopping bowl and motor unit.
- **C. Chopping Blade:** Stainless steel blade for cutting ingredients.
- **D. Chopping Bowl (0.5 L):** Transparent bowl for holding ingredients.



Image 3.1: Exploded view showing the motor unit, lid, chopping blade, and chopping bowl of the Nedis KAMC200CBK Food Chopper.

4. SETUP AND ASSEMBLY

Before first use, wash all removable parts (chopping bowl, lid, and blade) in warm soapy water, rinse thoroughly, and dry. The motor unit should only be wiped with a damp cloth.

Assembly Steps:

1. Place the chopping bowl (D) onto a stable, flat surface.
2. Carefully place the chopping blade (C) onto the central shaft inside the chopping bowl. Ensure it sits correctly.
3. Add your desired ingredients into the chopping bowl. Do not overfill; ensure ingredients are below the 'MAX' mark on the bowl.
4. Place the lid (B) onto the chopping bowl, aligning it properly.
5. Position the motor unit (A) on top of the lid, ensuring it locks securely into place.

6. Plug the power cord into a suitable electrical outlet.



Image 4.1: The Nedis KAMC200CBK Food Chopper fully assembled and ready for use, with ingredients visible in the bowl.

5. OPERATING INSTRUCTIONS

Once the chopper is assembled and plugged in, you can begin processing your ingredients.

Chopping Process:

1. Ensure the appliance is correctly assembled with ingredients inside the bowl and the motor unit securely placed on the lid.

2. Press down on the control button located on top of the motor unit to start chopping. The chopper offers two speed settings:
 - **Speed I:** For softer ingredients or coarser chopping.
 - **Speed II (Turbo Function):** For harder ingredients or finer chopping. Press the designated 'II' button for this function.
3. Process ingredients in short pulses for better control over the consistency. For continuous operation, hold the button down. Do not operate continuously for more than 30 seconds to prevent overheating. Allow the appliance to cool down for a few minutes between cycles.
4. Once the desired consistency is achieved, release the control button and unplug the appliance.
5. Carefully remove the motor unit, then the lid, and finally the chopping blade before emptying the bowl.



Image 5.1: A hand pressing the control button on the motor unit to operate the food chopper, processing ingredients.



Image 5.2: Top view of the motor unit, highlighting the two speed control buttons (I and II/Turbo function).

6. CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and hygienic operation of your food chopper.

Cleaning Steps:

1. Always unplug the appliance from the power outlet before cleaning.
2. Disassemble the chopper by removing the motor unit, then the lid, and carefully detaching the chopping blade from the bowl.
3. The chopping bowl, lid, and chopping blade are dishwasher safe. Alternatively, wash them in warm, soapy water, rinse thoroughly, and dry immediately.
4. Wipe the motor unit with a soft, damp cloth. Do not immerse the motor unit in water or any other liquid.
5. Ensure all parts are completely dry before reassembling or storing the appliance.
6. Store the chopper in a dry place, away from direct sunlight and out of reach of children.

7. TROUBLESHOOTING

If you encounter issues with your Nedis KAMC200CBK Food Chopper, refer to the following table for common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not start.	Not plugged in. Motor unit not correctly placed on lid. Lid not properly secured.	Ensure the power cord is securely plugged into an outlet. Re-position the motor unit until it clicks into place. Ensure the lid is correctly aligned and locked onto the bowl.
Ingredients are not chopping evenly or blades are stuck.	Too many ingredients. Ingredients are too large. Blades are dull.	Reduce the amount of ingredients. Process in smaller batches. Cut ingredients into smaller pieces before placing them in the bowl. If blades are dull, contact customer support for replacement options.
Motor unit smells or overheats.	Continuous operation for too long. Overloading the motor.	Do not operate continuously for more than 30 seconds. Allow the appliance to cool down for several minutes between uses. Reduce the load of ingredients.

8. TECHNICAL SPECIFICATIONS

Detailed specifications for the Nedis KAMC200CBK Food Chopper:

Feature	Specification
Model Number	KAMC200CBK
Power	260 W
Capacity	0.5 L (500 ml)
Material	Plastic (bowl), Stainless Steel (blades)
Number of Speeds	2 (with Turbo function)
Color	Black
Dimensions (L x W x H)	13.5 x 13.5 x 24 cm
Weight	900 g
Care Instructions	Dishwasher-safe removable parts

9. WARRANTY INFORMATION

For detailed warranty information regarding your Nedis KAMC200CBK Food Chopper, please refer to the warranty card included with your purchase or consult the retailer where the product was bought. Keep your proof of purchase for any warranty claims.

10. CUSTOMER SUPPORT

Should you have any questions, require technical assistance, or need to report a problem with your Nedis KAMC200CBK Food Chopper, please contact your retailer or visit the official Nedis website for support resources and contact information.